



Samsung Galaxy Note Edge Display Assembly Replacement

How to disassembly Samsung Galaxy Note Edge (N915) to replace the cracked Screen

Written By: ZFix



INTRODUCTION

How to change the Samsung GalaxyNote Edge / N915 screen assembly

_____Video manual_____

[video: <https://www.youtube.com/watch?v=RHtSmcY46H0>]



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)



PARTS:

- [Samsung Galaxy Note Edge Display Assembly](#) (1)

Step 1 — Remove the Galaxy Note Edge Battery





- Switch off the device.
- Remove the back cover and the battery.

Step 2 — Remove the Galaxy Note Edge Rear Housing




- Remove the Memory card, the SIM card and the S Pen.
- Remove the screws by using Screwdriver Phillips #00
- With a plastic opening tool remove the Back Frame.

Step 3 — Remove the Galaxy Note Edge Motherboard 1

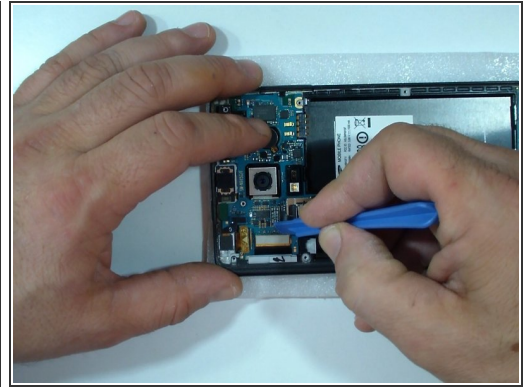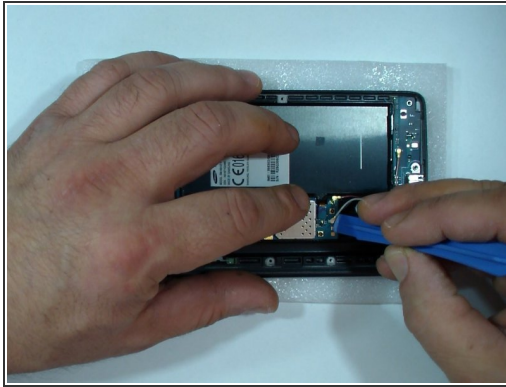

- Disconnect one by one:
 - Coaxial antenna cable (x2)
 - Home Button flex cable
 - Display Flex cable
 - Stylus Sensor flex cable
 - Front Camera flex cable

Step 4 — Remove the Galaxy Note Edge Motherboard 2

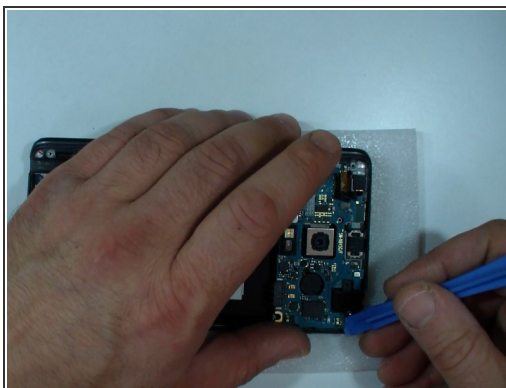

- Pry up the connector on the back of the board to release the bottom part of motherboard.
- Gently remove the logic board.

Step 5 — Test the new spare part





- I prefer to test the new spare part before install it.
 - Transfer the Power button / Loud speaker flex cable.
 - Install the mother board.
 - Test the display.
- ⚠ To prevent damage to the put back the back frame before the test.

Step 6 — Check the Thermal Pads




- Check the quality of the thermal pads (if the spare part is not original).
- If its necessary use the thermal pads from the old assembly.

Step 7 — Transfer all the parts from the old Display assembly - Part 1

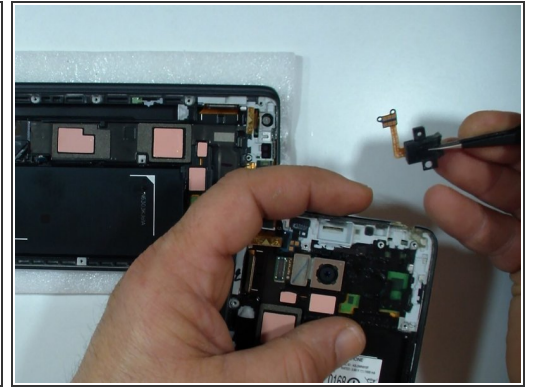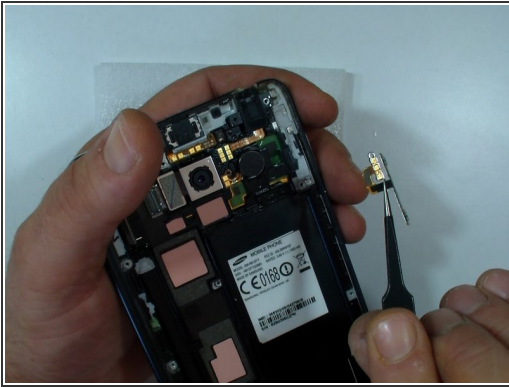


- Insert wisdom here.

Step 8 — Remove the Galaxy Note Edge Charging Port Flex Assembly.

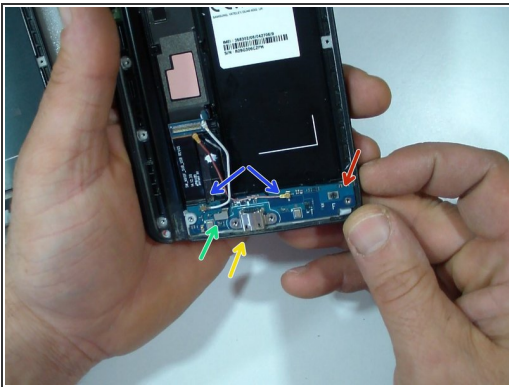

- Remove the black Phillips screw,
- the the charging port plate,
- disconnect the Home buttons flex cable
- and the coaxial antenna cable (x2).
- Use hot air and a plastic opening tool to remove the Charging Port flex assembly.

Step 9 — Reassembling

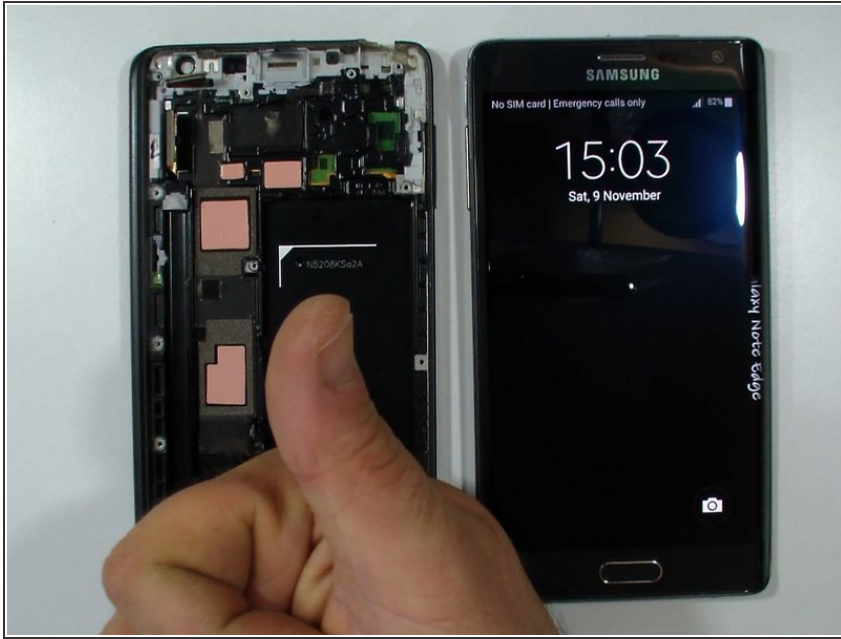

- To reassemble your device, follow these instructions in reverse order.

To reassemble your device, follow these instructions in reverse order.