


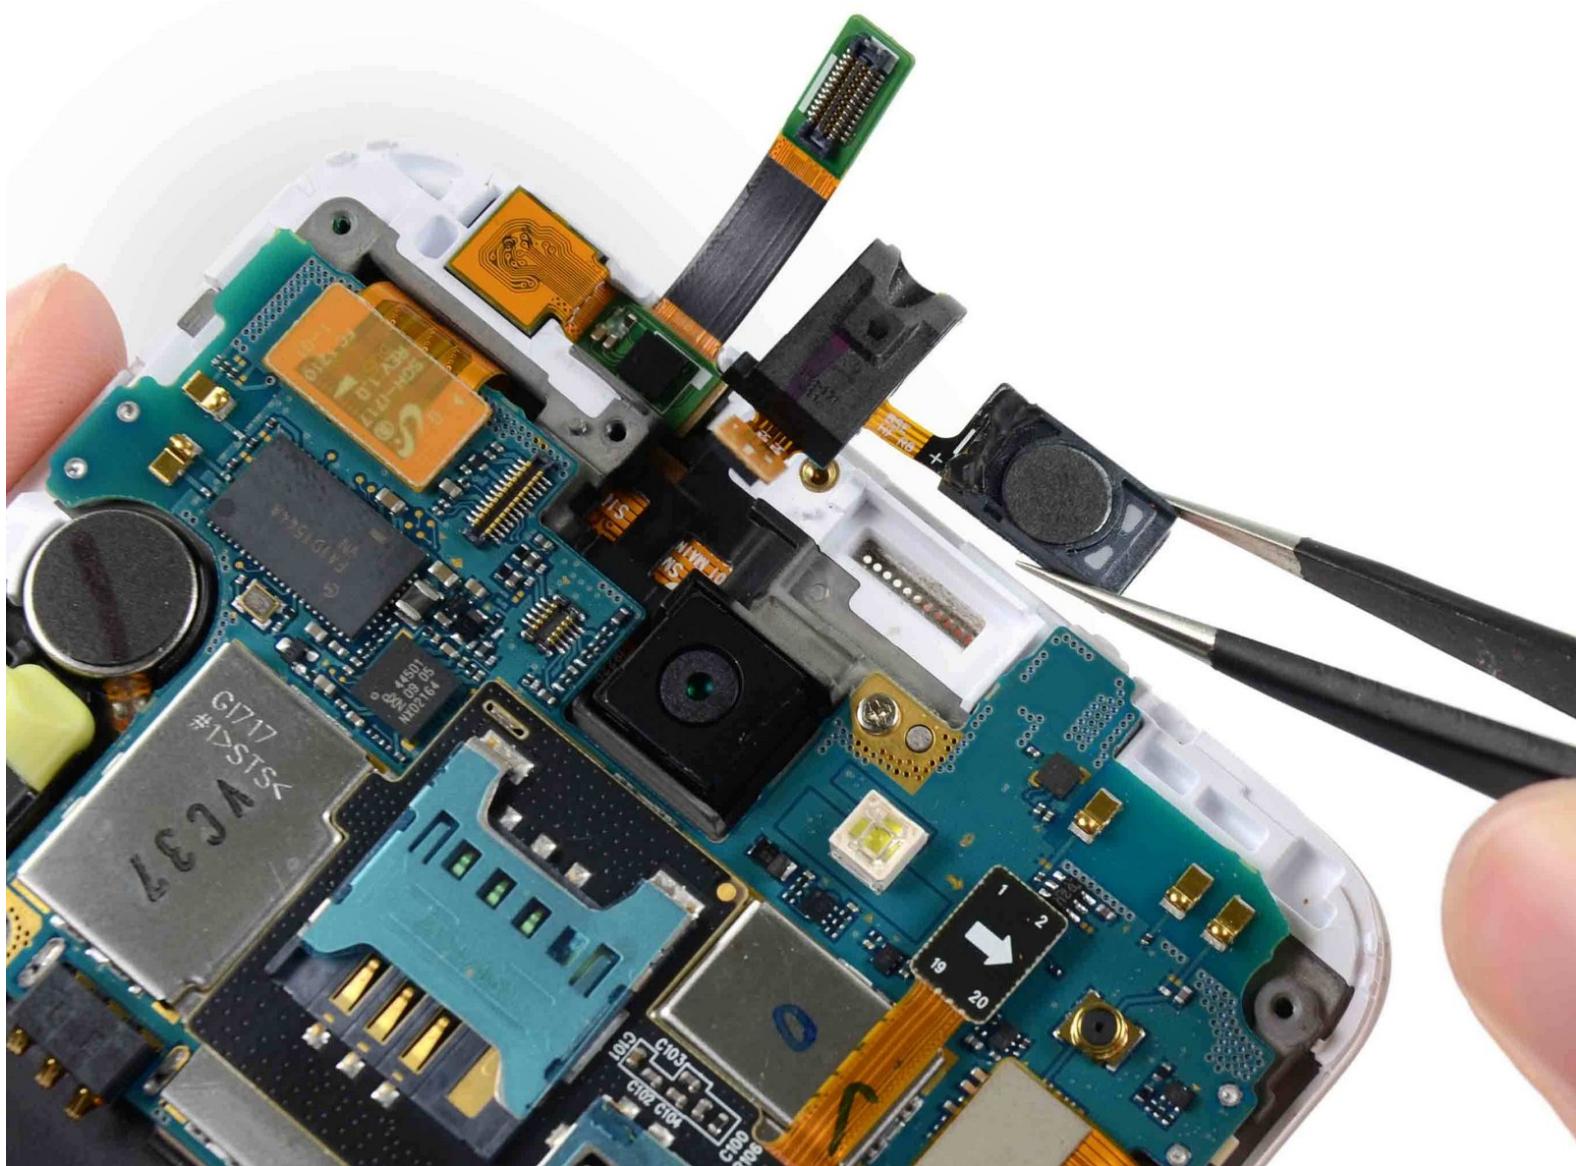

# Samsung Galaxy Note Headphone Jack/Earpiece Speaker Assembly Replacement

Replace the Headphone Jack/Earpiece Speaker assembly in your Samsung Galaxy Note.

Written By: Sam Goldheart



## INTRODUCTION

Use this guide to replace the headphone jack and earpiece speaker assembly of your Samsung Galaxy Note.

### **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Stylus




- Grasp the cap of the stylus and remove it from its slot in the midframe.

## Step 2 — Rear Case




- Pry with a plastic opening tool, or your fingernail, in the divot to the right of the rear-facing camera, near the volume rocker.

## Step 3

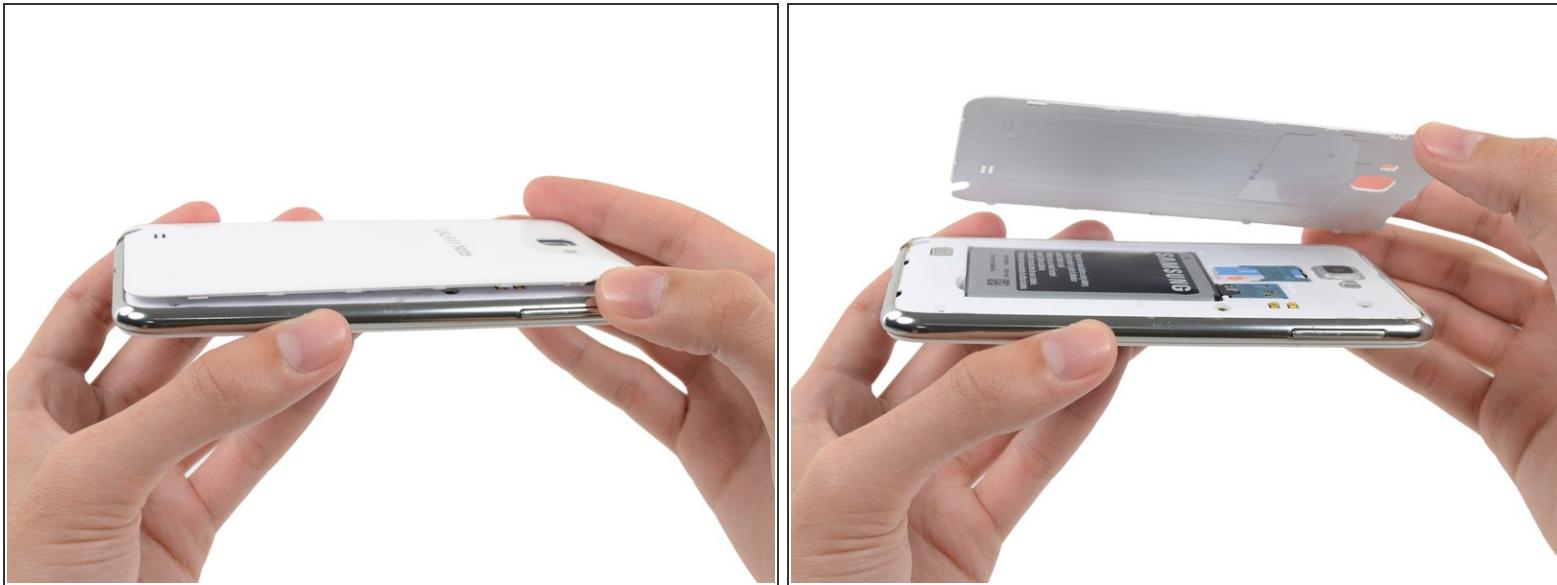

- Lift and remove the rear case from the phone.

## Step 4 — Battery

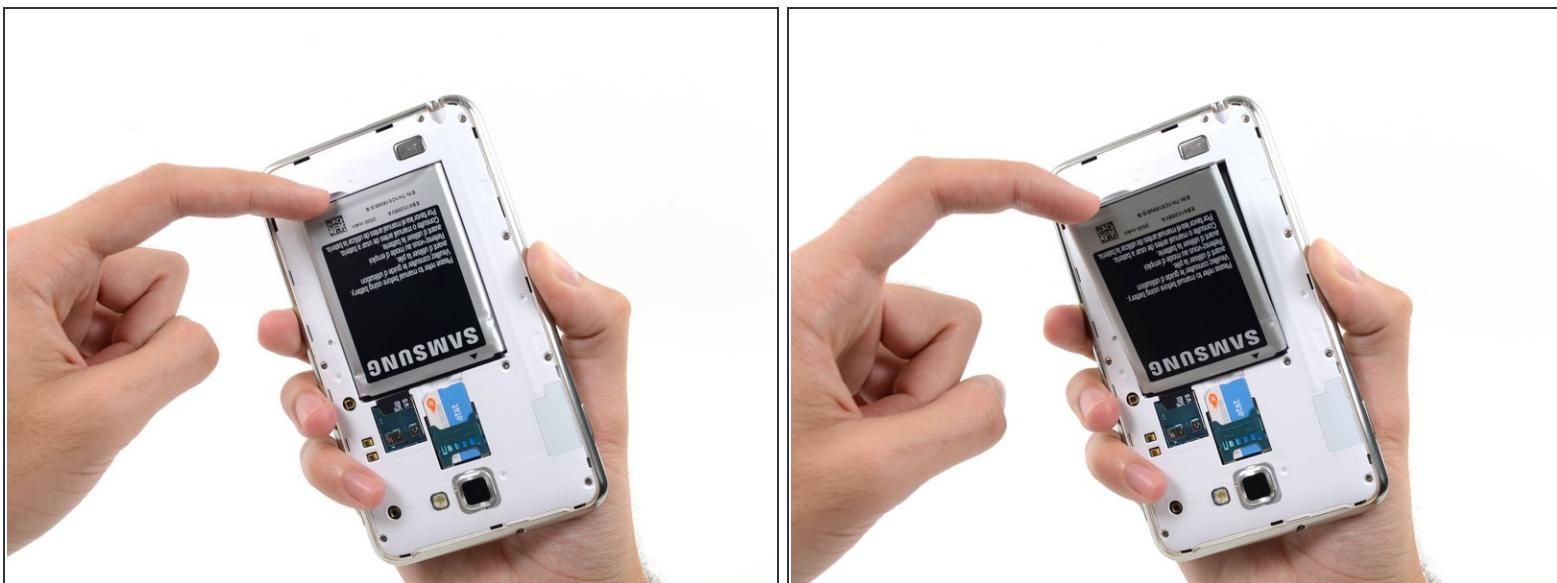

- Insert your finger in the notch of the battery compartment.
- Press the battery toward the rear facing camera while pulling outward.

## Step 5 — MicroSD Card



- Use the flat end of a spudger, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
- After the click, release the card and it will pop out of its slot.

 For reassembly, push the microSD card into the slot until it clicks in place.

## Step 6




- Remove the microSD card from its slot in the midframe.

## Step 7 — SIM Card



- Use a plastic opening tool, or your fingernail, to push the SIM card out of its compartment.

## Step 8

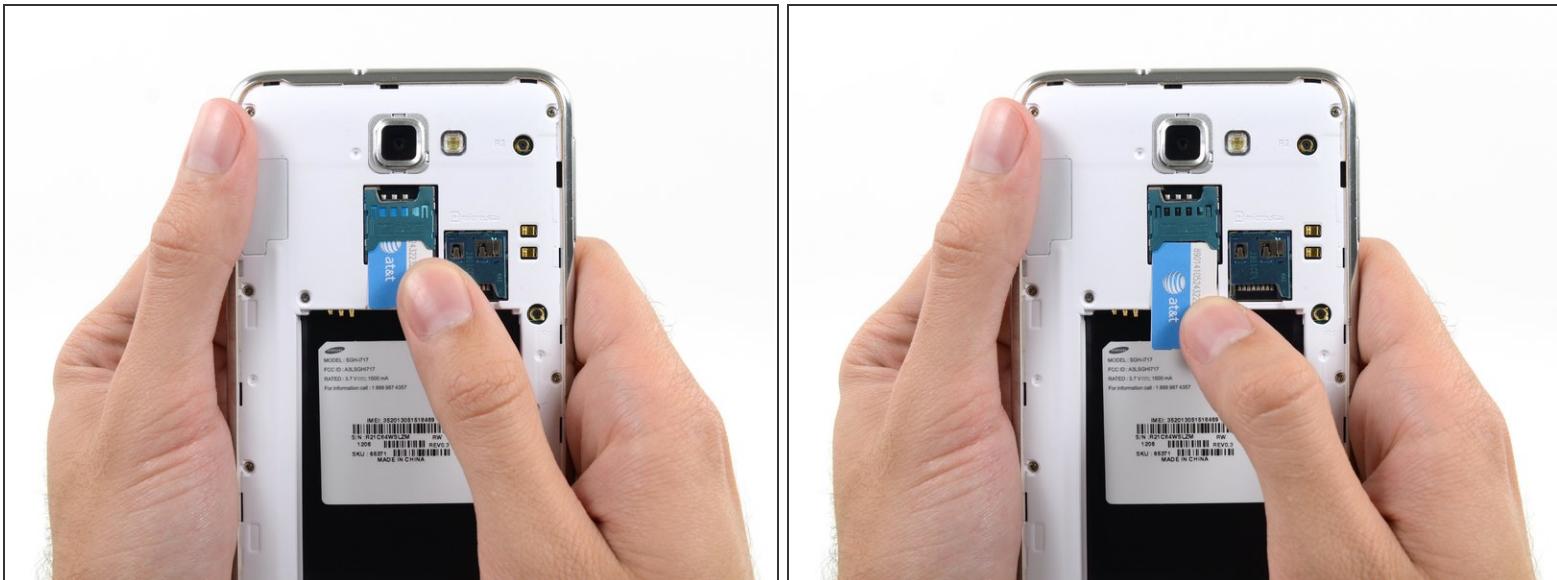

- Slide the SIM card out the rest of the way with your thumb and remove it from the device.

## Step 9 — Midframe



- Remove the nine 3.4 mm Phillips #00 screws securing the midframe to the display assembly.

## Step 10



- Insert your plastic opening tool to the left of the power button between the midframe and the front panel assembly and pry.

## Step 11




- Slide the plastic opening tool down the seam.

## Step 12




- Insert your plastic opening tool to the left of the headphone jack between the midframe and the display assembly.
- Slide the opening tool along the top edge of the phone.
- Continue to run the plastic opening tool around the perimeter of the phone until the midframe is separated.

## Step 13

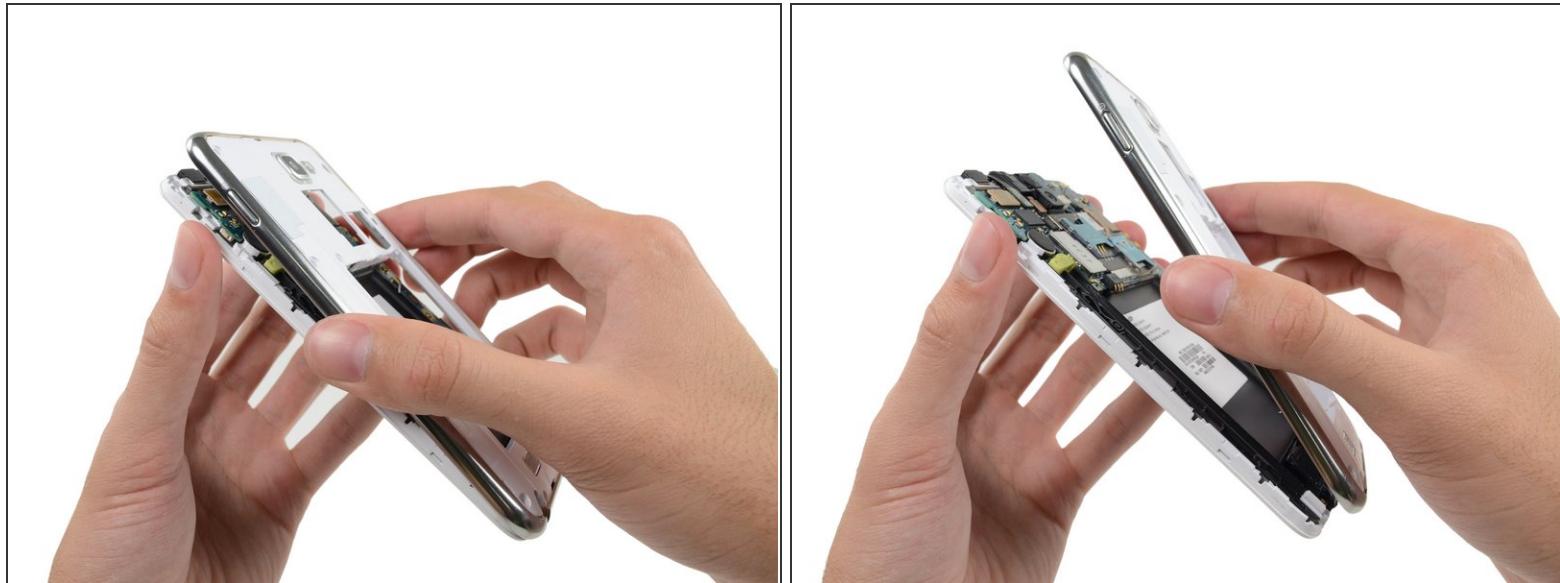


- Remove the midframe from the display assembly.

## Step 14 — Upper Display Assembly Bracket

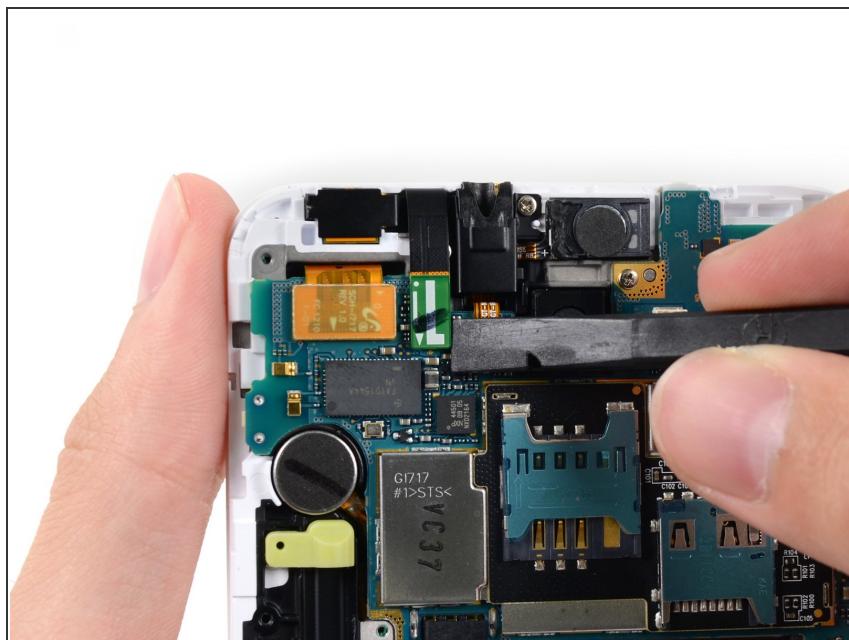



- Use the flat end of a spudger to disconnect the headphone jack/earpiece speaker assembly cable connector.

## Step 15

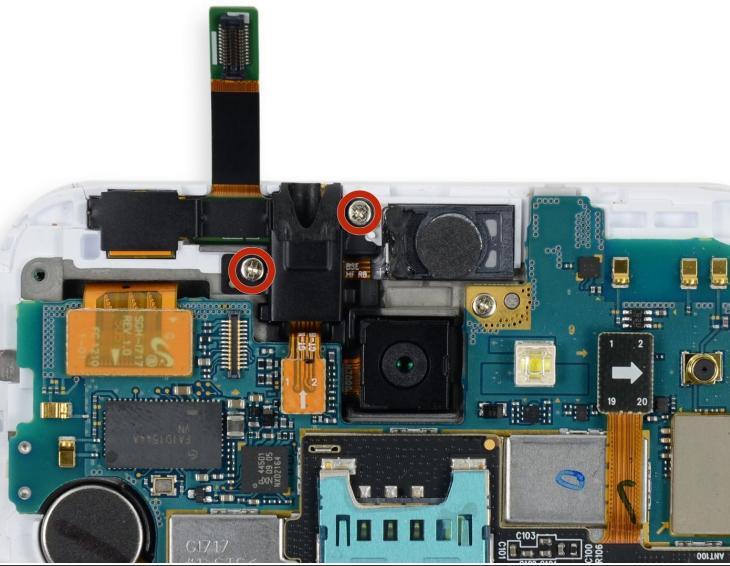


- Remove the two 3 mm Phillips #00 screws securing the upper display assembly bracket.

## Step 16

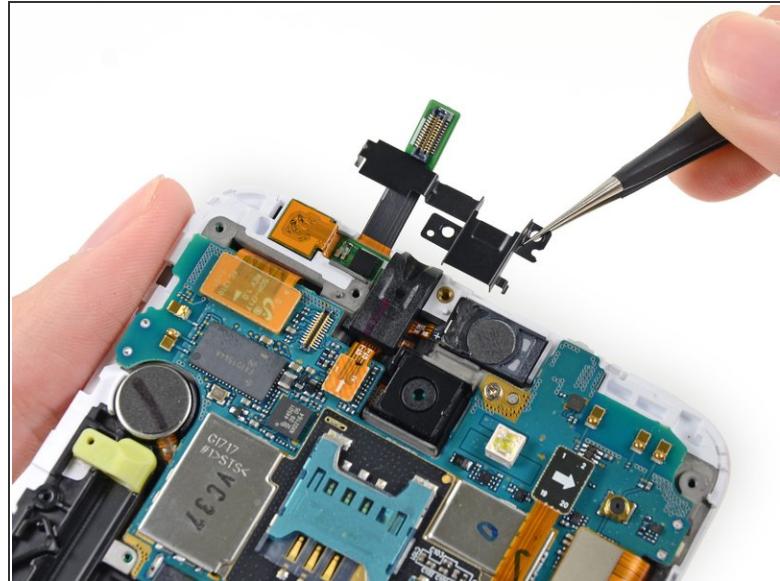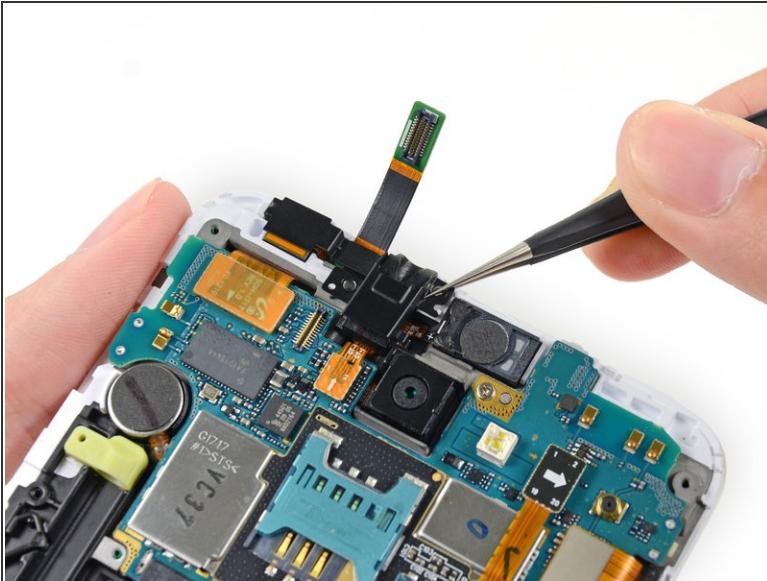



- Use a pair of tweezers, or your fingers, to remove the upper display assembly bracket.

## Step 17 — Headphone Jack/Earpiece Speaker Assembly

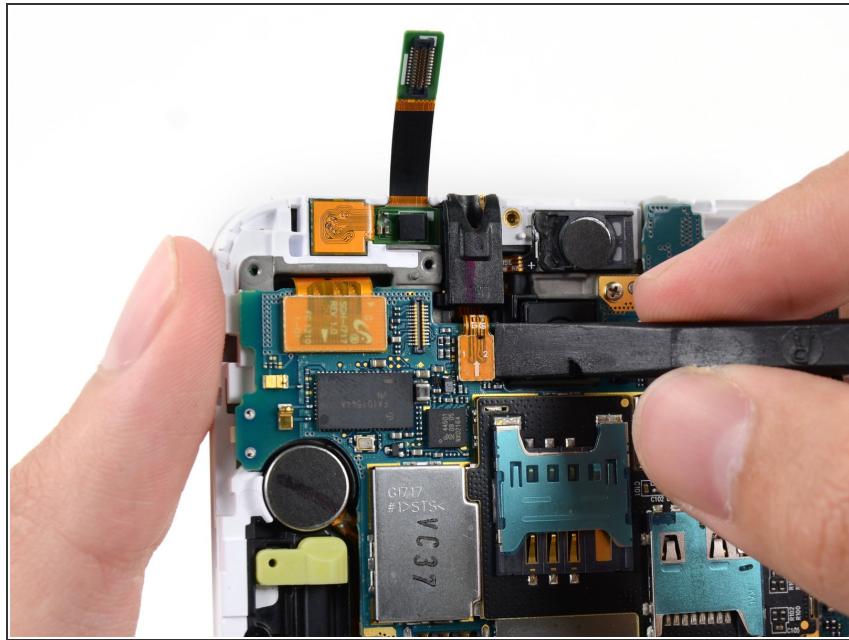


- Use the flat end of a spudger to disconnect the headphone jack/earpiece speaker assembly connector.

## Step 18

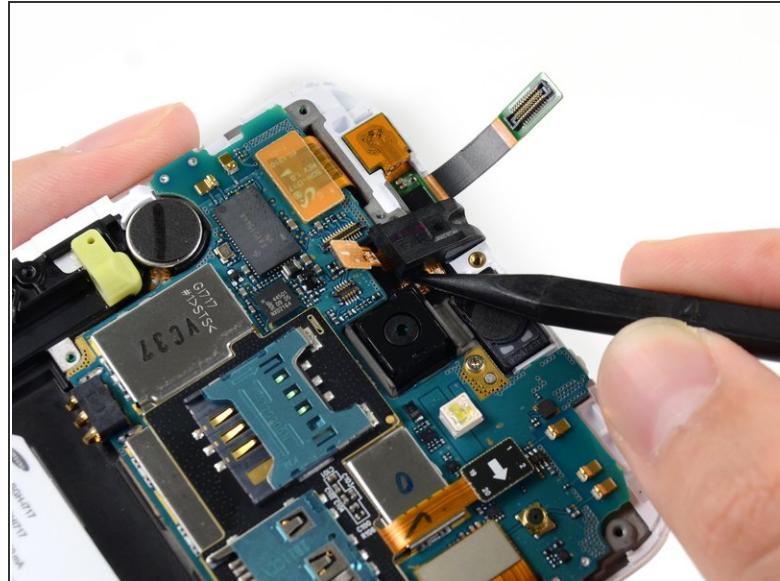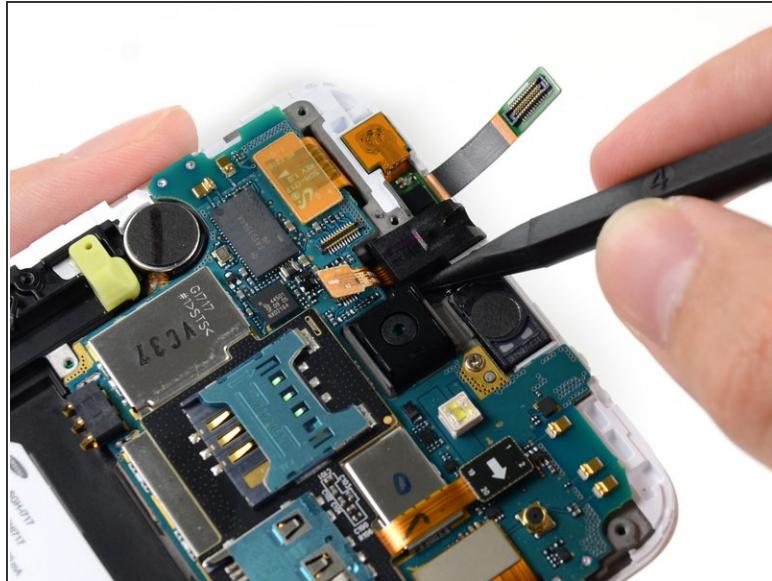

- Use the point of a spudger to pry the headphone jack out of its recess in the display assembly.

## Step 19

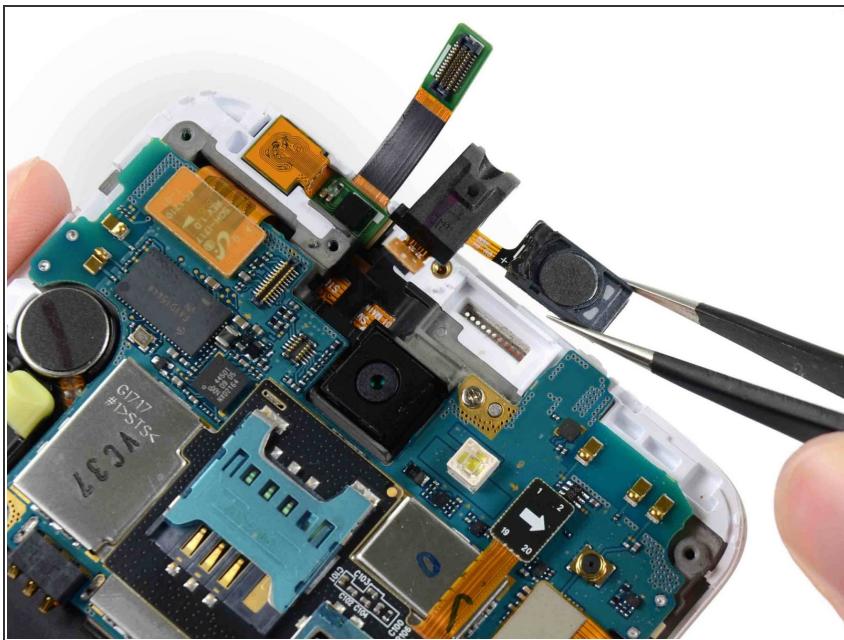

- Use a pair of tweezers, or your fingers, to remove the headphone jack/earpiece speaker assembly from the display assembly.

To reassemble your device, follow these instructions in reverse order.