



# Samsung Galaxy Note Speaker Enclosure Replacement

Replace the speaker assembly in your Samsung Galaxy Note.

Written By: Sam Goldheart



## INTRODUCTION

Use this guide to replace your Samsung galaxy Note's speaker.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Stylus




- Grasp the cap of the stylus and remove it from its slot in the midframe.

## Step 2 — Rear Case




- Pry with a plastic opening tool, or your fingernail, in the divot to the right of the rear-facing camera, near the volume rocker.

## Step 3

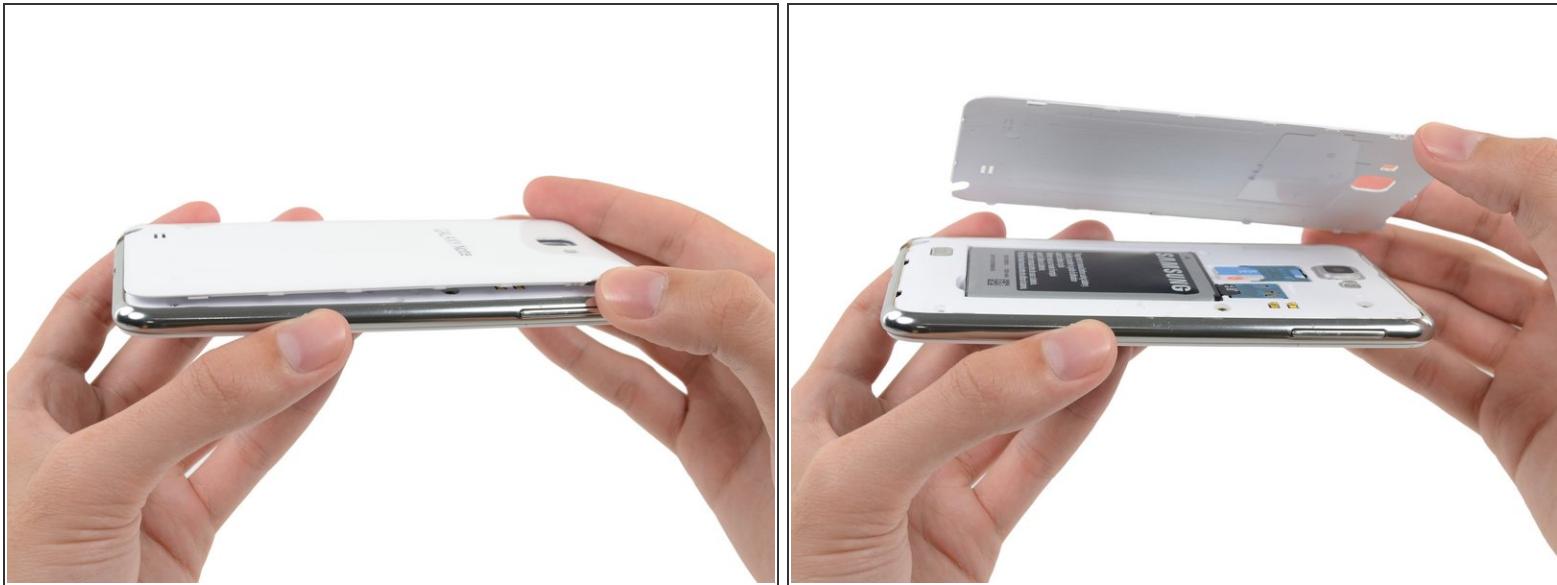

- Lift and remove the rear case from the phone.

## Step 4 — Battery

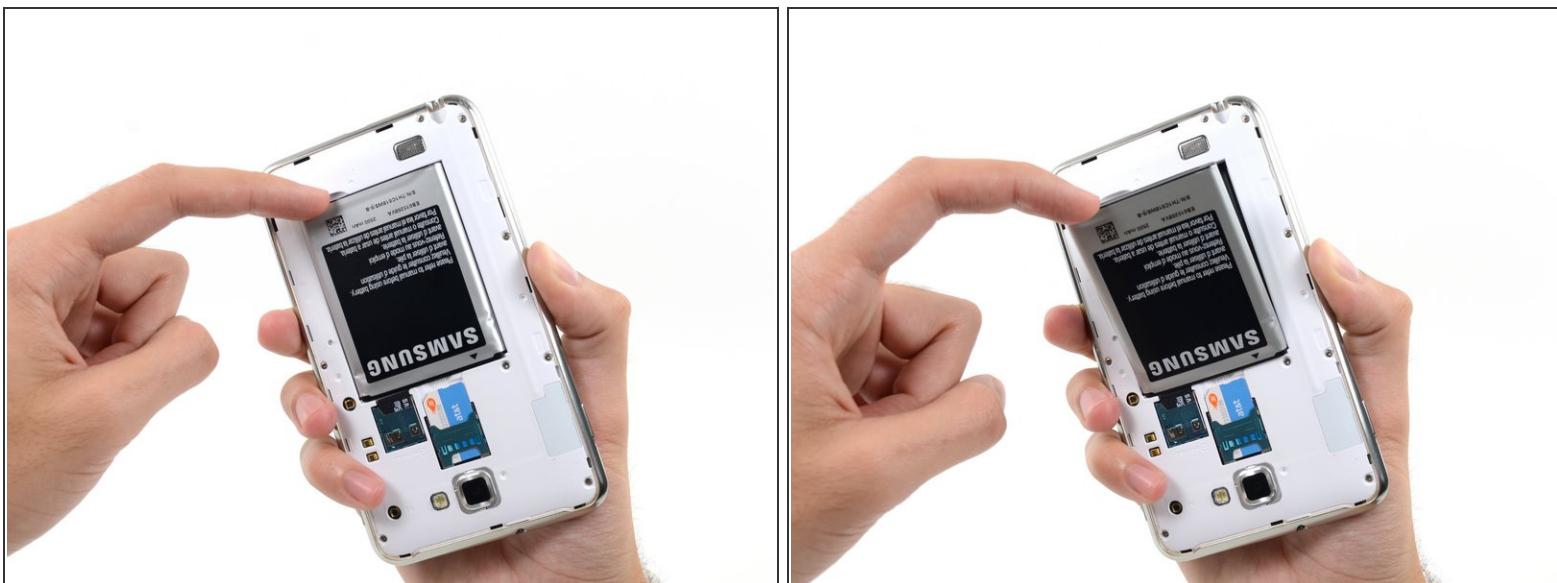

- Insert your finger in the notch of the battery compartment.
- Press the battery toward the rear facing camera while pulling outward.


## Step 5 — MicroSD Card



- Use the flat end of a spudger, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
- After the click, release the card and it will pop out of its slot.


 For reassembly, push the microSD card into the slot until it clicks in place.

## Step 6

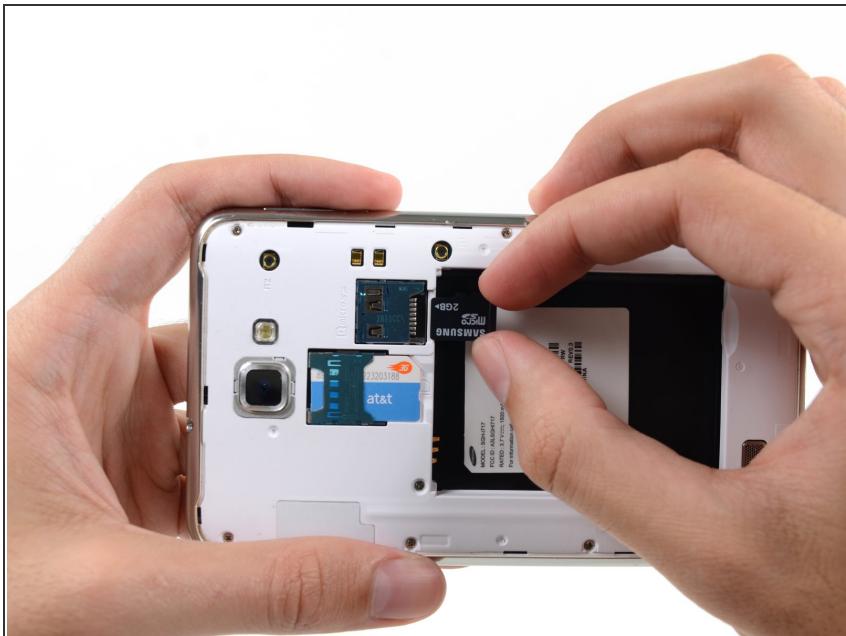


- Remove the microSD card from its slot in the midframe.

## Step 7 — SIM Card

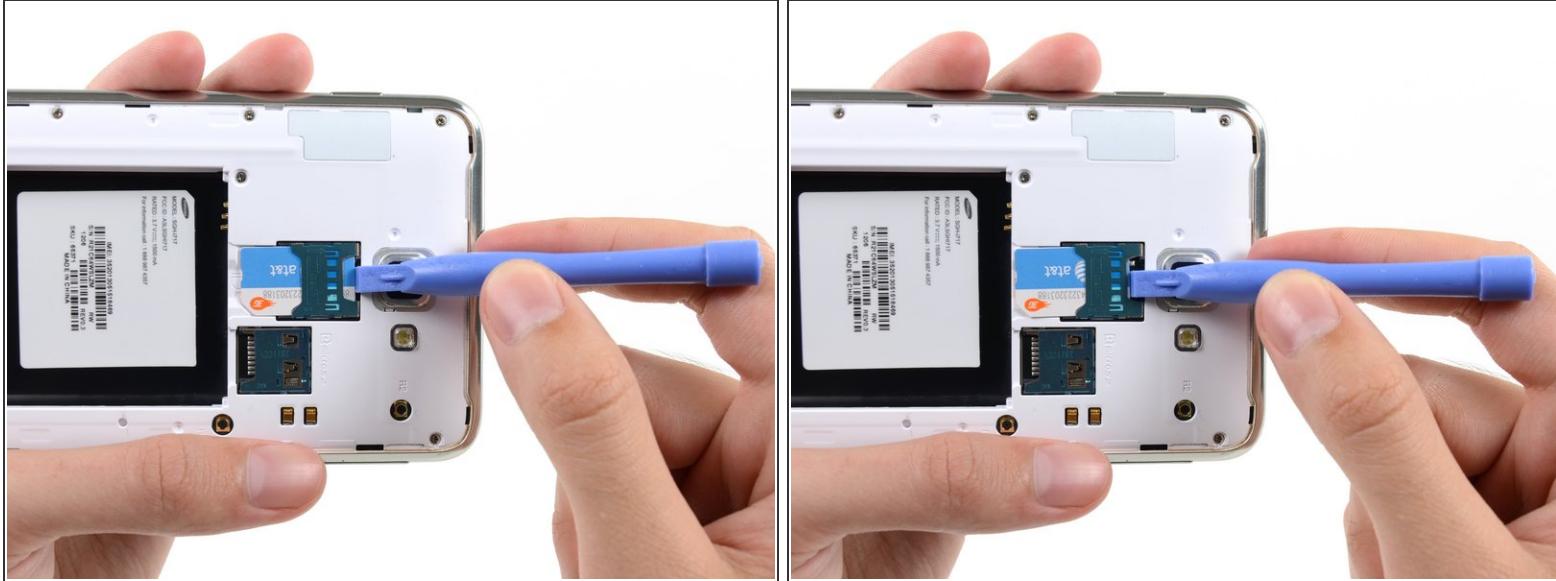

- Use a plastic opening tool, or your fingernail, to push the SIM card out of its compartment.

## Step 8

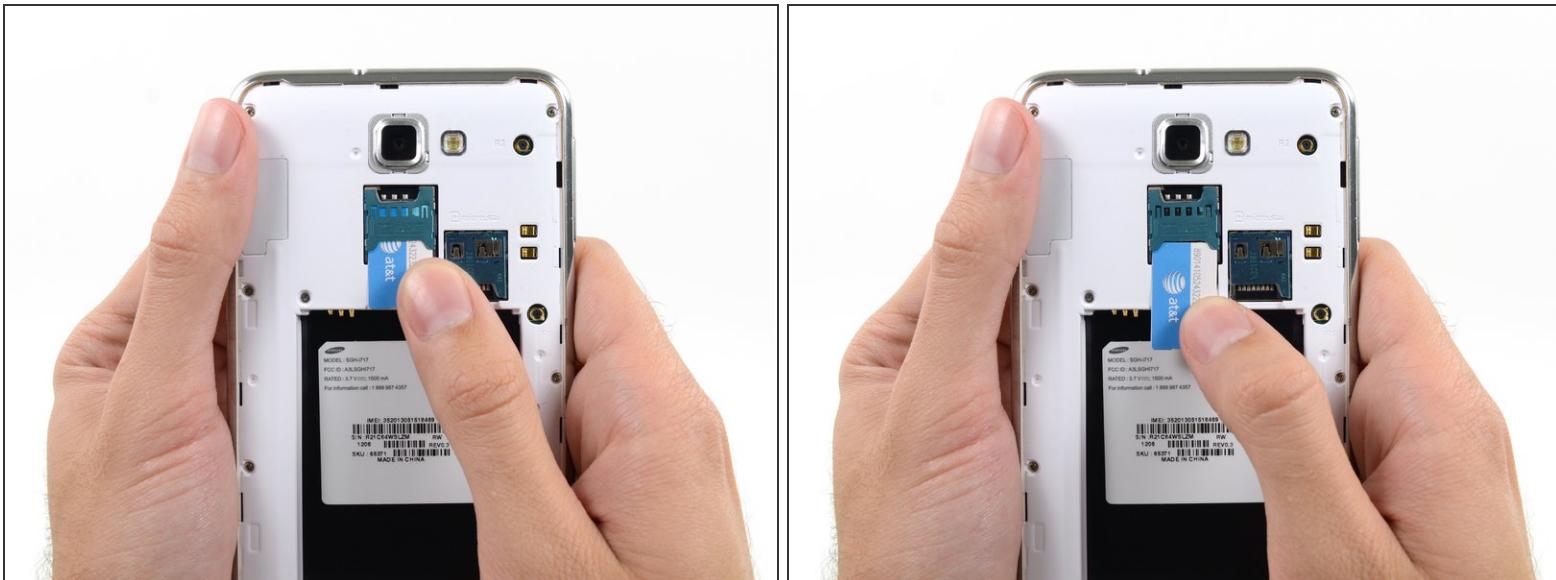

- Slide the SIM card out the rest of the way with your thumb and remove it from the device.

## Step 9 — Midframe



- Remove the nine 3.4 mm Phillips #00 screws securing the midframe to the display assembly.

## Step 10



- Insert your plastic opening tool to the left of the power button between the midframe and the front panel assembly and pry.

## Step 11



- Slide the plastic opening tool down the seam.

## Step 12



- Insert your plastic opening tool to the left of the headphone jack between the midframe and the display assembly.
- Slide the opening tool along the top edge of the phone.
- Continue to run the plastic opening tool around the perimeter of the phone until the midframe is separated.

## Step 13



- Remove the midframe from the display assembly.

## Step 14 — Speaker Enclosure



- Remove the three 3 mm Phillips #00 screws securing the speaker enclosure to the front panel assembly.

## Step 15



- Remove the speaker enclosure from the display assembly.

To reassemble your device, follow these instructions in reverse order.