




Samsung Galaxy Note Upper Display Assembly Bracket Replacement

Prereq to remove the Upper Display Assembly Bracket.

Written By: Sam Goldheart

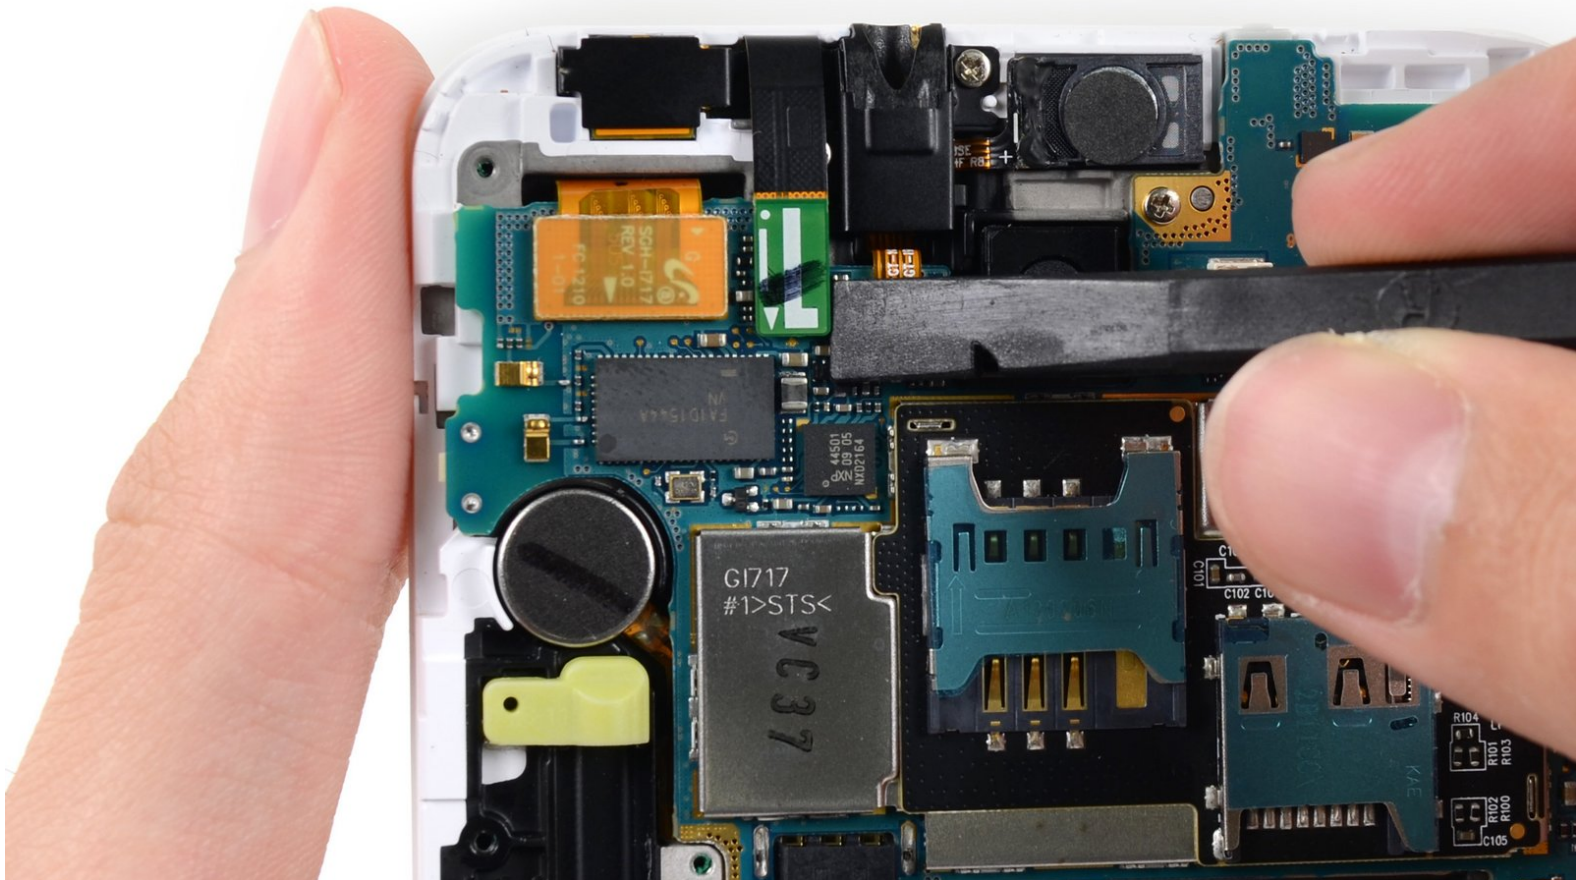

INTRODUCTION


Prereq to remove the Upper Display Assembly Bracket.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Upper Display Assembly Bracket

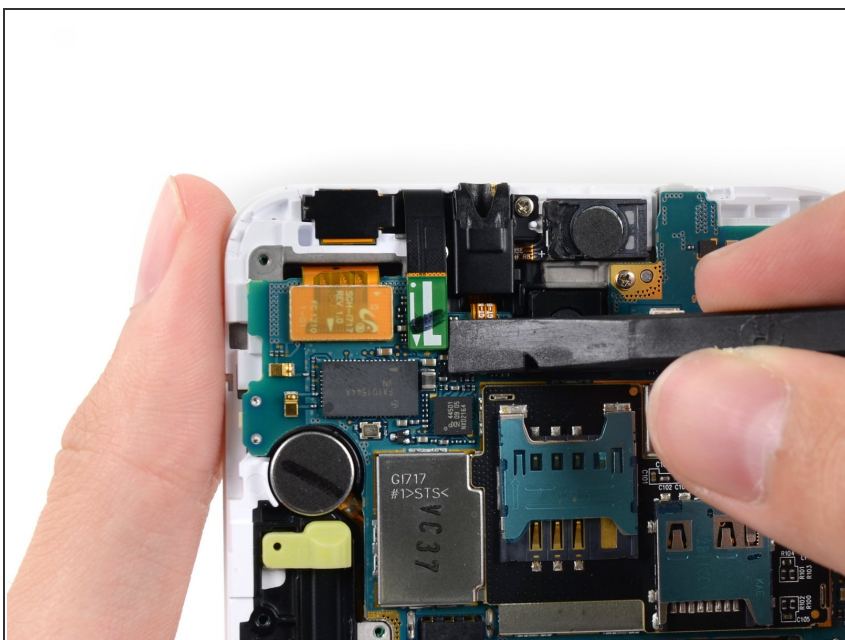


- Use the flat end of a spudger to disconnect the headphone jack/earpiece speaker assembly cable connector.

Step 2

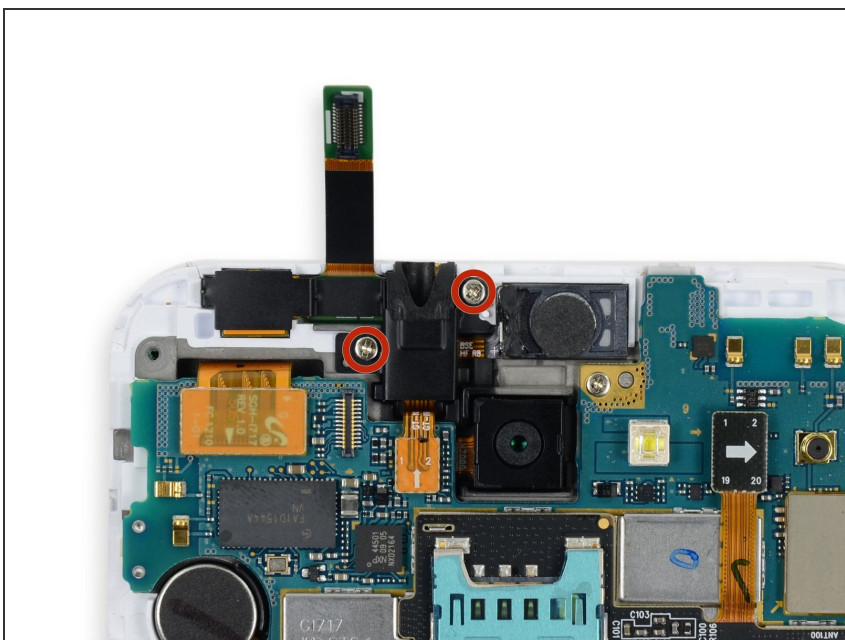

- Remove the two 3 mm Phillips #00 screws securing the upper display assembly bracket.

Step 3

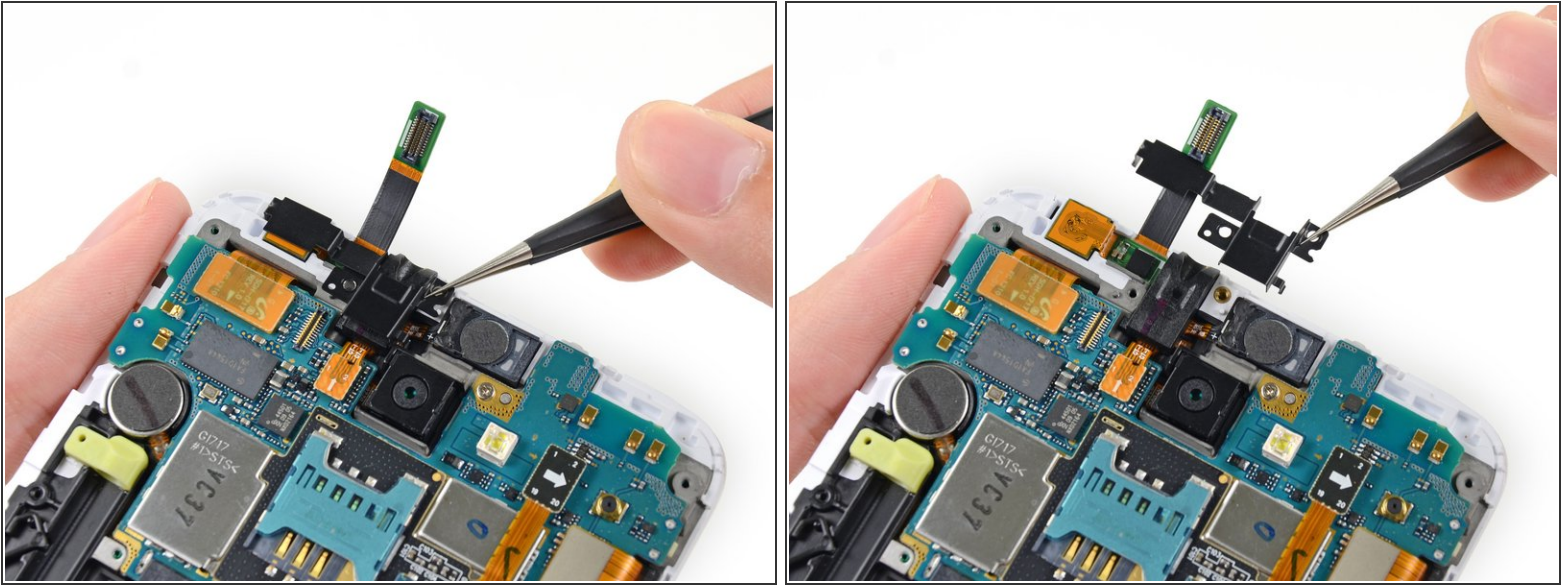

- Use a pair of tweezers, or your fingers, to remove the upper display assembly bracket.

To reassemble your device, follow these instructions in reverse order.