



Samsung Galaxy Note5 LCD screen & USB board & Home button Replacement

Samsung Galaxy Note 5 LCD screen replacement, USB board replacement and Home button flex replacement

Written By: Sophia



INTRODUCTION

Samsung Galaxy Note 5 LCD screen replacement, USB board replacement and Home button flex replacement share the most same and complicated steps, so bring them together.

[video: https://www.youtube.com/watch?v=uqkv86aK__k]

TOOLS:

- Heat Gun (1)
- iFixit Opening Picks set of 6 (1)
- Suction Handle (1)
- Phillips #000 Screwdriver (1)
- Spudger (1)

PARTS:


- Galaxy Note5 Screen (1)
- Galaxy Note5 Charging Assembly (Verizon) (1)
- Galaxy Note5 Charging Assembly (AT&T) (1)
- Galaxy Note5 Home Button Assembly (1)
- Samsung Galaxy Note 5 LCD screen (1)
- Samsung Galaxy Note 5 USB board (1)
- NuGlas Tempered Glass Screen Protector for Galaxy Note5 (1)

Step 1 — LCD screen & USB board & Home button



- Remove SIM card tray and S pen.

Step 2

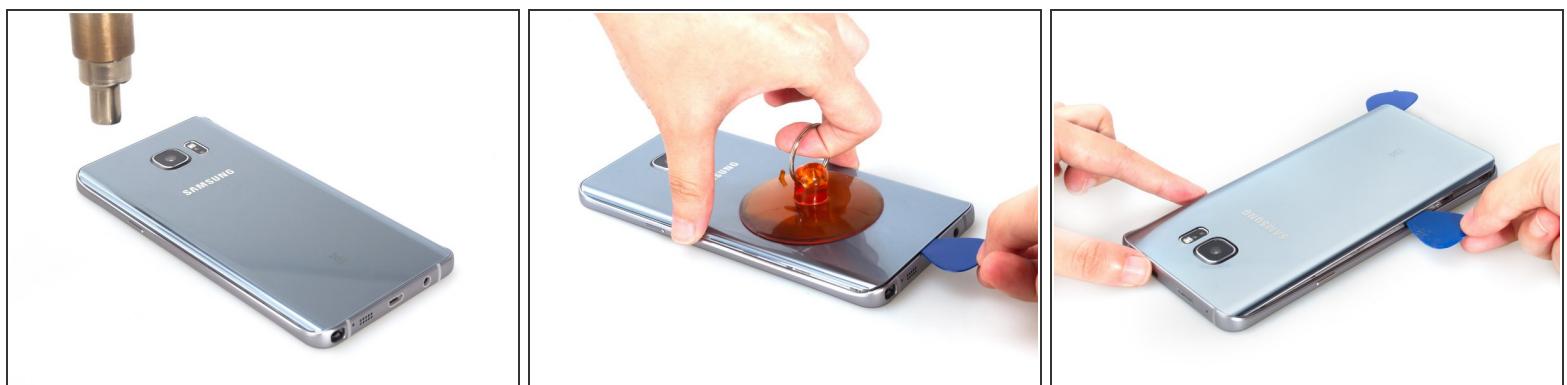

- Remove back cover.

Step 3



- Remove middle housing.

Step 4




- Remove battery.

Step 5




- Release connectors on the motherboard.

Step 6

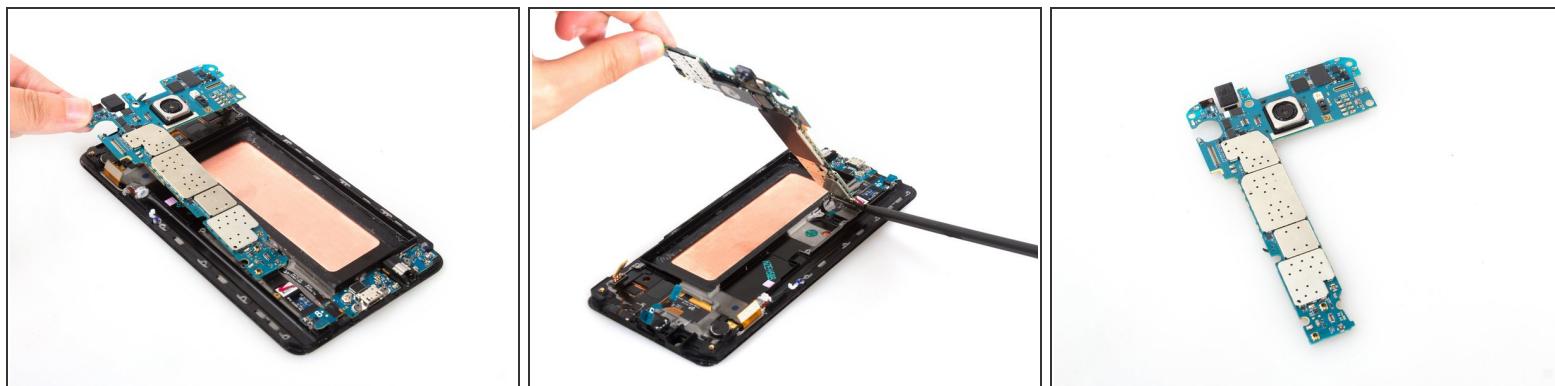

- Release USB board connector on the back and remove the motherboard.

Step 7

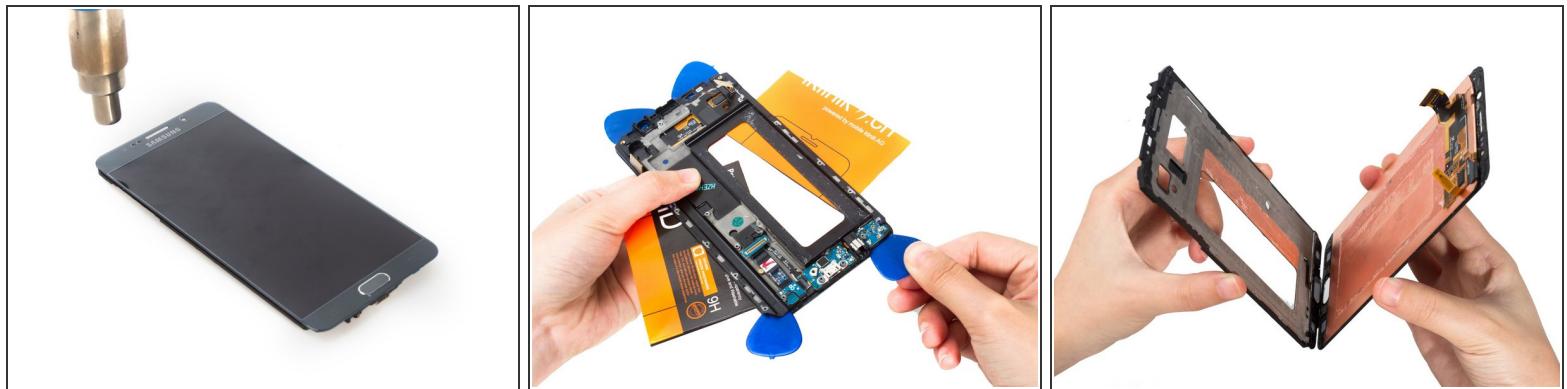

- Remove LCD screen. It's really difficult, see more details on [Samsung Galaxy Note 5 teardown](#).

Step 8



- Remove USB board. If you replace USB board only, please be careful with the LCD screen very much. Once a defect, the screen will be cracked or broken.

Step 9



- Push the button out from slot as the direction of mark. And then release the adhesive and remove button flex.
- The same tips: Be careful with the LCD screen!

To reassemble your device, follow these instructions in reverse order.