



# Samsung Galaxy Note5 Middle Housing Replacement

Written By: Sophia



# INTRODUCTION

For the official iFixit guide, [follow this link](#). This guide has been archived for historical purposes.

[video: <https://www.youtube.com/watch?v=Q5V-JJPt6Ng>]



## TOOLS:

- [Heat Gun](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Suction Handle](#) (1)
- [Phillips #000 Screwdriver](#) (1)



## PARTS:

- [Galaxy Note5 SIM Card Tray](#) (1)
- [Galaxy Note 5 Speaker](#) (1)
- [Galaxy Note5 Rear Camera Bezel Lens Cover](#) (1)

## Step 1 — Middle Housing




- Remove SIM card tray.

## Step 2



- Remove S Pen.

## Step 3

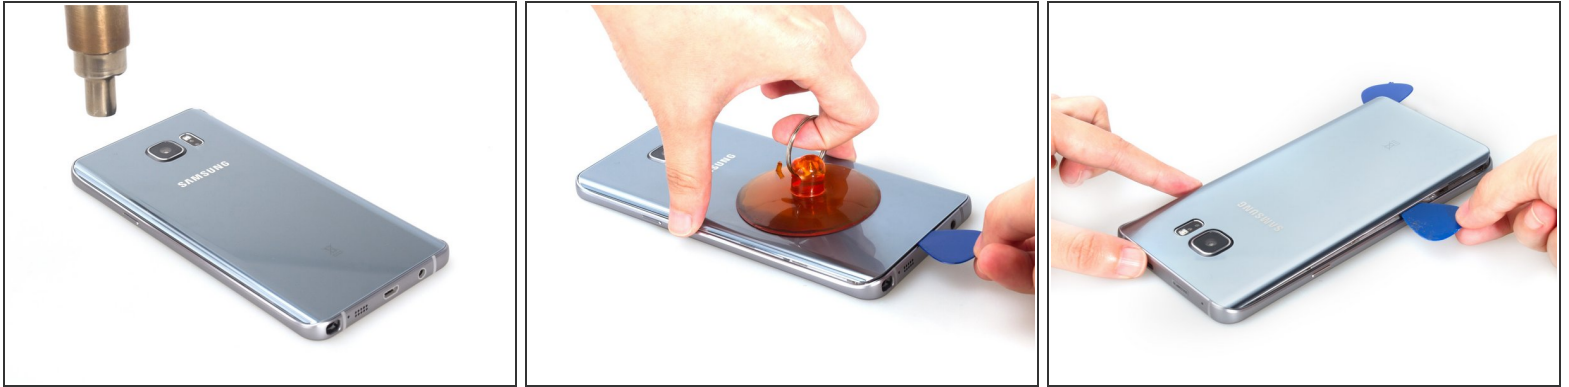

- Remove back cover.

## Step 4



- Remove screws.

## Step 5



- Push to separate the middle housing from front assembly. There is a little adhesive around every corner. The middle housing comes with power button flex, volume button flex, loudspeaker and wireless charging film.

To reassemble your device, follow these instructions in reverse order.