




Samsung Galaxy Player 4.2 Battery Casing Replacement

How to remove and replace the battery casing on your Samsung Galaxy Player 4.2.

Written By: Brittany McCrigler

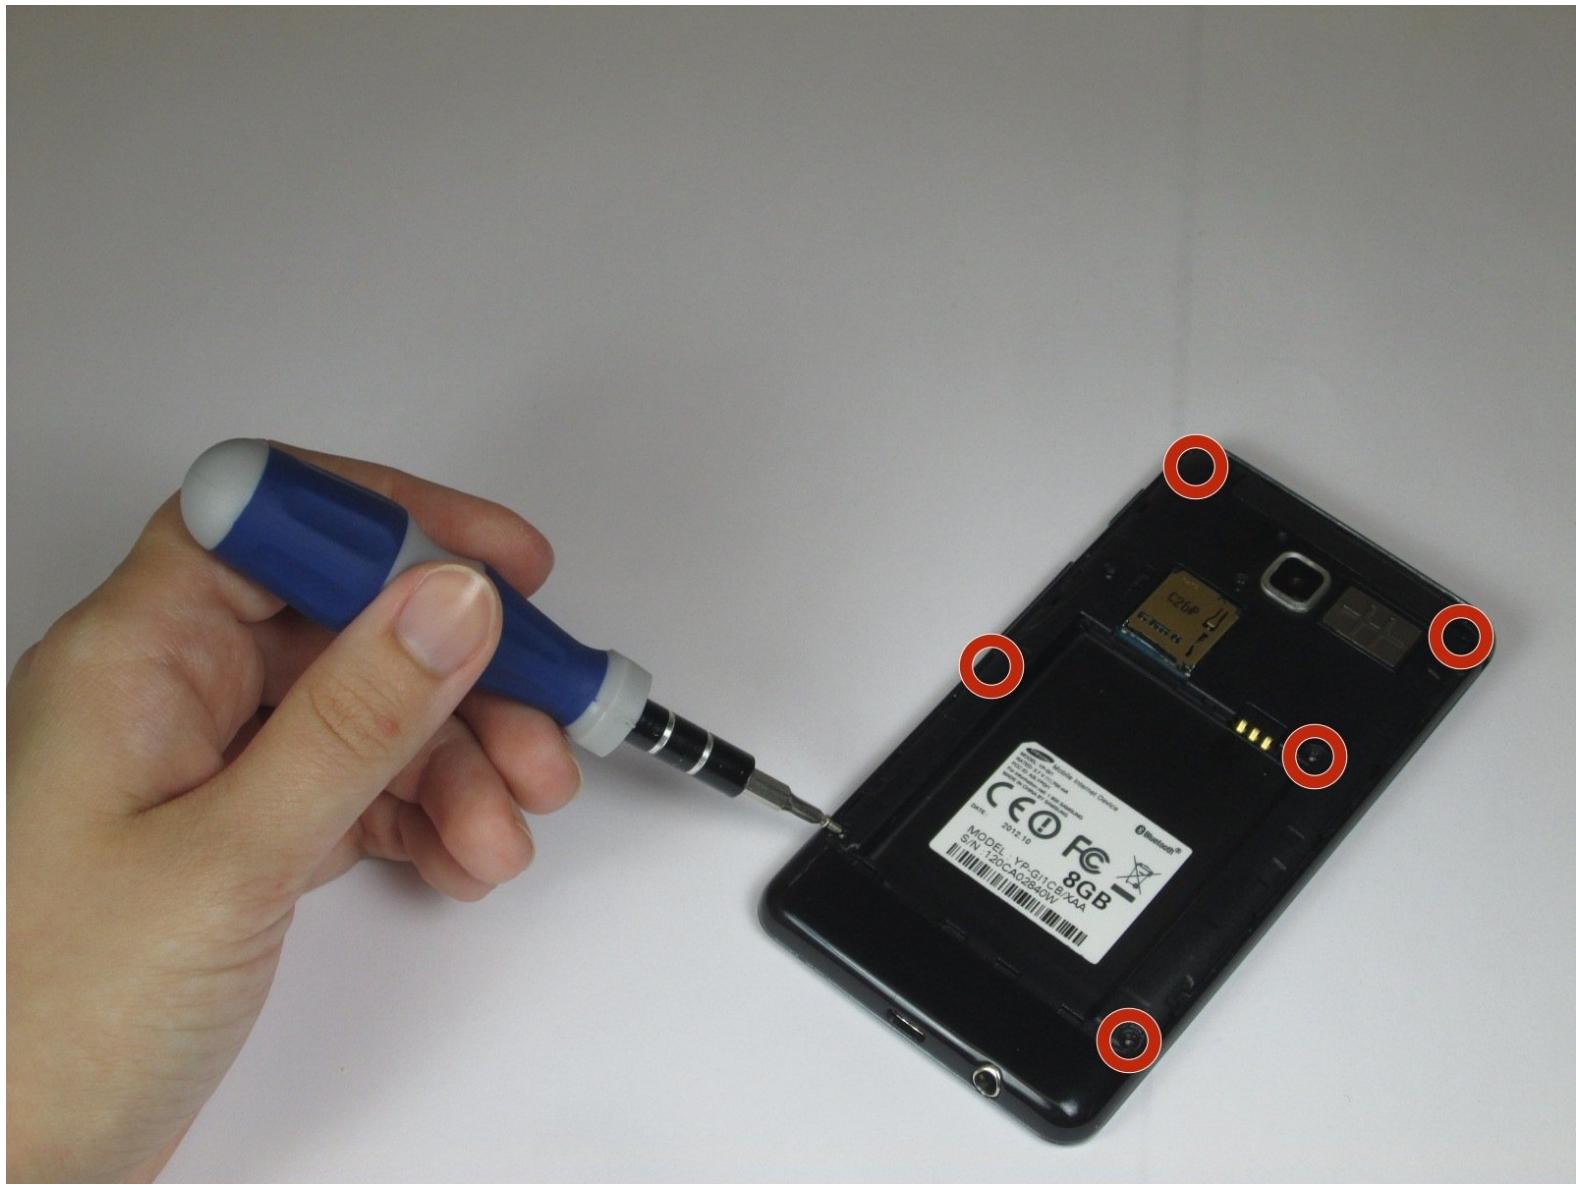

INTRODUCTION

If you want or need access to the inner parts of your device, you'll need to start by removing the battery casing. Removing the battery casing requires patience because it sits firmly in place. Take your time and carefully work the casing off by prying around the edge.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery



- Use your finger to press in the battery cover tab on the upper right hand corner of the back of the device.
- Pry the battery cover off the device by pressing in and lifting up.

★ When reassembling, align the top portion of the back cover to the top of the device and press down until it clicks into place.

Step 2



- Press your finger into the groove on the bottom left hand side of the battery.
- Pry the battery out by lifting your finger up.

Step 3 — Battery Casing



- Remove the six 2.0mm Phillips #0 screws from the battery casing.

Step 4



- Starting at the top, insert the plastic opening tool at the seam between the battery casing and the main body of the device.
- Pry up, working around the seam from top to bottom.

(i) The battery casing fits snuggly against the main body of the device. You may need to apply some moderate force to free it.

(i) The volume button may pop out when you free the battery casing.

To reassemble your device, follow these instructions in reverse order.