



Samsung Galaxy Pocket Neo S5310 LCD Display, Touch screen Replacement

Samsung Galaxy Pocket Neo S5310 LCD Display, Touch screen Glass Replacement

Written By: ZFix



INTRODUCTION

How to disassemble the phone and change broken Digitizer / Glass or LCD Display.


Vedeo manual:

[video: <http://youtu.be/jiiAvS1RDQk>]

TOOLS:


- [Tweezers \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [Tesa 61395 Tape \(1\)](#)

Step 1 — Loudspeaker

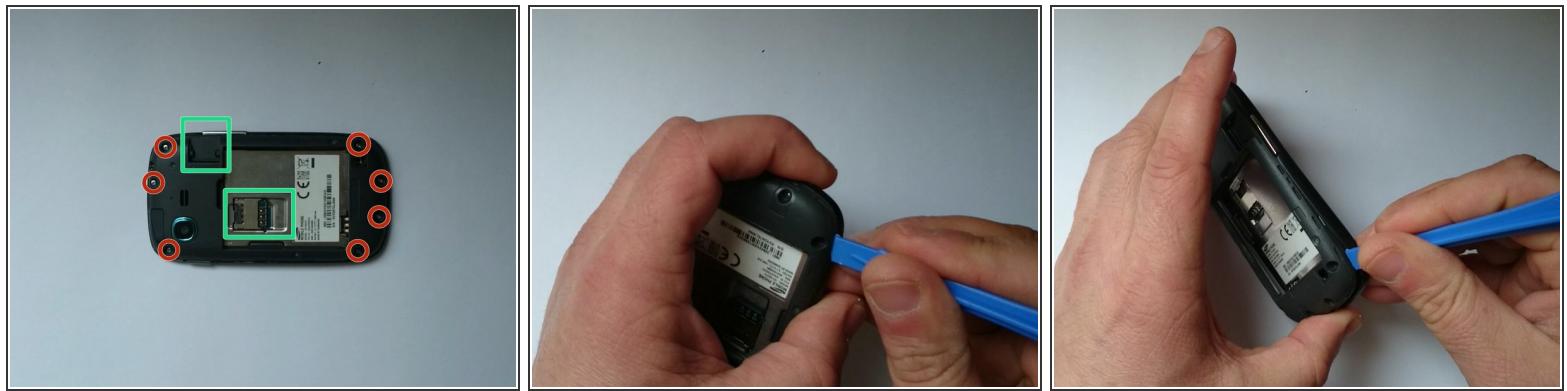

- Remove any SIM and SD card.
- Remove 7x Phillips screws.
- Use a plastic tool to disassemble the rear housing.

Step 2

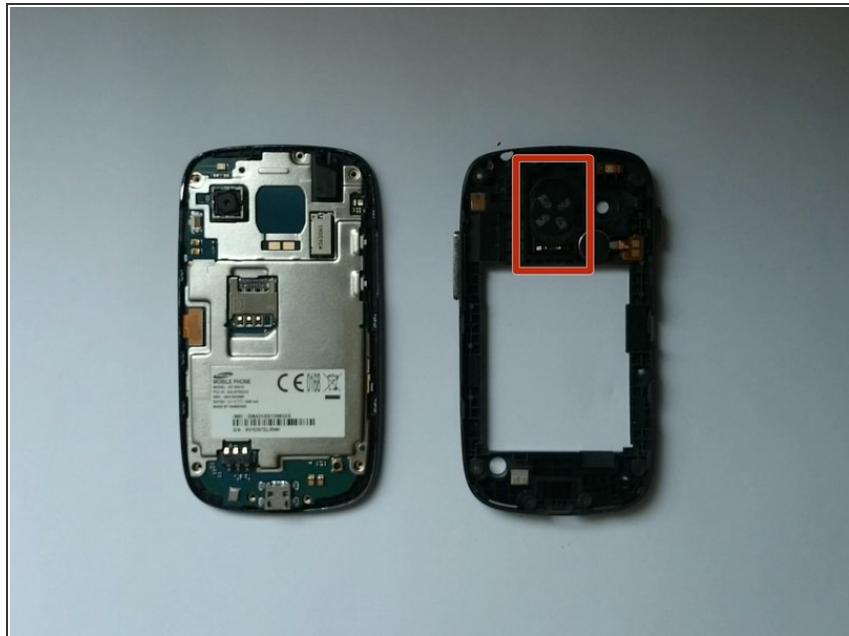


- The Loudspeaker is located on the rear housing..

Step 3 — Logic Board



- Disconnect the LCD Display flex cable.
- Lift up the board and disconnect the Touchscreen flex cable.
- Now you can remove the Motherboard.

Step 4 — Touchscreen, Digitizer Glass, LCD Display

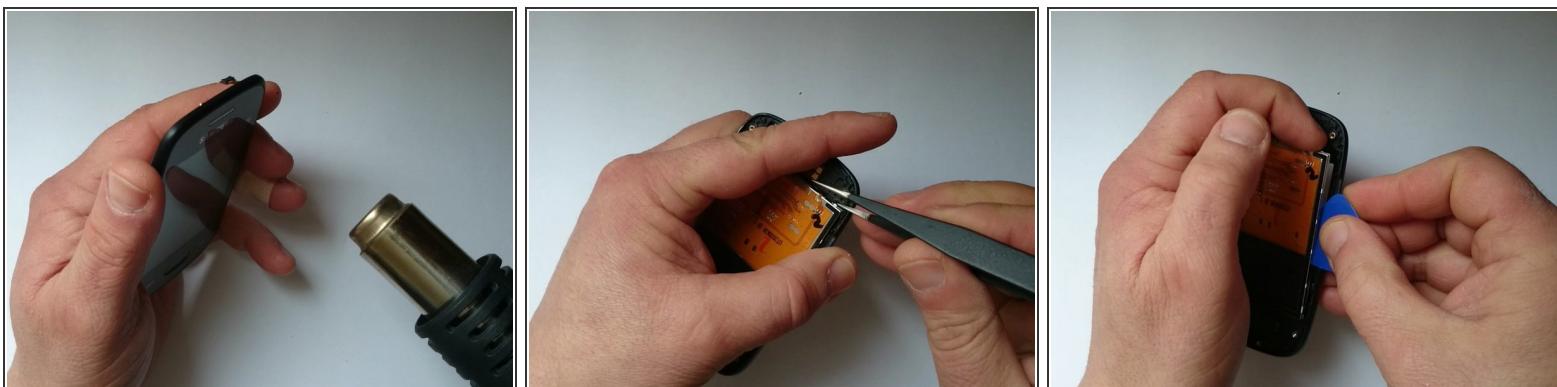

- Warm the touchscreen to make separating the LCD Display more easy
- For this manipulation you can use a hair drier.
- In the four corners of LCD display there are small metal plates. Use one of them to lift a little the LCD and put the plastic tool.
- Be careful not to break the display.

Step 5



- After separating the LCD Display, again worm the Touchscreen.

 If the glass is broken, put a transparent tape to prevent scattering.

Step 6




- Use plastic tools and slowly separate the touch screen from the front bezel.

Step 7



- ⓘ If the new spare part has come without adhesive tape, you must put.
- Reassemble your device, follow these instructions in reverse order.

Step 8

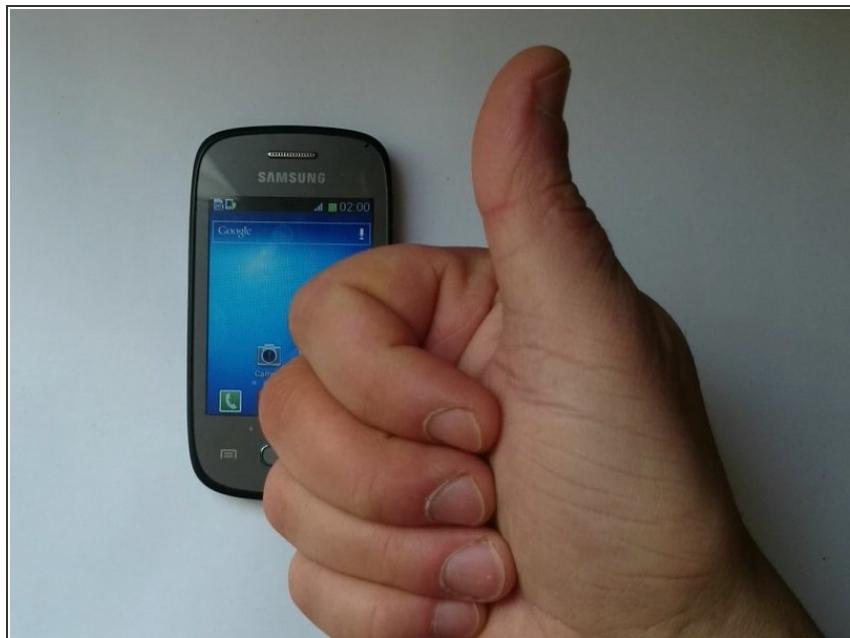

- **Did you do it successfully?**

To reassemble your device, follow these instructions in reverse order.