




Samsung Galaxy Pocket Neo S5310 Logic Board Replacement

Samsung Galaxy Pocket Neo S5310 Logic Board Replacement

Written By: ZFix

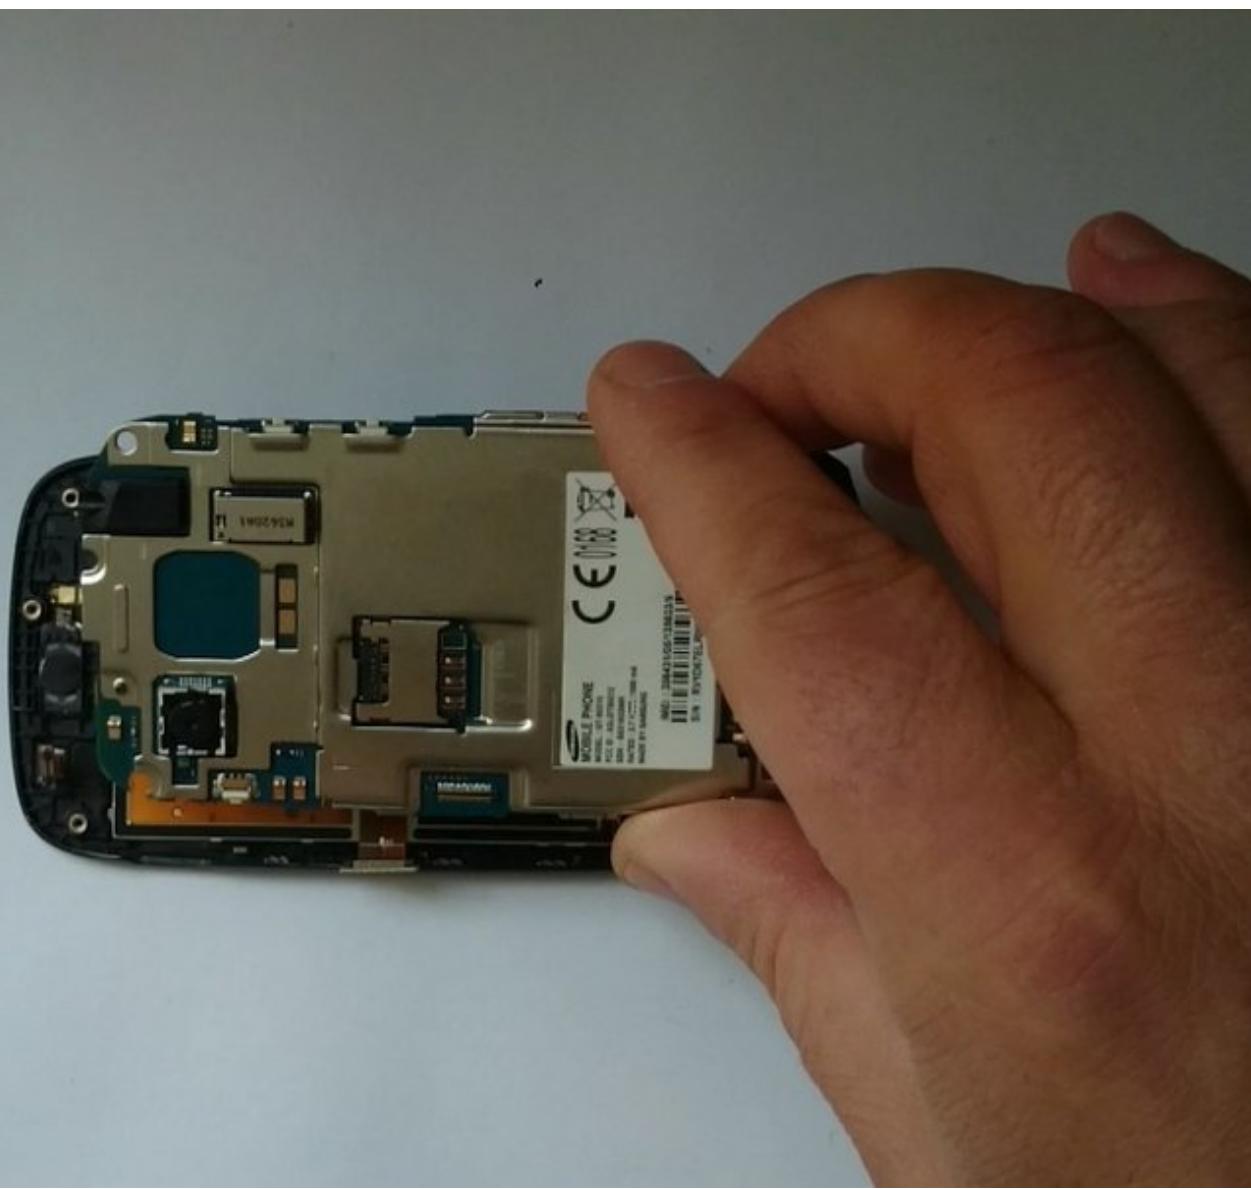

INTRODUCTION

How to disassemble the phone and remove the Logic board.


Vedeo manual:

[video: <http://youtu.be/jiiAvS1RDQk>]

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

Step 1 — Loudspeaker

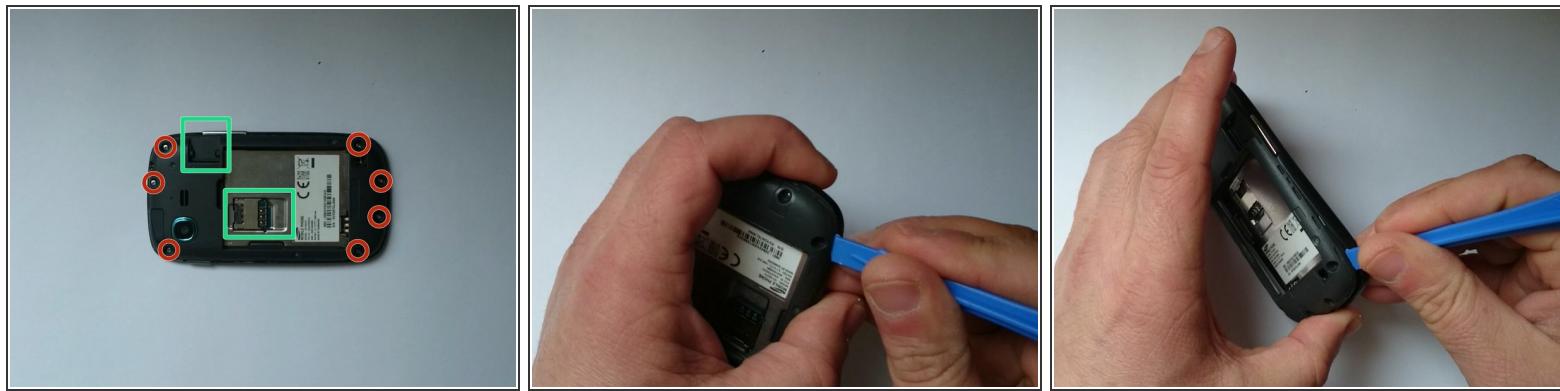


- Remove any SIM and SD card.
- Remove 7x Phillips screws.
- Use a plastic tool to disassemble the rear housing.

Step 2

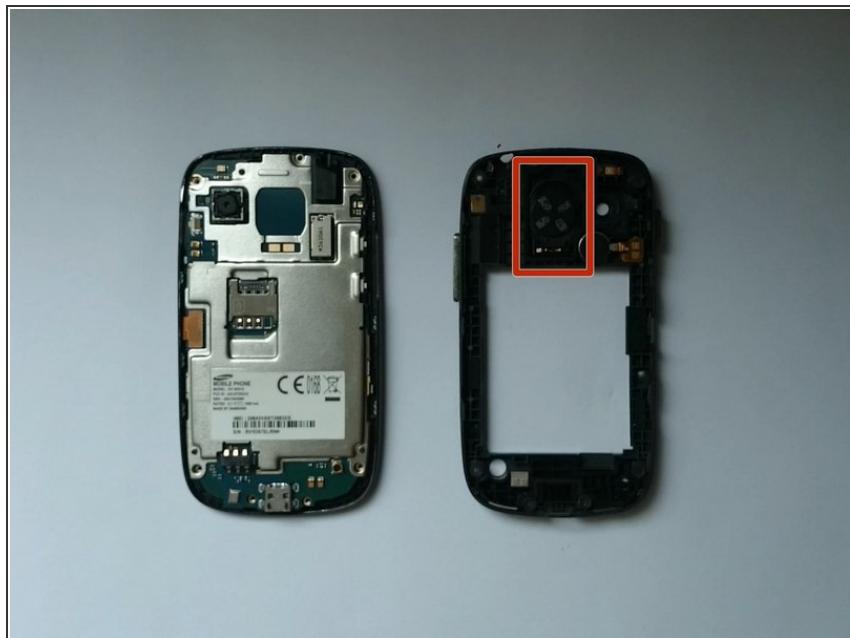

- The Loudspeaker is located on the rear housing..

Step 3 — Logic Board

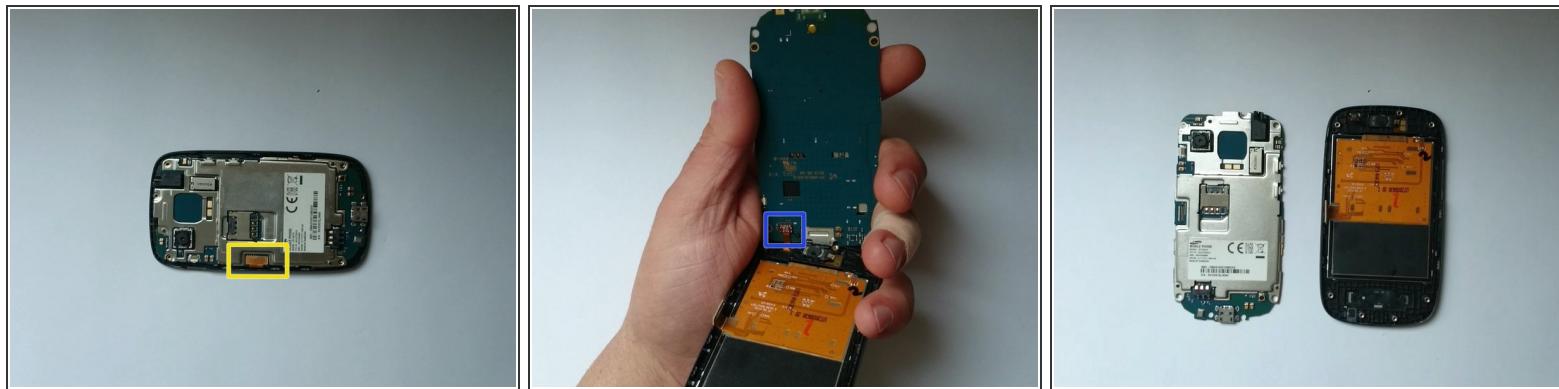

- Disconnect the LCD Display flex cable.
- Lift up the board and disconnect the Touchscreen flex cable.
- Now you can remove the Motherboard.

To reassemble your device, follow these instructions in reverse order.