



Samsung Galaxy Pocket Neo S5310

Loudspeaker

Samsung Galaxy Pocket Neo S5310 Loudspeaker

Written By: ZFix




INTRODUCTION

How to open the phone and replace the Loudspeaker.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Loudspeaker

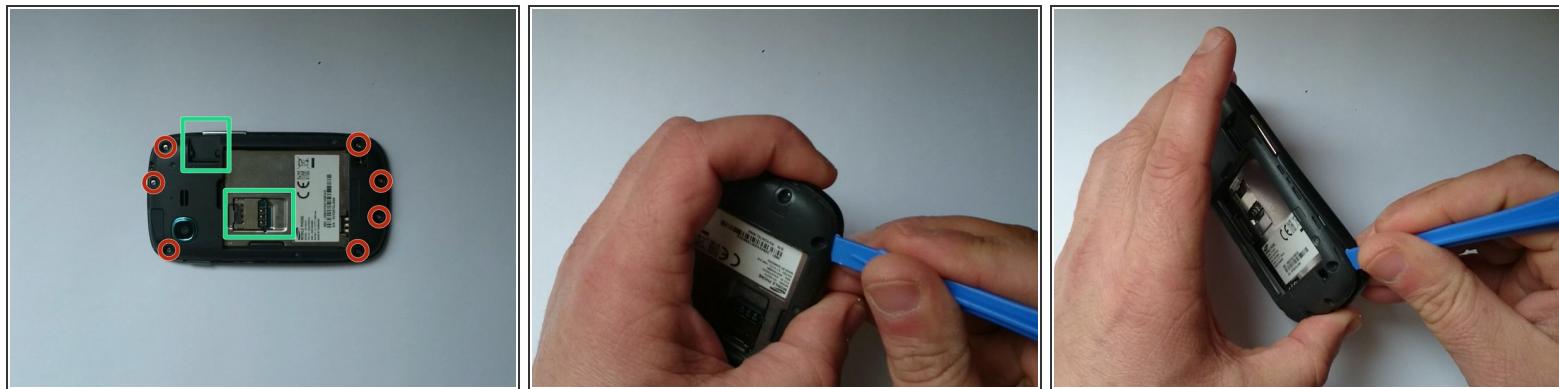

- Remove any SIM and SD card.
- Remove 7x Phillips screws.
- Use a plastic tool to disassemble the rear housing.

Step 2



- The Loudspeaker is located on the rear housing..

To reassemble your device, follow these instructions in reverse order.