



Samsung Galaxy Prevail 2 Home Button Replacement

If your home button is jammed or does not work, this guide will show you how to replace it.

Written By: Garrett Bowleg



INTRODUCTION

This guide will show you how to replace the home button for the Samsung Galaxy Prevail 2. No background information is required.

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Removing Back Casing



- Using your finger nails or the spudger; pry the plastic casing open, and pull away from the body of the phone.

Step 2 — Remove Battery



- Gently pull the battery out of the phone.

Step 3 — Remove Screws




- Unscrew all of the screws.
- *(i)* Be sure to set aside in a safe place.

Step 4 — Pry Off Back of Phone




- Insert the plastic opening tool between the silver frame and the white face of the phone to pry off the front face.
- *(i)* Make sure to pry around the entire frame to loosen it before proceeding.
- Use your thumbs to separate the motherboard from the back of the phone

Step 5 — Open Up the Motherboard

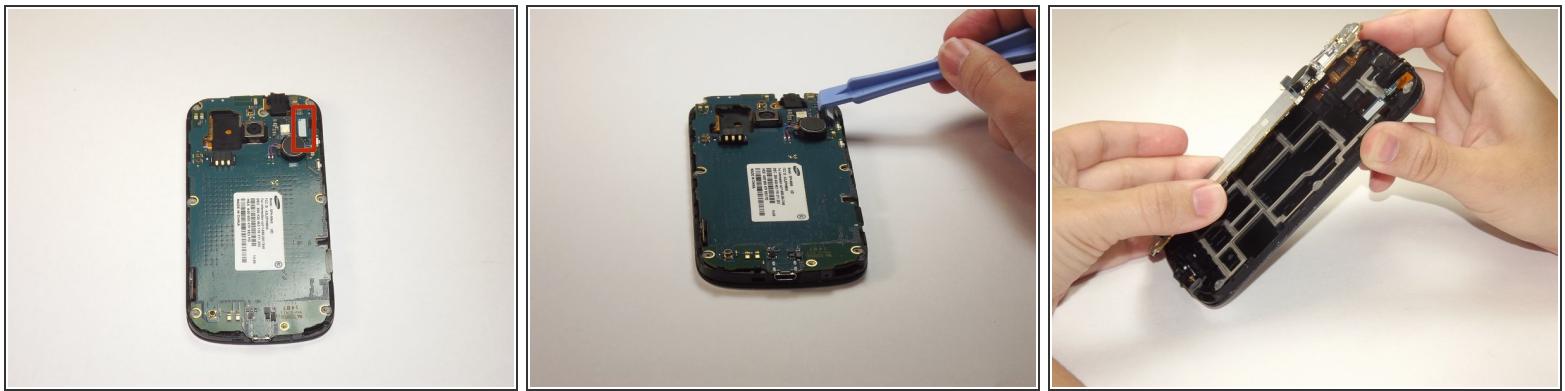

- With the plastic opening tool, lift up the flap to to fully open the motherboard.

Step 6 — Detach Motherboard

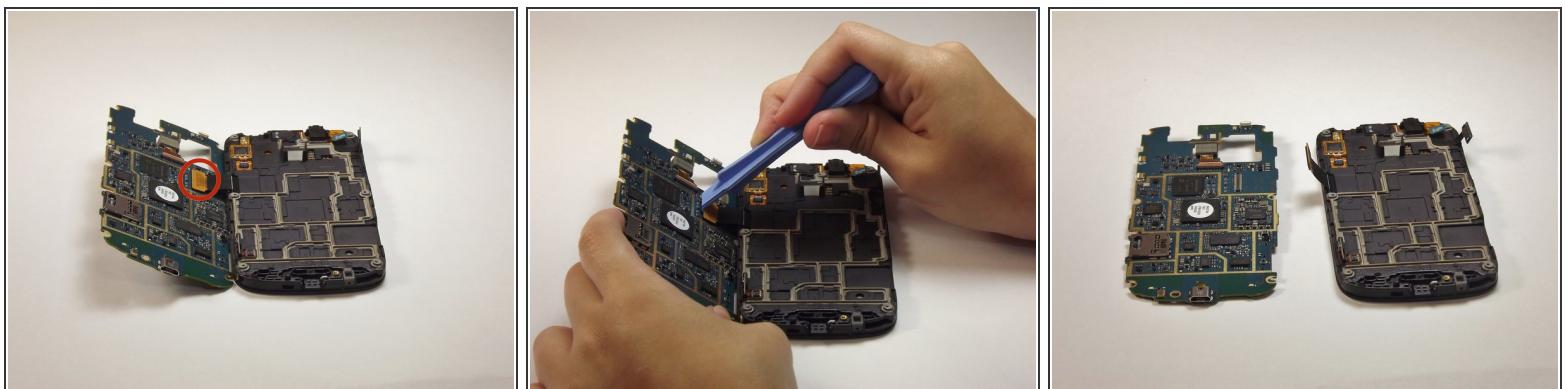


- With the plastic opening tool, lift the second flap up.

Step 7 — Locate Home Button



- Choose the motherboard side that contains the home button, as shown in the image.

Step 8 — Remove Home Button

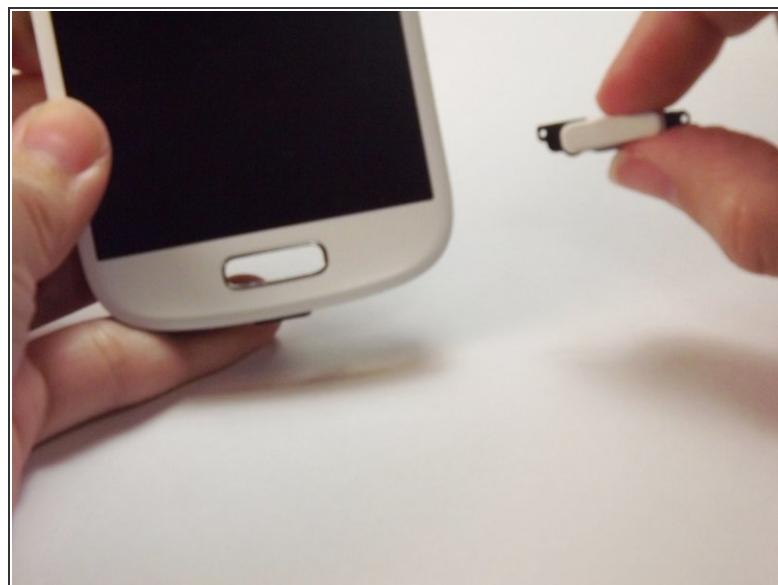

- Use the plastic opening tool to push the home button out.
- (i)* Push the button from the face of the phone inwards as indicated in the first image.

To reassemble your device, follow these instructions in reverse order.