



# Samsung Galaxy Prevail Touch Screen Replacement

Following this guide will allow you to replace the LCD screen which will resolve an unresponsive issue or cracked part.

Written By: Ricardo Zuloaga



## INTRODUCTION

By following this guide you should be able to fix issues with an unresponsive or cracked screen.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Touch Screen



- Using your hands, carefully remove the back panel by popping the open slit, near the headphone jack, outwards.

## Step 2



- Using your fingernail or nylon spudger, remove the battery by lifting upward in the recess of the bottom right corner.

## Step 3



- Remove the (6) 4mm screws using a Phillips #00 screwdriver.

## Step 4



- Using the black spudger, carefully unhinge and pry the secondary rear panel , which houses the camera lens and speaker.

**⚠** The metal trim of the headphone jack may come loose during this process.

## Step 5



- Using the spudger, gently pry upward on the motherboard by the right side.

 Motherboard is connected to shield plate with ribbon cable.


## Step 6



- Using a spudger, carefully unhinge the gray shield plate by lifting upwards on the right side.

 The shield plate will not be fully removed, it is attached to the front panel with a ribbon cable.

## Step 7

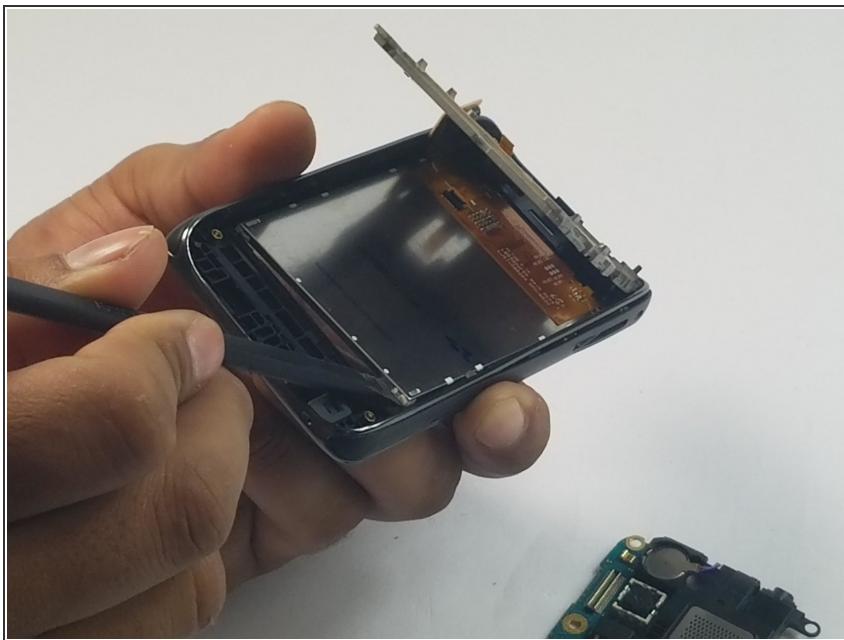

- Using the spudger lift up the LCD screen and replace with the new screen.

To reassemble your device, follow these instructions in reverse order.