




Samsung Galaxy Prime Front Facing Camera Replacement

Replace a defective selfie camera with this guide.

Written By: Alex Boyle

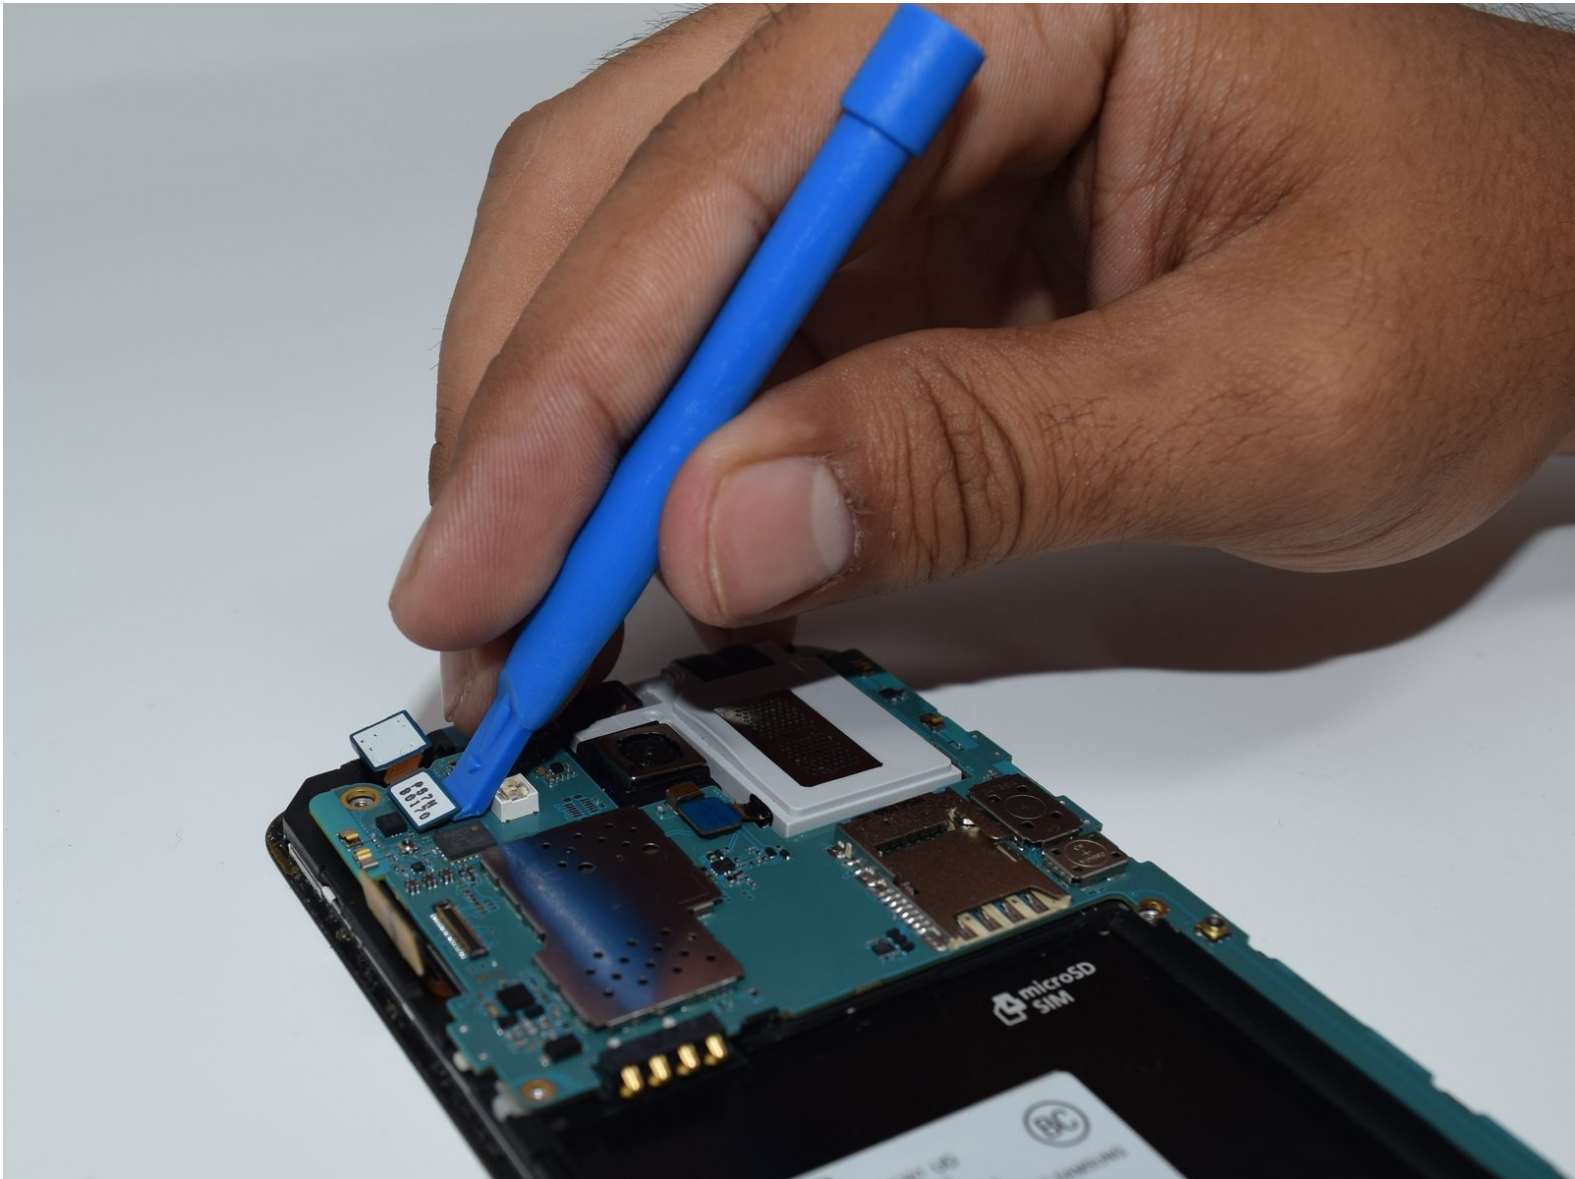



TOOLS:

- [Spudger](#) (1)
- [Metal Spudger](#) (1)
- [Credit Card / Plastic](#) (1)

Good for seperating the screen from bezel. Could also use a guitar pick.

- [Phillips #000 Screwdriver](#) (1)
- [Heat Pad](#) (1)

Or can use a heat gun

Step 1 — Removing back cover



- Insert an opening tool or fingernail into the tab on the power button side of the phone.
- Lift on the tab to pry the back cover off of the phone.
- Continue to pry off the back all around the edges of the phone until the entire cover is fully removed.

Step 2 — Remove The Battery




- To remove the battery, lift up on the thumb tab located on the bottom right corner of battery bay.

Step 3 — Remove The SD And LCD Ribbon Cable



- Remove the SD card and Sim card located above the battery bay. (first image)
- Lift up the plastic plate that covers the LCD ribbon cable. (second image)

Step 4 — Removing screws

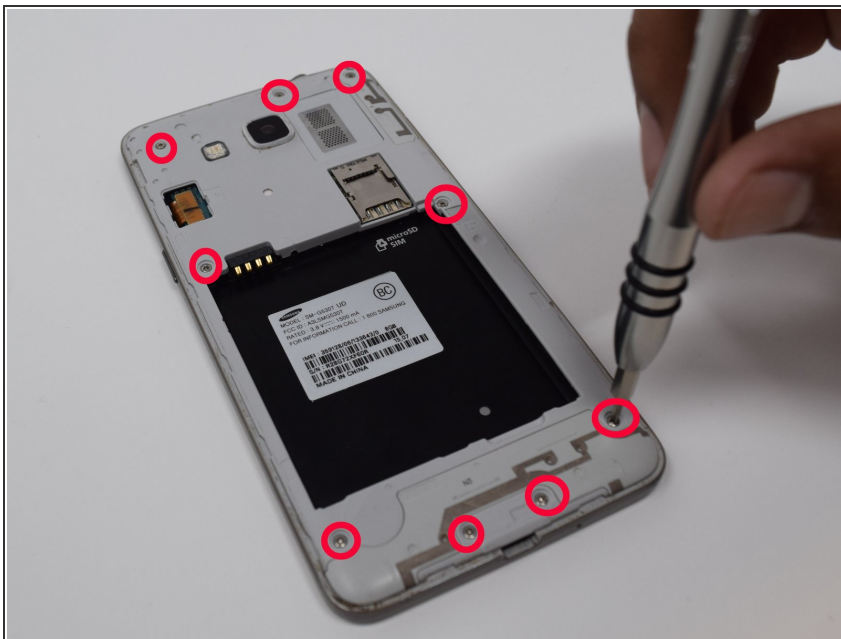



- Use a size PH000 Phillips screwdriver to unscrew the nine screws located on the back. (their spots are indicated in the image)
- ⓘ Keep the screws on a magnetic mat or in a secure location.

Step 5 — Separating Bezel and Screen




- Use a heat gun or a heating device to lightly heat the edges of the screen on the phone
- Insert an opening tool or credit card between the screen and plastic bezel, then apply pressure to separate.
- ⓘ You can also push the screen out in the empty slot where the battery was to push the screen out after heating the screen and plastic bezel.
- ⚠ It is important to be quick but careful when separating the screen and plastic bezel because the glue could cool down and re-bond the two parts.

Step 6

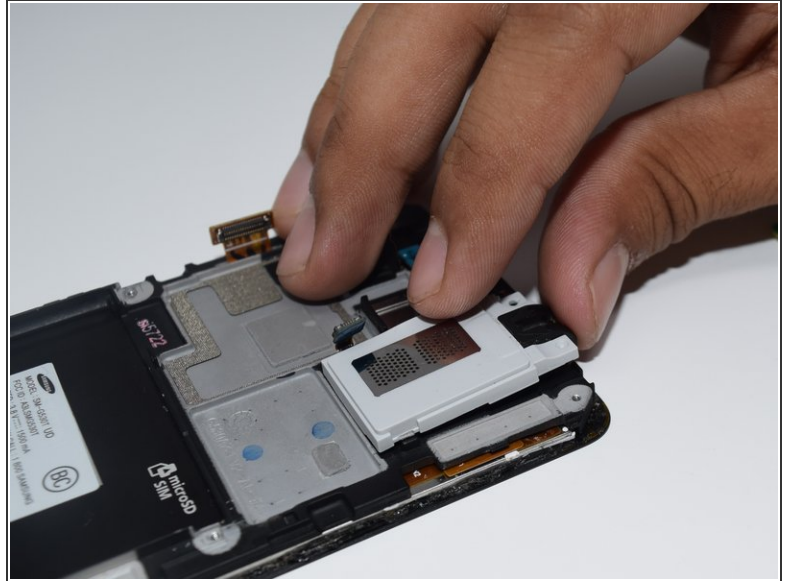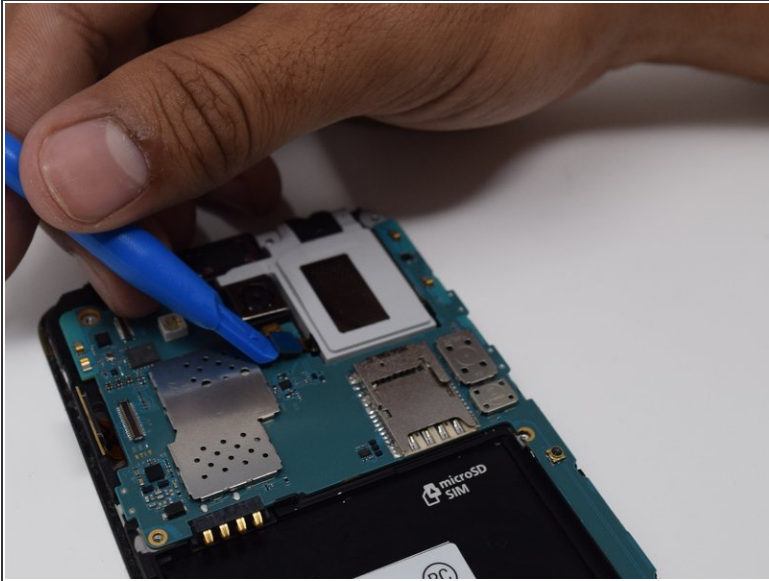

- Use a plastic spudger to disconnect the ribbon cable from the loudspeaker unit.
- Lift from the top of the loudspeaker unit to release from the phone. Note that you do not need to remove the motherboard to do this.

Step 7 — Front Facing Camera

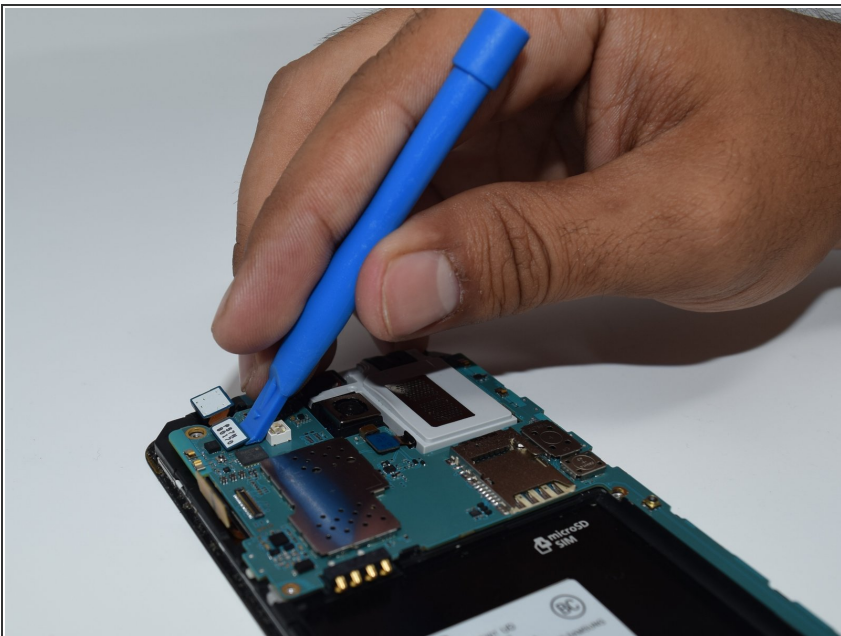

- Use a plastic spudger to disconnect the ribbon cable from the motherboard.
- The camera will be free to remove.

To reassemble your device, follow these instructions in reverse order.