



# Samsung Galaxy S II T989 Media Card Replacement

This guide will give instructions of how to replace the media card.

Written By: Joshua King



## INTRODUCTION

The media card stores pictures, videos, music, sounds, and downloads. While this card is not vital to the operation of the phone it is still a useful addition to the phone.

## Step 1 — Rear Cover



- To remove the rear cover, locate the tab indicated by the red outline.
- Using your fingernail, gently pry the rear cover.

## Step 2 — Media Card



- The media card is found inside the area indicated with the red rectangle. The card itself is small and black making it hard to easily see.
- After locating the card, gently use your fingers to slide the card to the right, until the card is no longer in contact with the metal.

To reassemble your device, follow these instructions in reverse order.