



Samsung Galaxy S4 Active MicroSD Card Replacement

Replace the microSD card.

Written By: Geoff Wacker



INTRODUCTION

Use this guide to replace the microSD card in a Samsung Galaxy S4 Active.

TOOLS:


- [iFixit Opening Tools](#) (1)

Step 1 — Rear Case



- Pry with a plastic opening tool, or your fingernail, in the divot to the left of the rear-facing camera, near the power button.
- Lift the rear case by the corner nearest the divot and remove it from the phone.

Step 2 — MicroSD Card

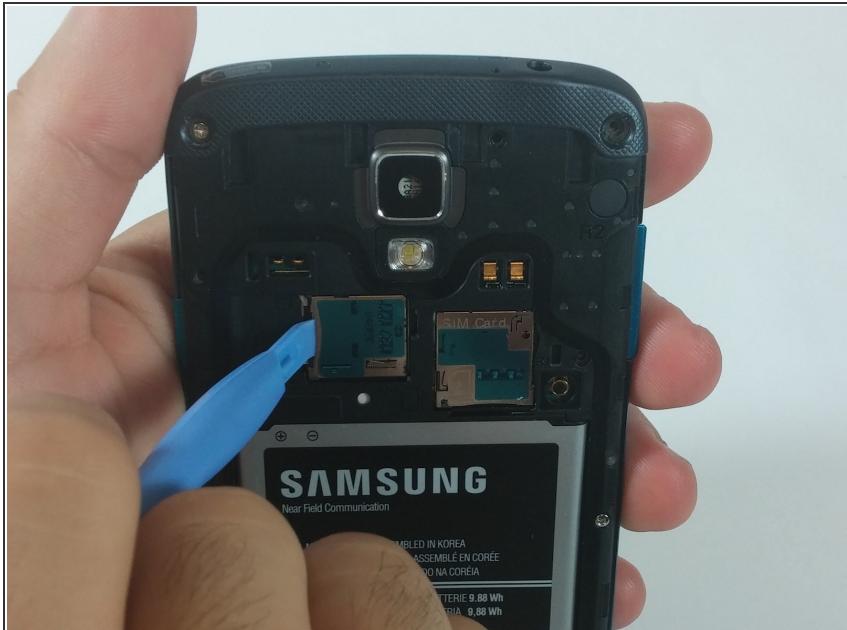

- Use a plastic opening tool, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
- After the click, release the card and it will pop out of its slot.
- Remove the microSD card.

To reassemble your device, follow these instructions in reverse order.