



Samsung Galaxy S7 Edge SIM Card Tray Replacement

Follow this guide to remove and replace the SIM card and SD card combo tray in the Samsung Galaxy S7 Edge.

Written By: Arthur Shi



This document was generated on 2019-09-23 01:54:18 AM (MST).

INTRODUCTION

This guide shows how to remove the SIM/SD card combo tray in the Samsung Galaxy S7 Edge.

TOOLS:

- [SIM Card Eject Tool \(1\)](#)

PARTS:

- [Galaxy S7 Edge SIM and SD Card Tray \(1\)](#)

Step 1 — SIM Card Tray



- Insert a SIM card opening tool, SIM eject bit, or a paperclip into the small hole on the top edge of the phone.
(i) There are two holes on the top edge. The correct hole is within a long rectangular cutout.
- Press in the opening tool to eject the tray.
- Remove the SIM/SD card combo tray from the phone.

To reassemble your device, follow these instructions in reverse order.