




Samsung Galaxy Tab 2 7.0 Motherboard Replacement

How to replace the motherboard in the Samsung Galaxy 2 7.0 Tablet.

Written By: Paul

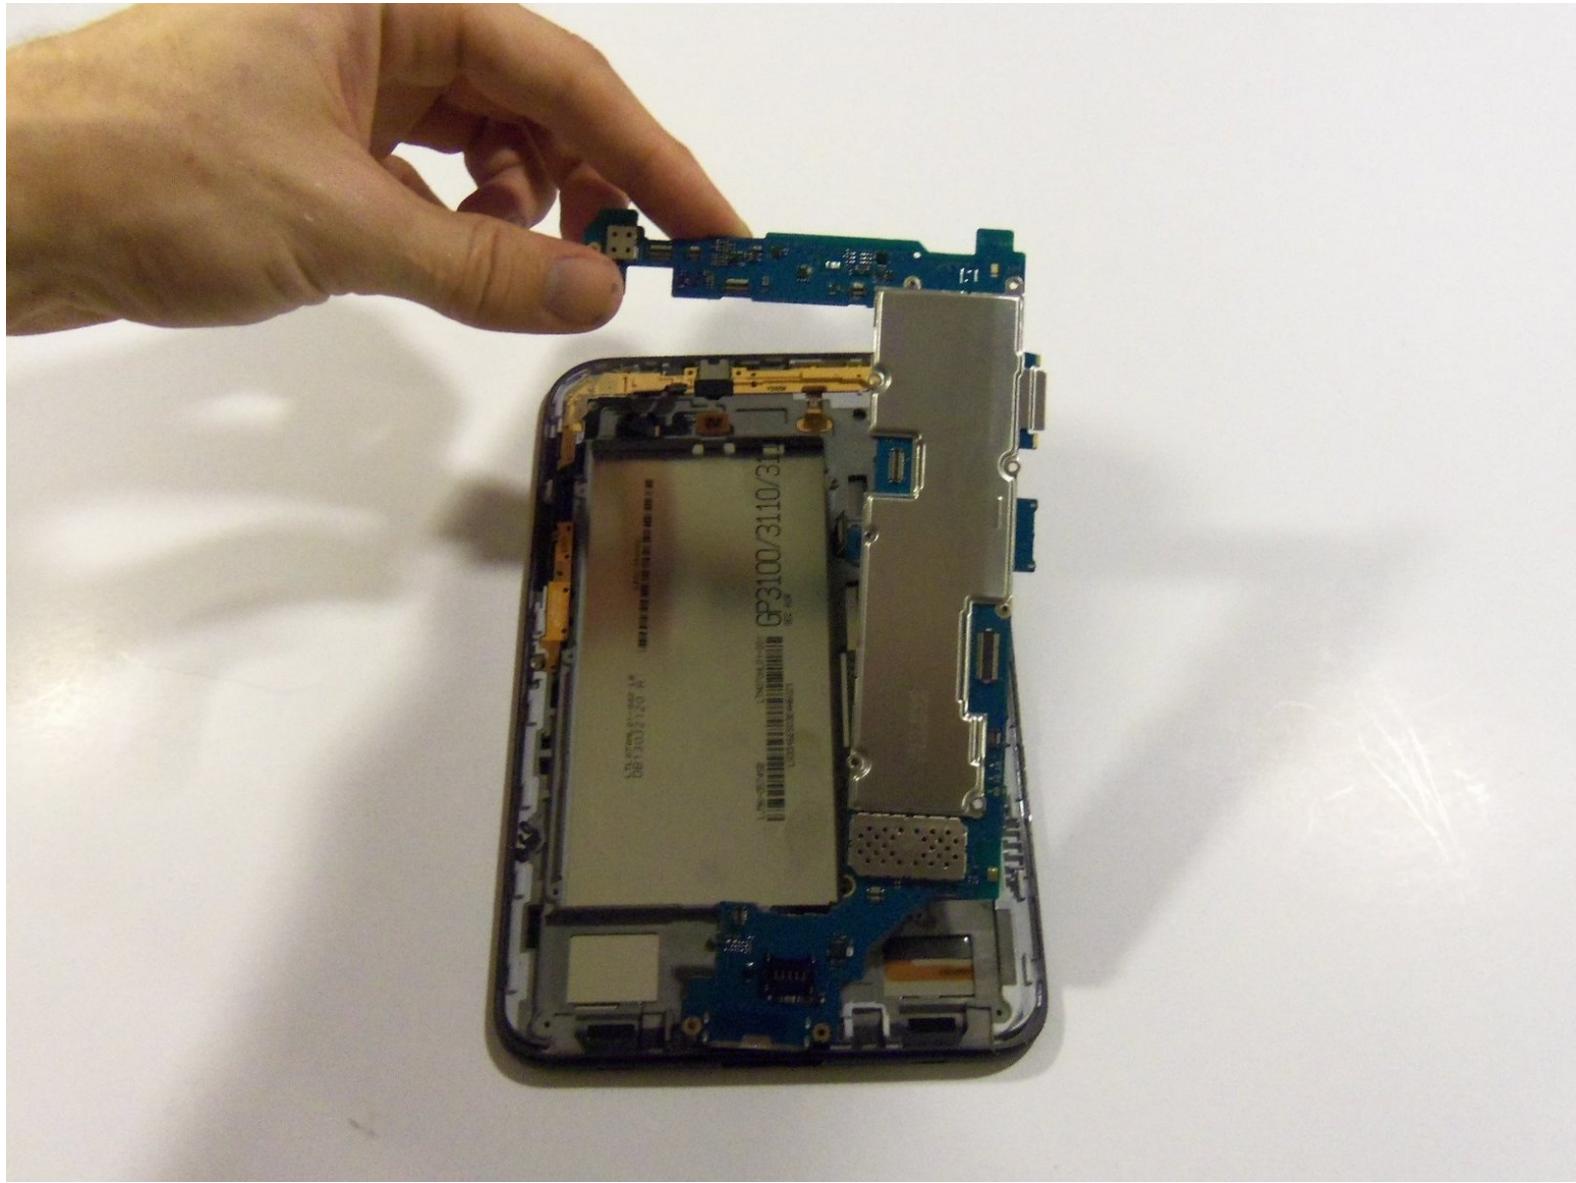

INTRODUCTION

This guide will show you how to remove a faulty motherboard from this device.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

PARTS:

- [Galaxy Tab 2 7.0 Motherboard \(3G\)](#) (1)
- [Galaxy Tab 2 7.0 Motherboard \(Wi-Fi\)](#) (1)

Step 1 — Preparing Your Device



- Power the device down completely
- Remove the SD card from the SD card slot.


Step 2



- Use the prying tool to separate the front and rear panels by slipping the tool underneath the screen edge and sliding it around the entire device.


 Be sure to unclip all of the clips on the back panel or it will be difficult for you to pull it off and may damage the tablet.

Step 3

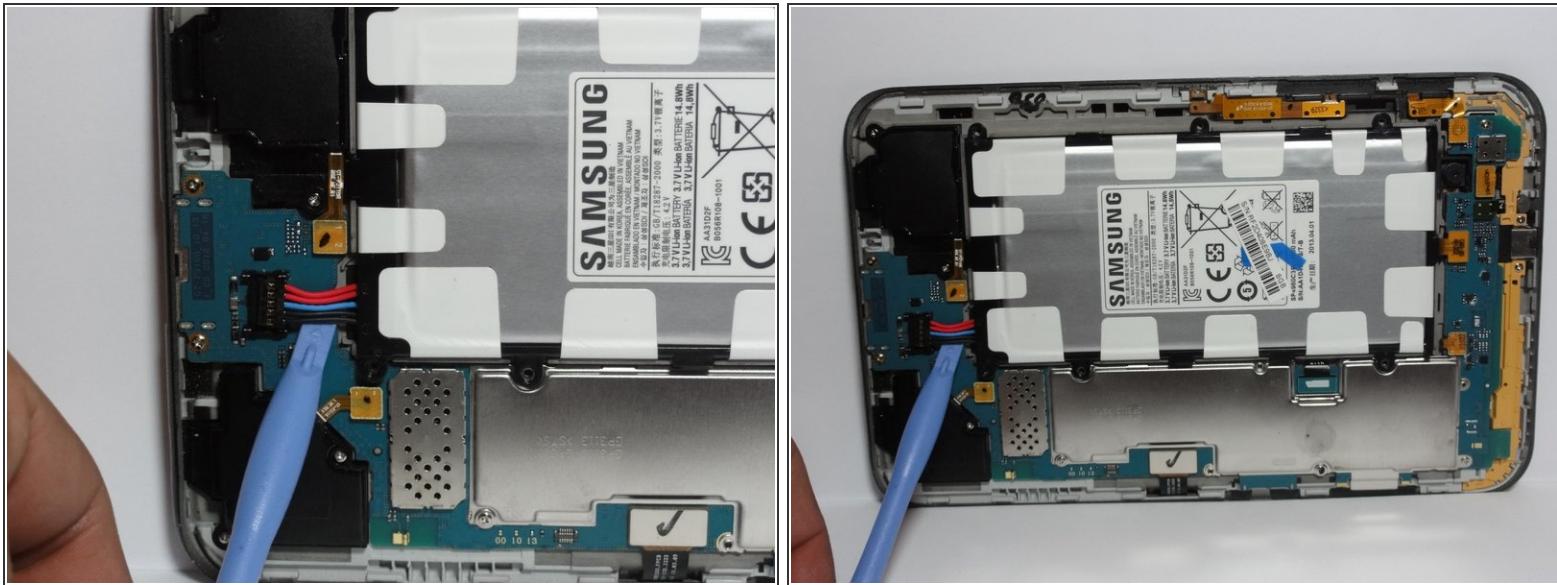

- Remove the battery Flex Cable from its socket by placing the pry tool under the wires and gently prying it out.
- When you are placing in the new battery, it helps to connect the socket first or else it becomes difficult to properly align once the battery is in place.

Step 4

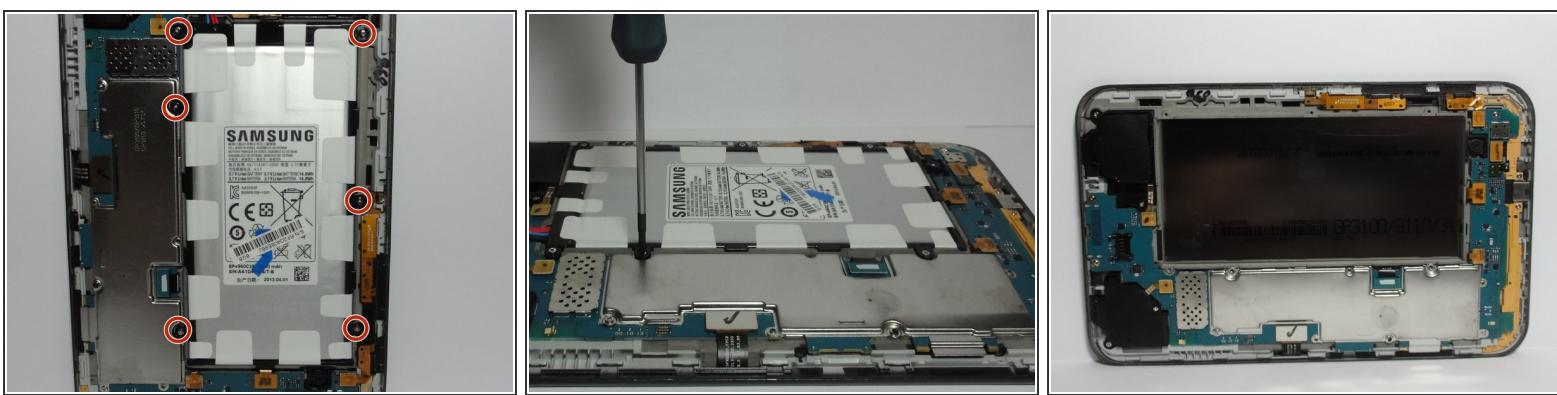

- Using the Phillips precision screw driver remove the six 4 mm screws holding the battery in place.
- Once the battery is loose, remove as shown.

Step 5 — Motherboard




- Using the Phillips #00 precision screwdriver, remove the 12 4mm screws holding in the motherboard.

Step 6




- Release all flex cable connections at the bottom section of the motherboard.
- Using the plastic pry tool release connections for both loudspeakers.
- Once disconnected gently remove the loudspeakers from the device.

Step 7

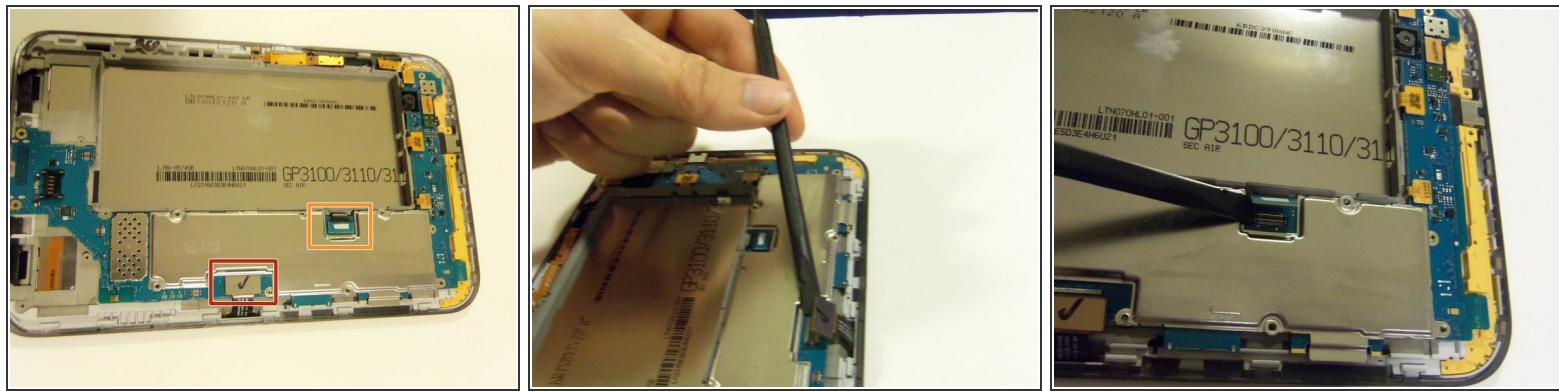

- Release all flex cables on the right side of the device motherboard as shown.
- Using the plastic pry tool, release the touch screen flex cable from its socket.
- With the same tool release the LCD screen flex cable from its socket.

Step 8

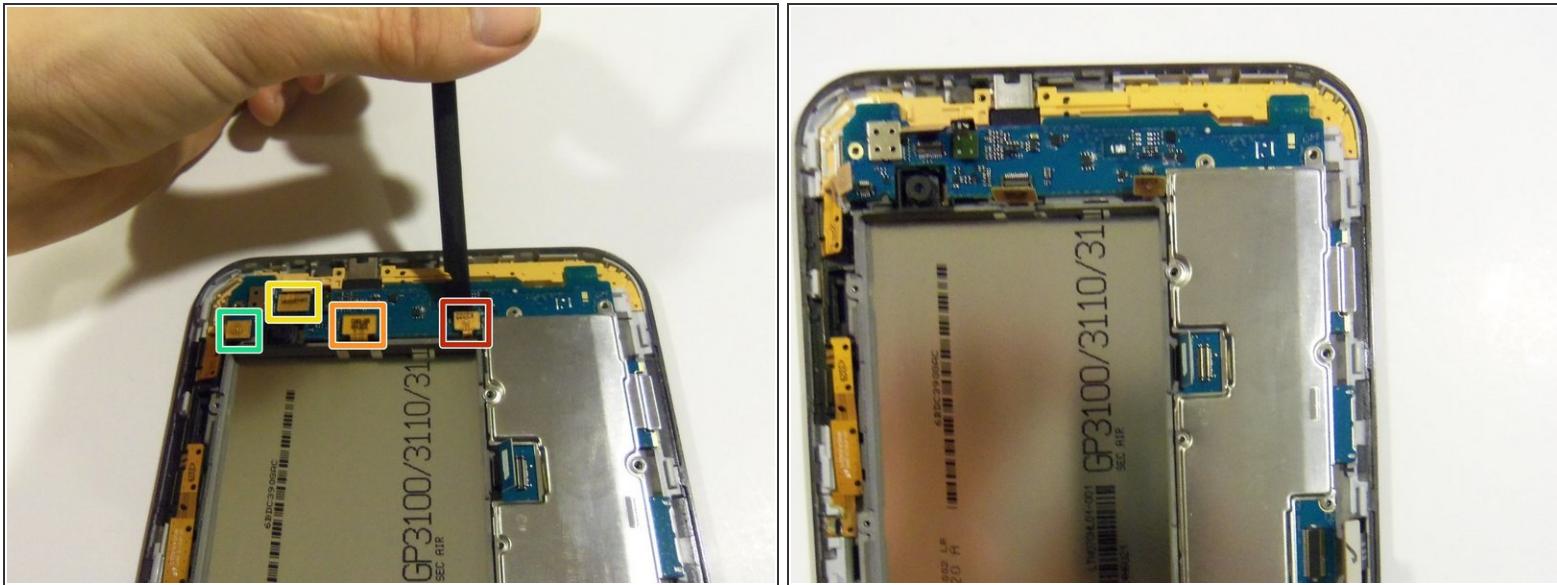

- Release all flex cables on the upper portion of the motherboard.
 - Using the plastic pry tool release the sensor flex cable from its socket.
 - With the same tool release the camera flex cable from its socket.
 - Release the front camera flex cable from its socket.
 - Release the side button's flex cable from its socket.


Step 9



- There is one more Flex cable to remove, it's to the right of the front camera connector (see previous picture with connector highlighted in yellow box). It connects the top microphone and headphone jack.

This document was generated on 2019-09-19 06:47:44 AM (MST).

Step 10

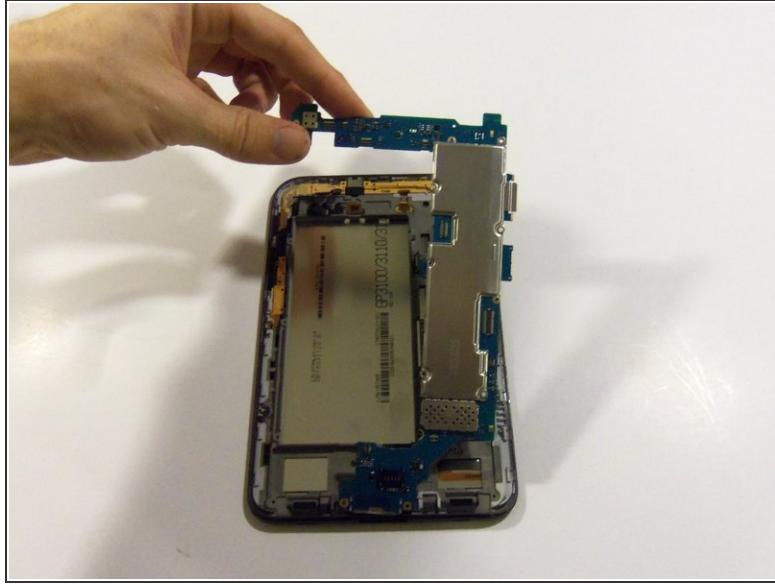

- Gently remove the motherboard from the device.

⚠ Be sure no flex cables get caught on the motherboard while you are removing it or the flex cables may become damaged.

ⓘ It is easier to begin lifting the motherboard from the top rather than the bottom.

To reassemble your device, follow these instructions in reverse order.