




Samsung Galaxy Tab 3 8.0 Audio Jack Replacement

If connected audio devices don't properly produce sound even after replacement, use this guide to learn how to exchange the port.

Written By: anthony gonzalez

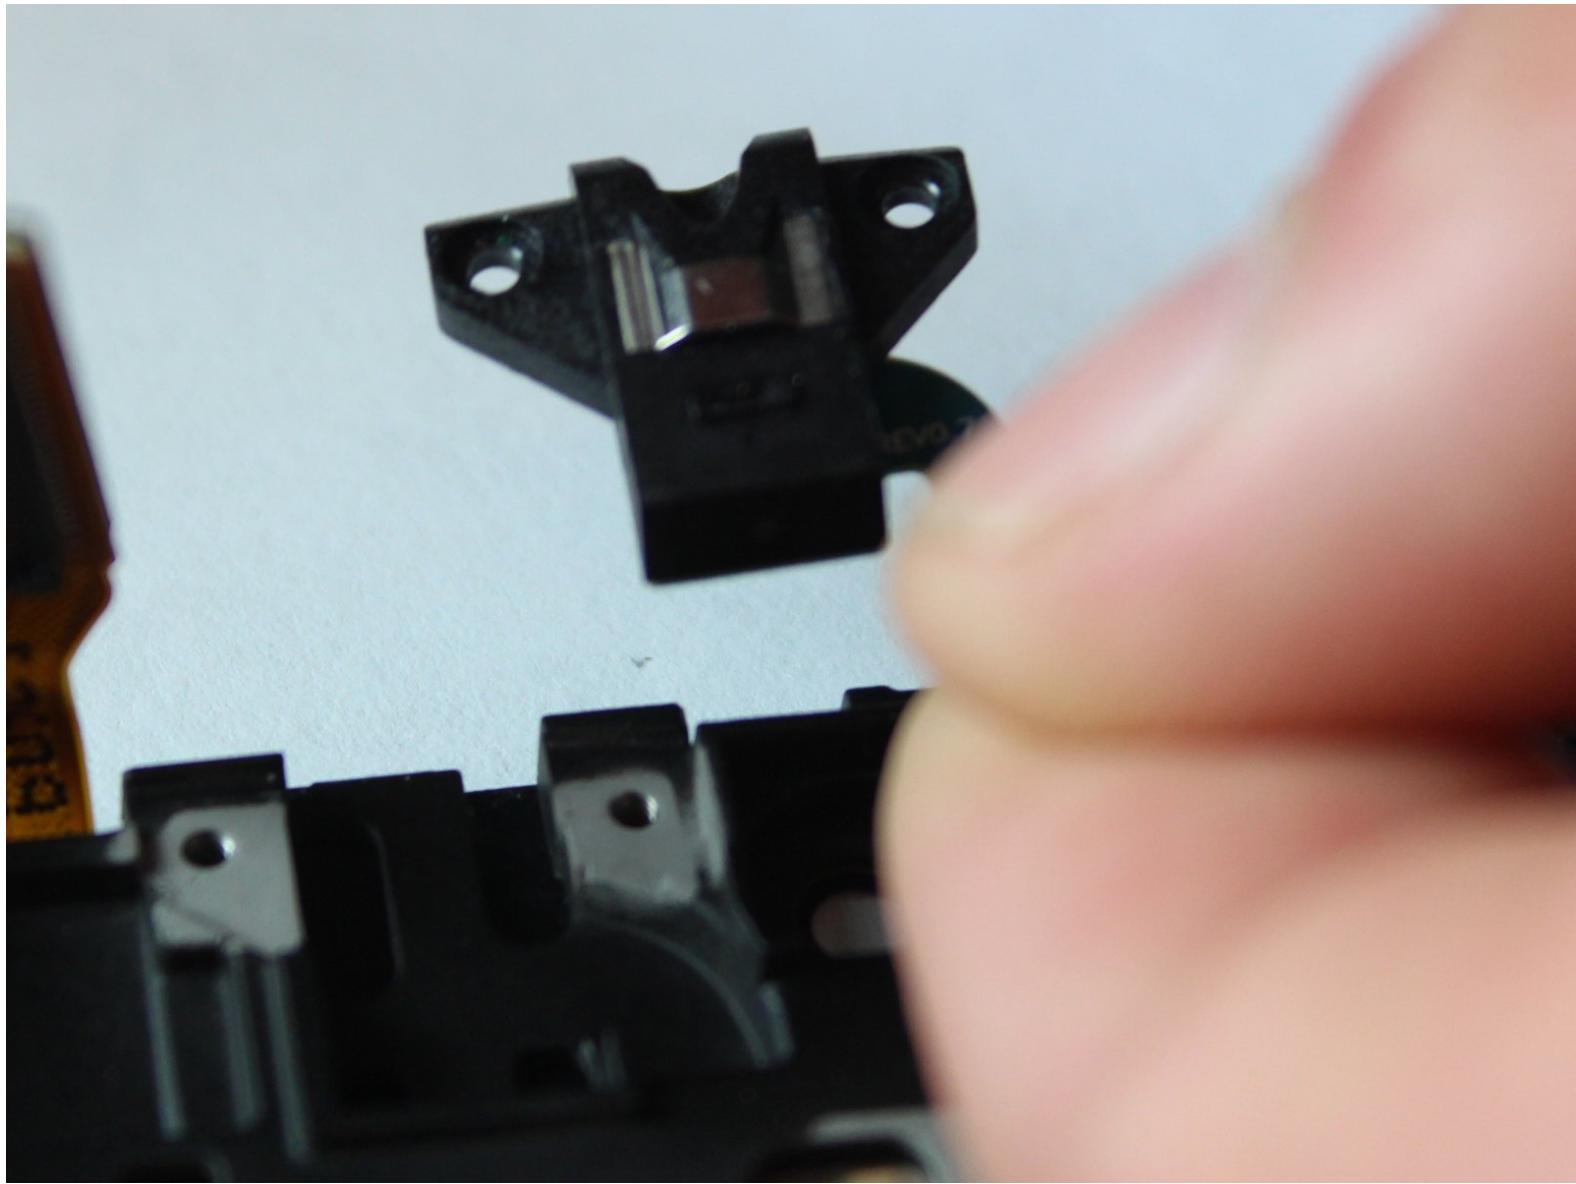

This document was generated on 2019-09-20 01:29:16 PM (MST).



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)

 **PARTS:**

- [Galaxy Tab 3 8" Wi-Fi Headphone Jack](#) (1)
- [Samsung Galaxy Tab 3 8.0 Audio Jack](#) (1)



Step 1 — Battery - Open up the tablet

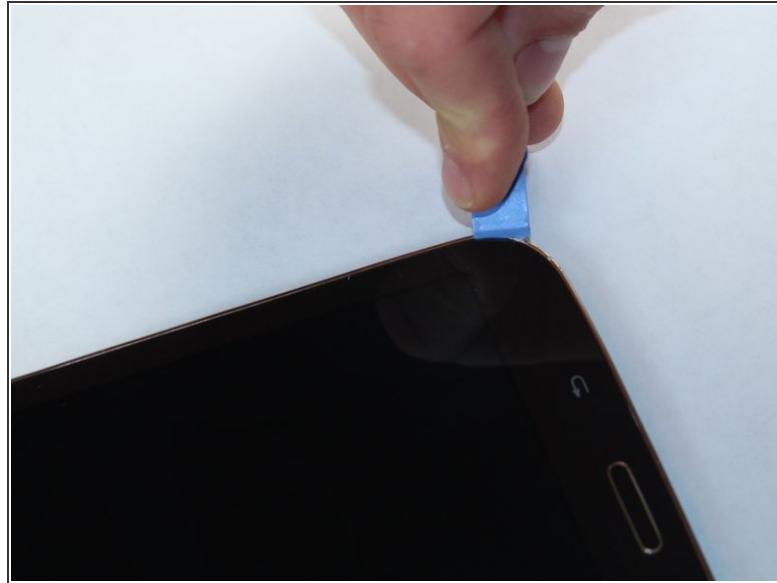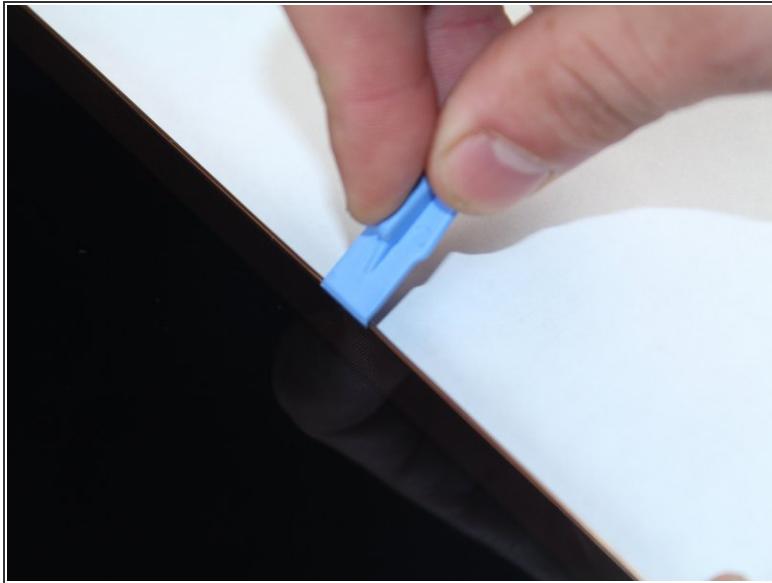

- Start out by separating the screen from the back cover using the larger plastic opening tool to pry them apart.



 Be careful when removing the screen as negligence can cause damage.

Step 2 — Remove Back Cover

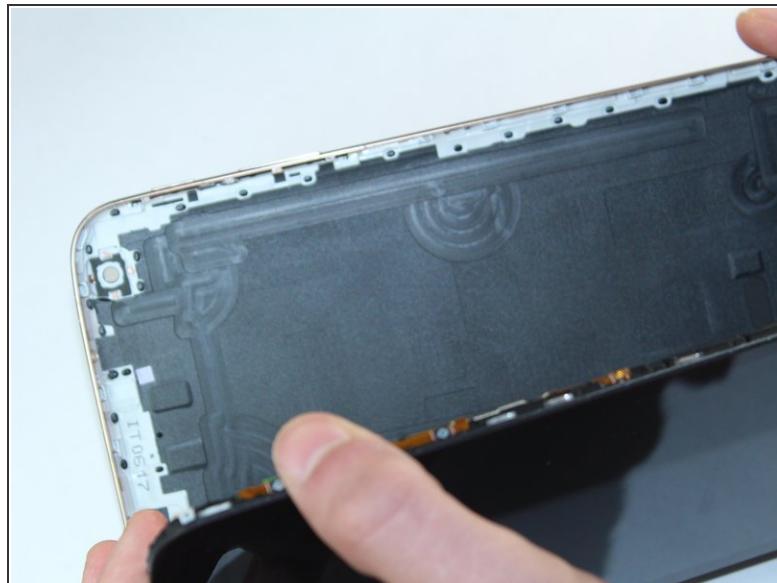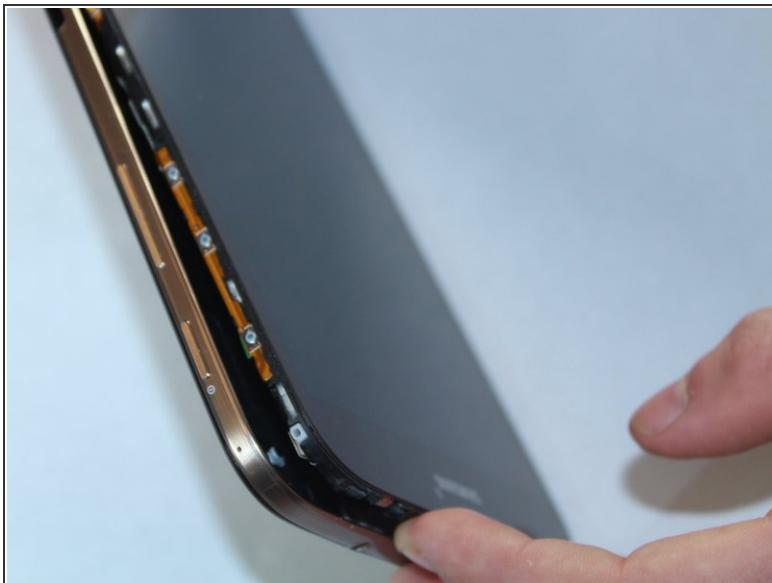

- Once every part of the screen is separated from the back cover, you should be able to fully remove it with your hands.

Step 3 — Disconnect Battery

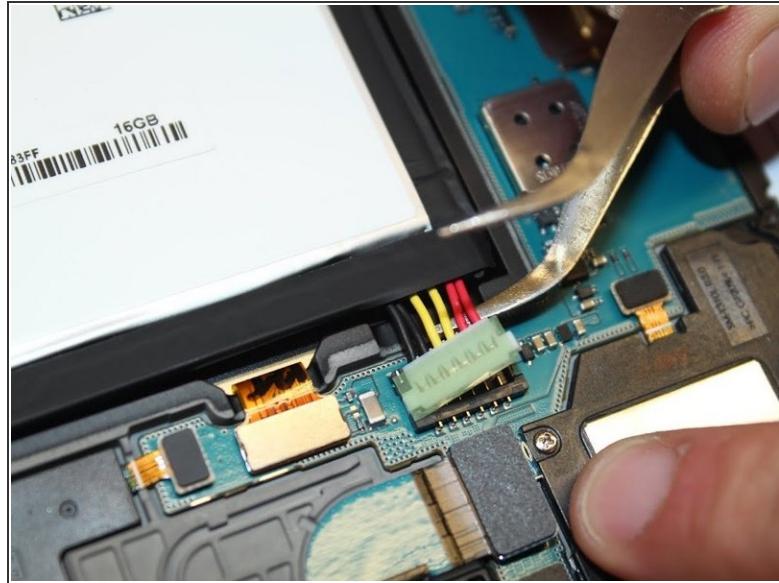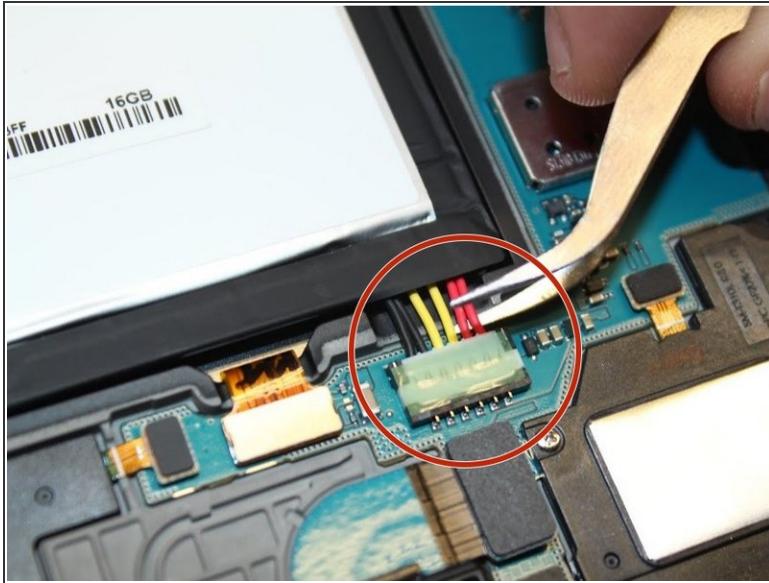

- To remove the battery you must use something small, such as tweezers, to disconnect the battery from its port.


(i) Note: the connection lifts up to remove.

Step 4 — Remove Battery




- After the battery is disconnected, use the pulling tab to safely remove the battery.

Step 5 — Disconnect Audio Jack

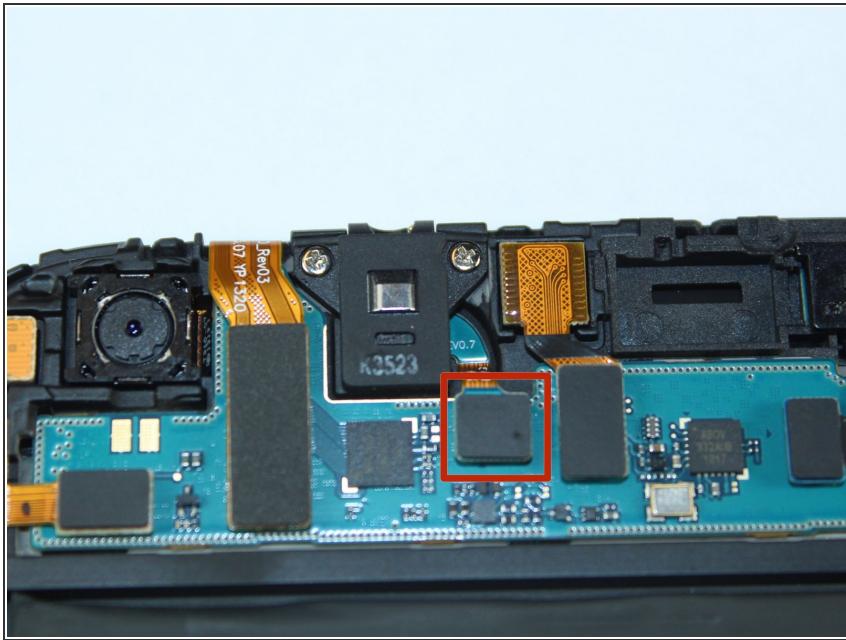

- Disconnect Audio Jack from Motherboard.

Step 6 — Unscrew Audio Jack

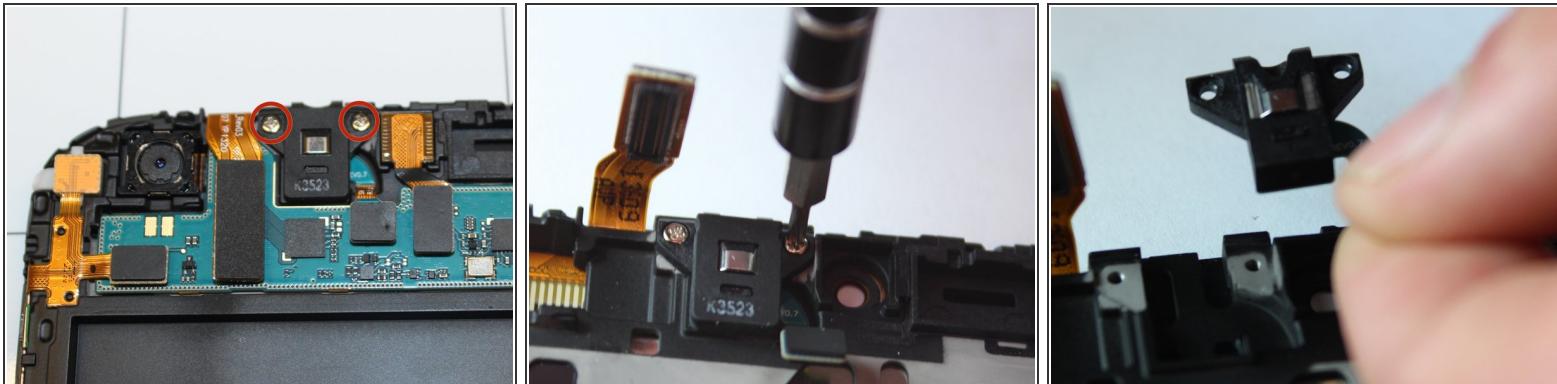

- Unscrew the 2.9mm phillips #000 screws from the audio jack and remove component from the tablet.

To reassemble your device, follow these instructions in reverse order.