




Samsung Galaxy Tab 3 8.0 Speakers Replacement

Speakers can go bad if water get in them, too much heat, or excessive use.

Written By: Kyle Ballard

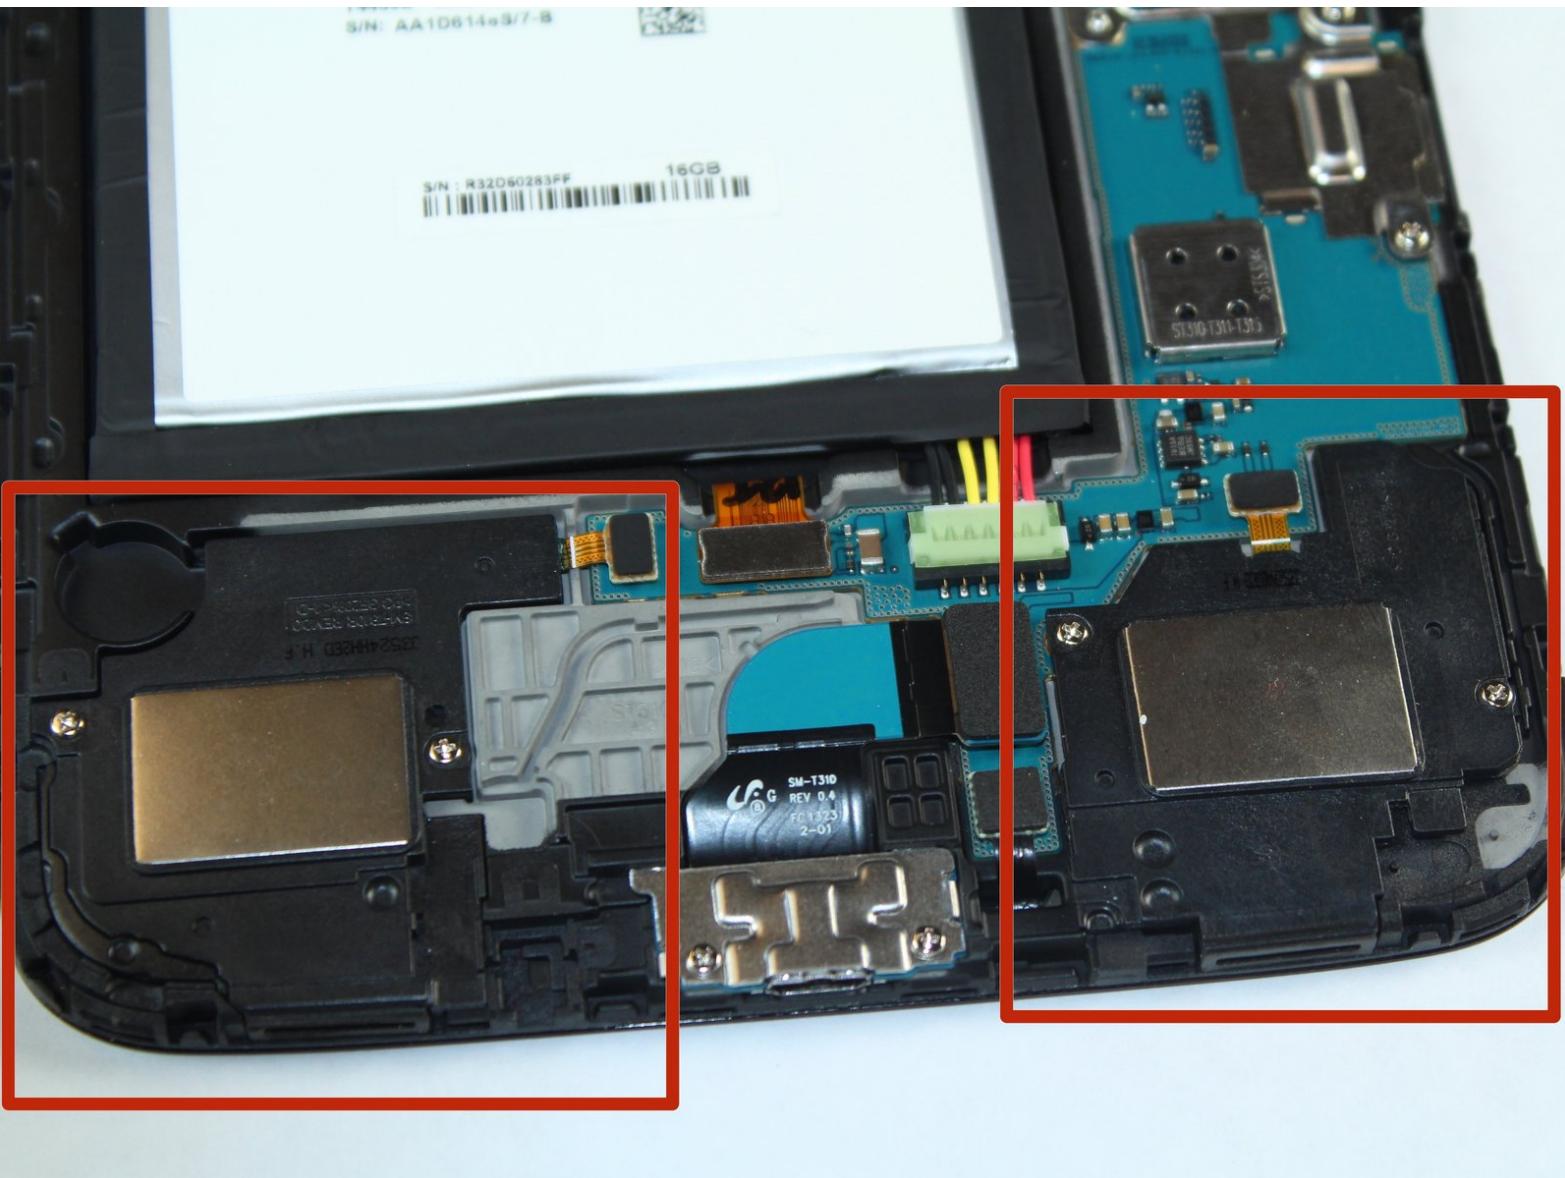

INTRODUCTION

This step by step troubleshooting guide can be used to resolve issues such as water damage, heat and/or excessive heat that may arise with the Samsung Galaxy Tab 3 8.0 Speakers.

Great caution must be taken when removing or replacing parts of the tablet as further damage can occur.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)

PARTS:

- [Samsung Galaxy Tab 3 8" Right Speaker](#) (1)
- [Samsung Galaxy Tab 3 8" Left Speaker](#) (1)



Step 1 — Battery - Open up the tablet

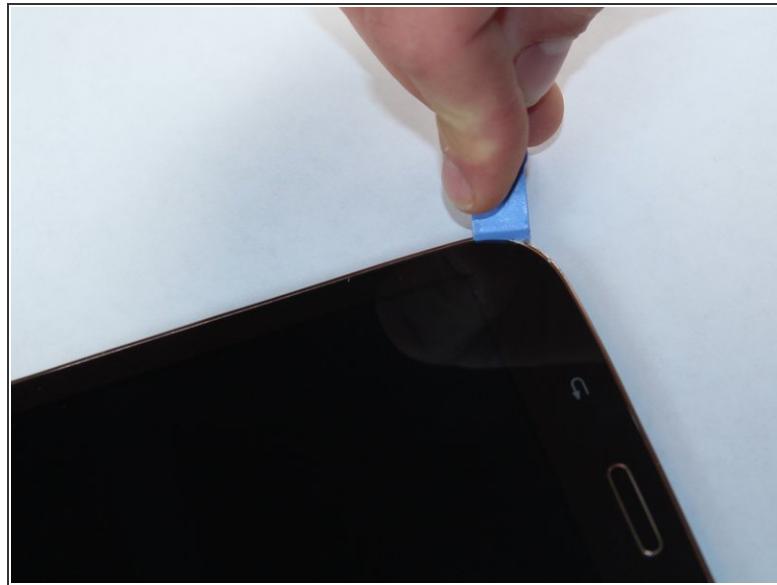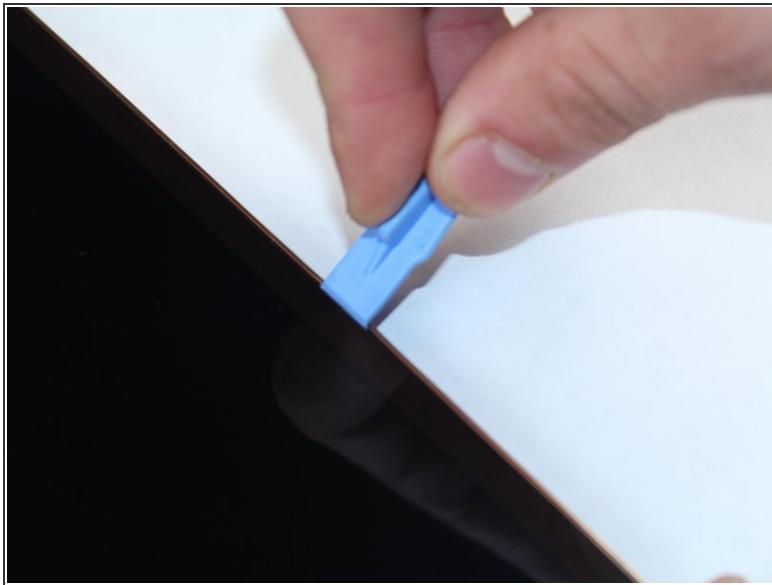

- Start out by separating the screen from the back cover using the larger plastic opening tool to pry them apart.



 Be careful when removing the screen as negligence can cause damage.

Step 2 — Remove Back Cover

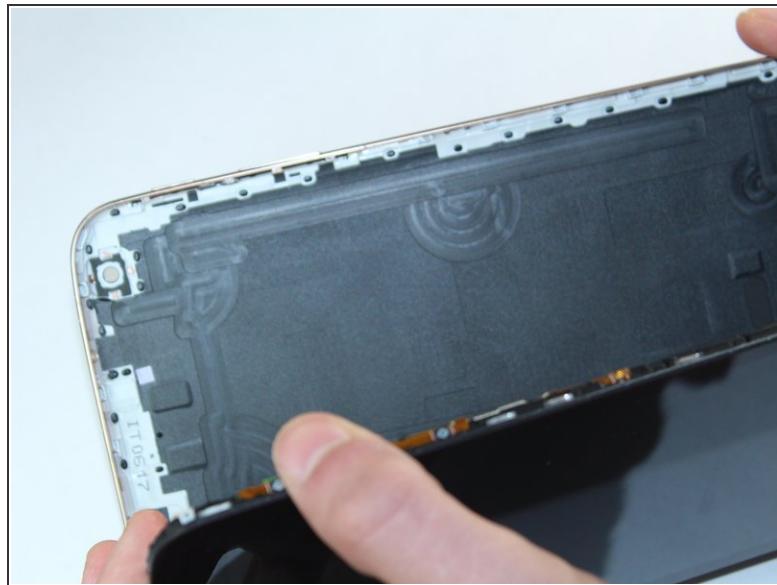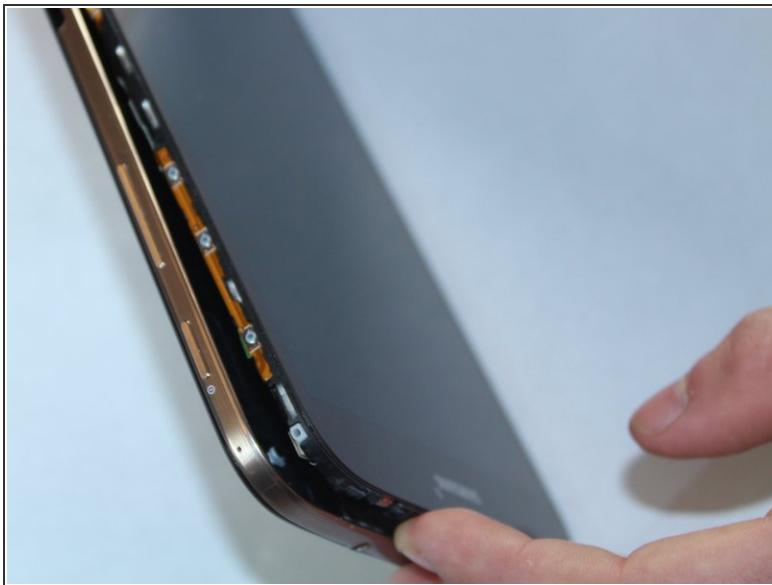

- Once every part of the screen is separated from the back cover, you should be able to fully remove it with your hands.

Step 3 — Disconnect Battery

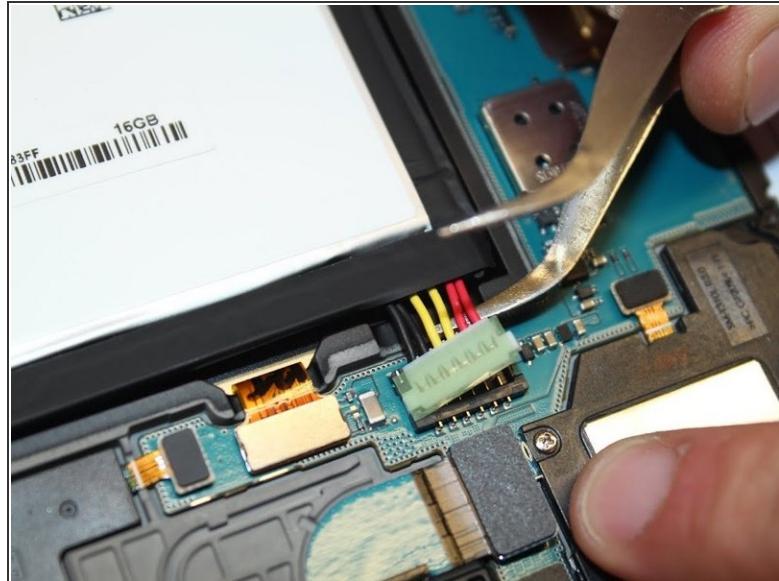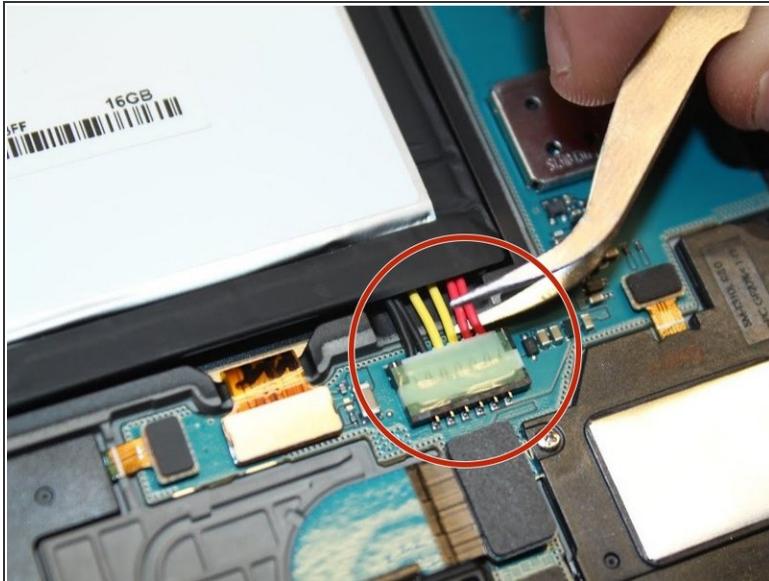

- To remove the battery you must use something small, such as tweezers, to disconnect the battery from its port.



(i) Note: the connection lifts up to remove.

Step 4 — Remove Battery






- After the battery is disconnected, use the pulling tab to safely remove the battery.

Step 5 — Disconnect Speakers

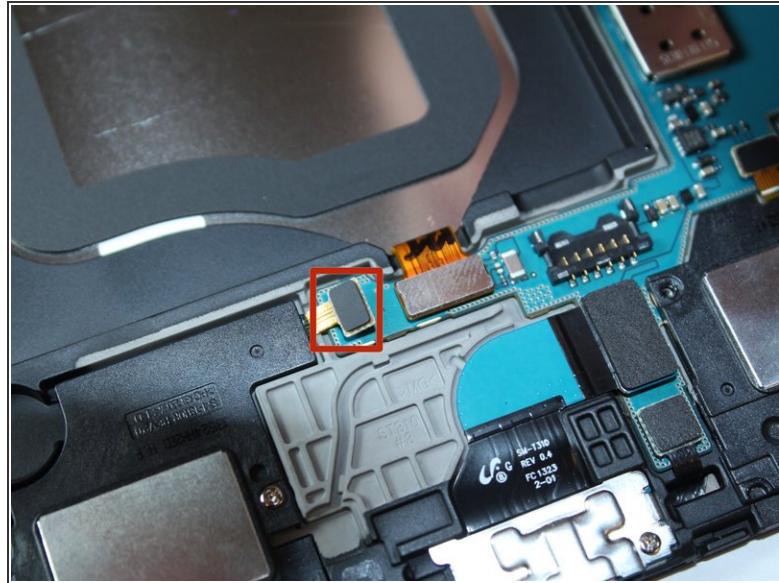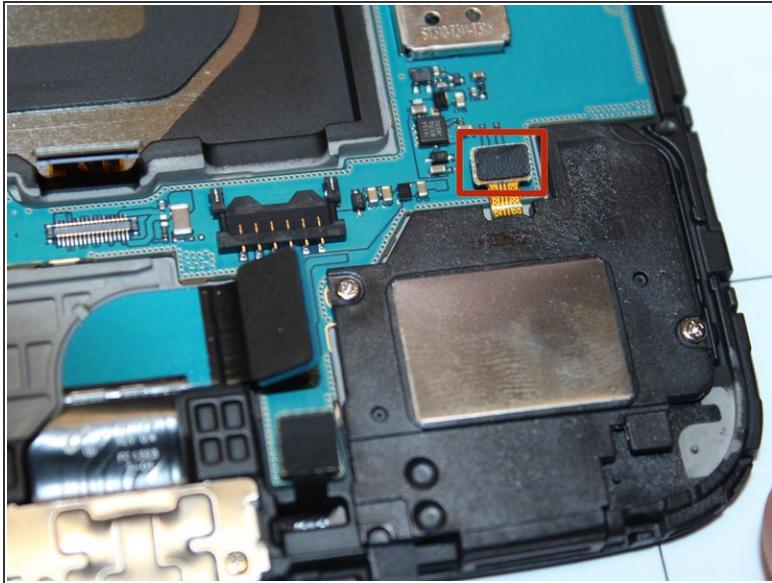

- Disconnect the relays attached to the motherboard.

Step 6 — Unscrew Speakers

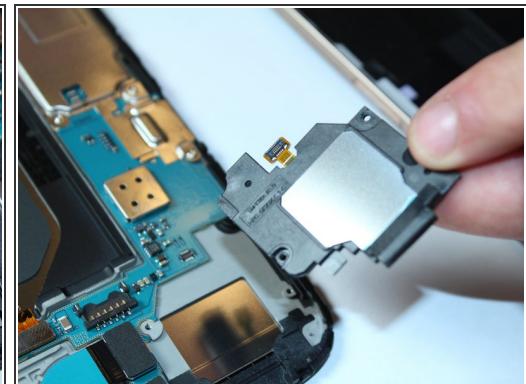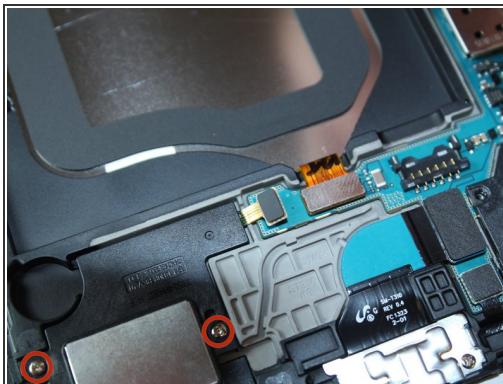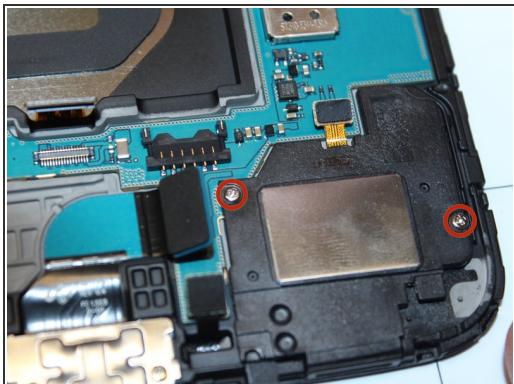

- Unscrew the 2.9mm screws from the speakers using a Phillips head #000 screwdriver, then lift the speakers from the device.

To reassemble your device, follow these instructions in reverse order.