




# Samsung Galaxy Tab 4 7.0 Screen Replacement

If your Samsung Galaxy Tab 4 7.0 screen is shattered, it can be replaced, with some patience.

Written By: Aubrey Goodwin

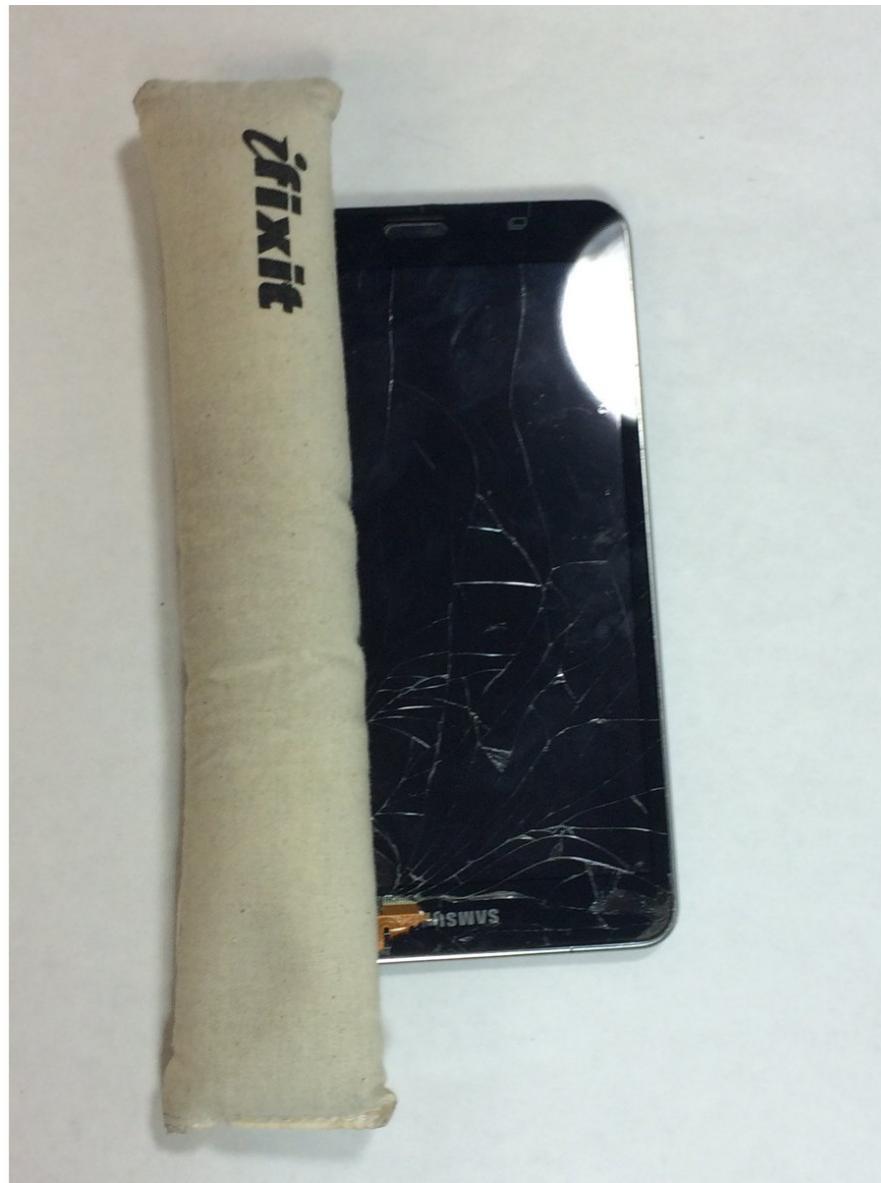

## INTRODUCTION

If you don't have the heating pad available, either use a heat gun or a hair dryer with a high heat setting.


### **TOOLS:**

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [iOpener](#) (1)
- [Spudger](#) (1)

### **PARTS:**

- [Galaxy Tab 4 7.0 Screen](#) (1)

## Step 1 — Back Panel

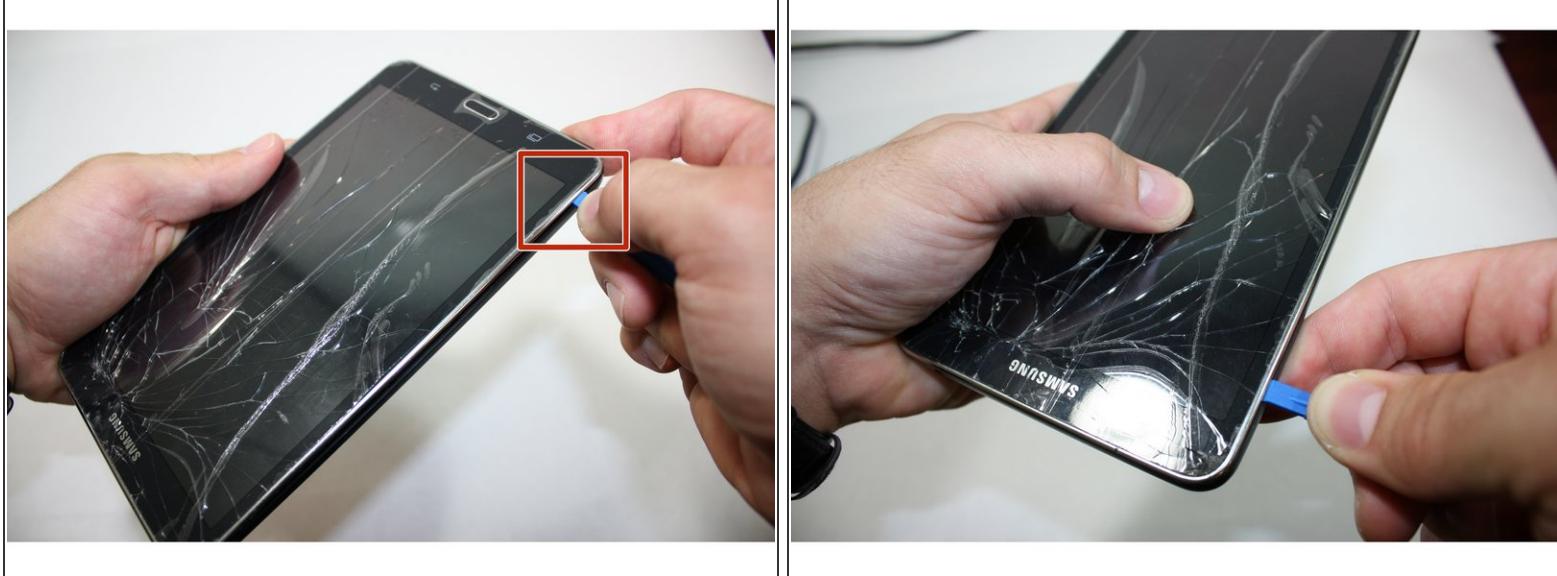


- Starting at any corner, insert the pry tool between the chrome screen frame and black phone housing.
- Slide the pry tool around the tablet while applying force to pry the screen away from the phone housing.

## Step 2




- Carefully separate the rear housing from the front panel assembly.

## Step 3 — Motherboard

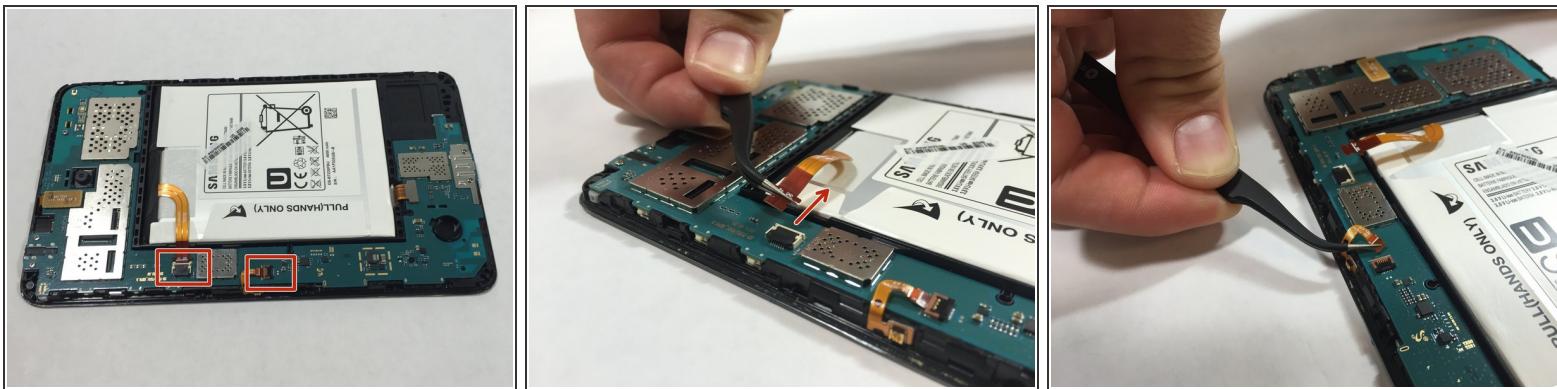


- Using the bent tweezers, carefully pull the flat cables away from the connectors.
- ⚠** Do not bend the flat cables at the tips as they may become permanently deformed.

## Step 4

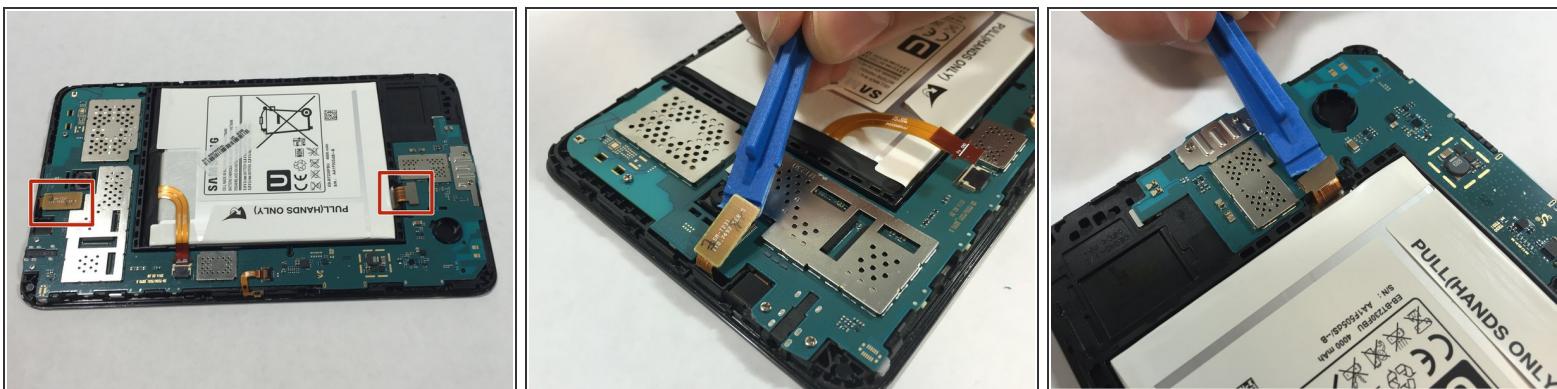


- Using the plastic opening tool, gently pry the chip connections away from the motherboard.

## Step 5

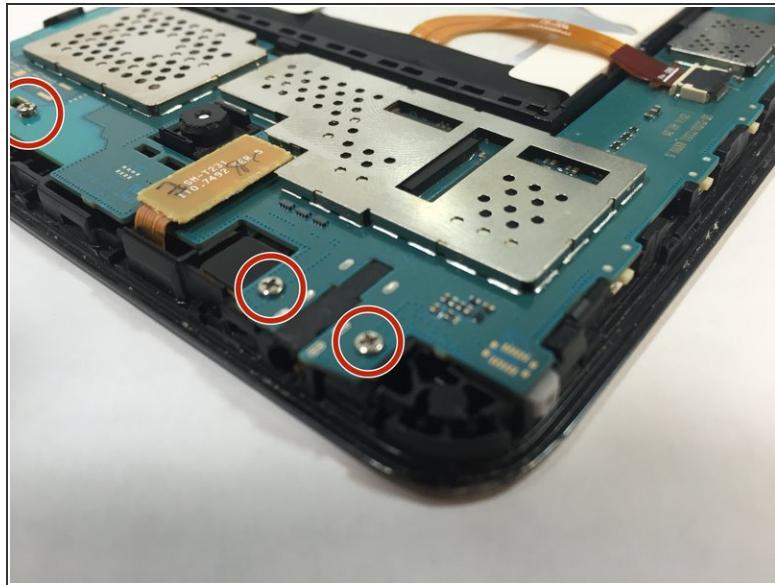

- Use the Phillips 000 screwdriver to remove the remaining five 1.2 mm screws.


## Step 6

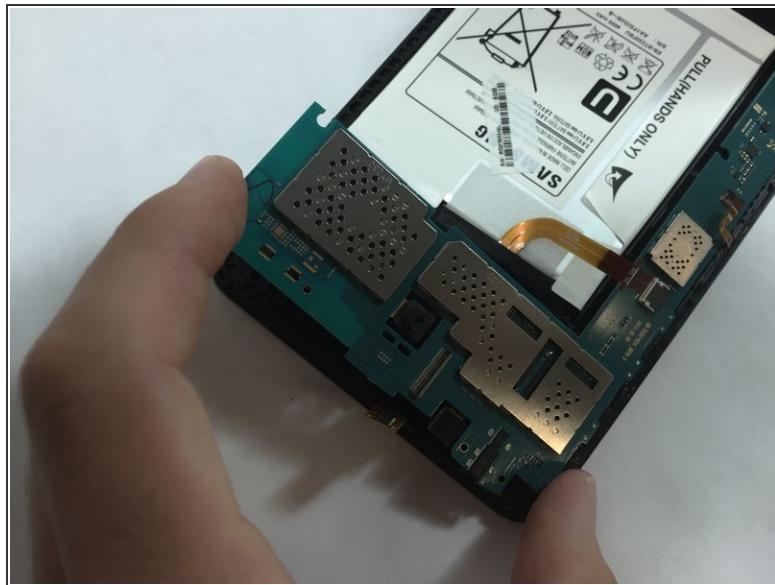

 Use extreme care while removing the motherboard to avoid damaging the component.


- Remove the motherboard by rotating it away from the rest of the phone as shown in the first photo.

## Step 7 — Battery

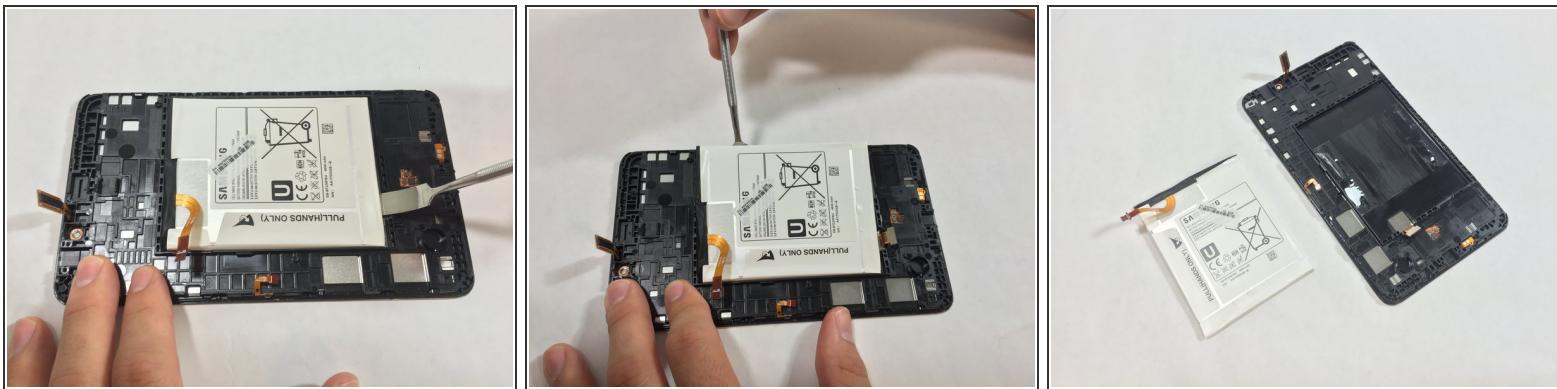

- You do not need to remove the motherboard in order to remove the battery as the photos may indicate.
- Work the spudger underneath the battery as shown and pry the battery away from the phone case.
- The battery is attached to the case with adhesive, so a bit of force is required during removal.

## Step 8 — Screen

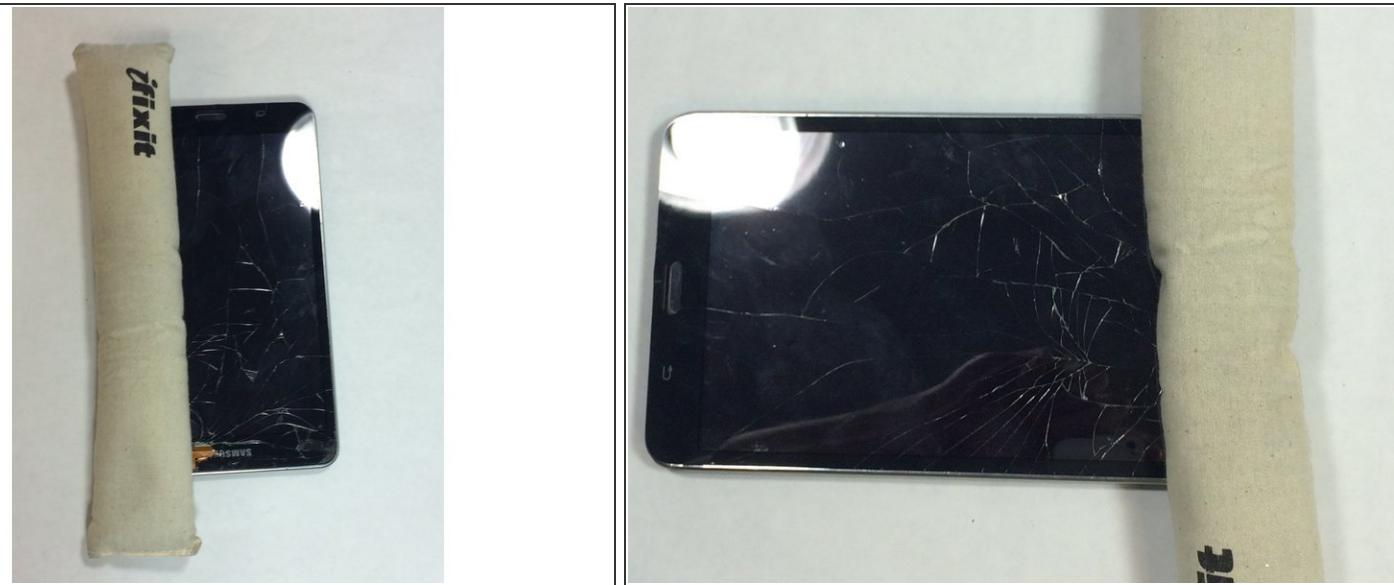


- Evenly heat the surface of the screen using your heating tool to loosen the adhesive that is holding the screen to the phone case.
- If using the heating pad, you may have to reheat it once or twice during this process.

If you're using a heat gun, avoid heating one spot for more than a few seconds.

This document was generated on 2020-02-23 11:46:00 AM (MST).




## Step 9

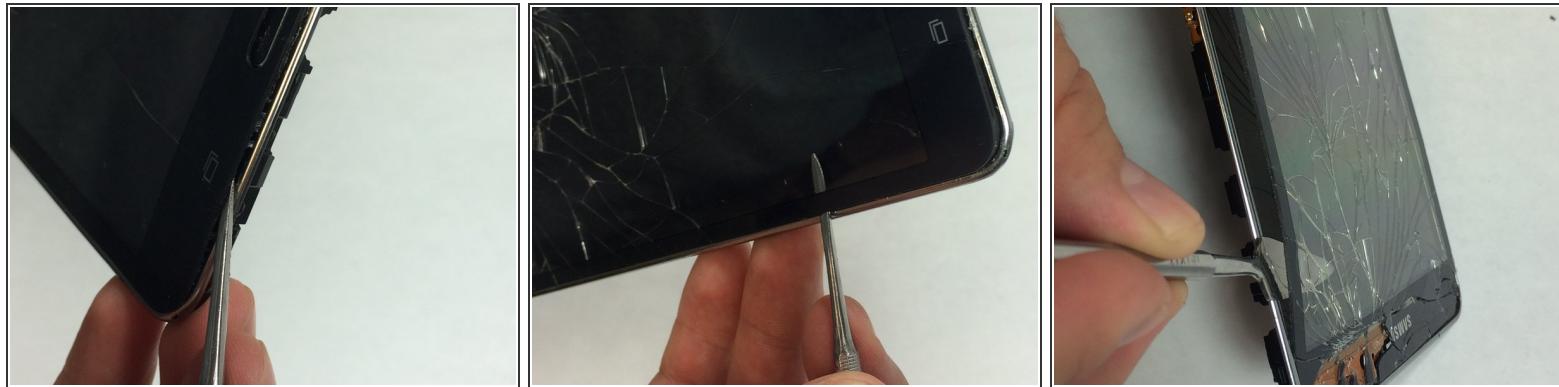

- Carefully insert the spudger between the glass and the chrome outer frame of the tablet.
- Now, slowly pry your way around the screen to loosen the glass from the frame.

## Step 10

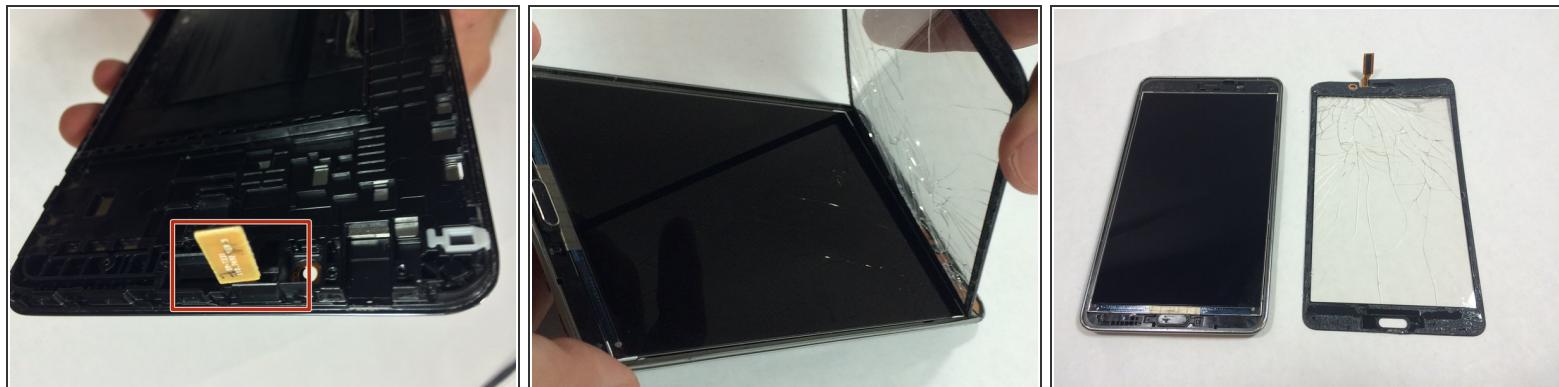

- After you've removed the glass from the screen, feed the chip connection through the phone casing.

*(i)* The screen may need a little more force to separate from the upper edge of the tablet.

To reassemble your device, follow these instructions in reverse order.