


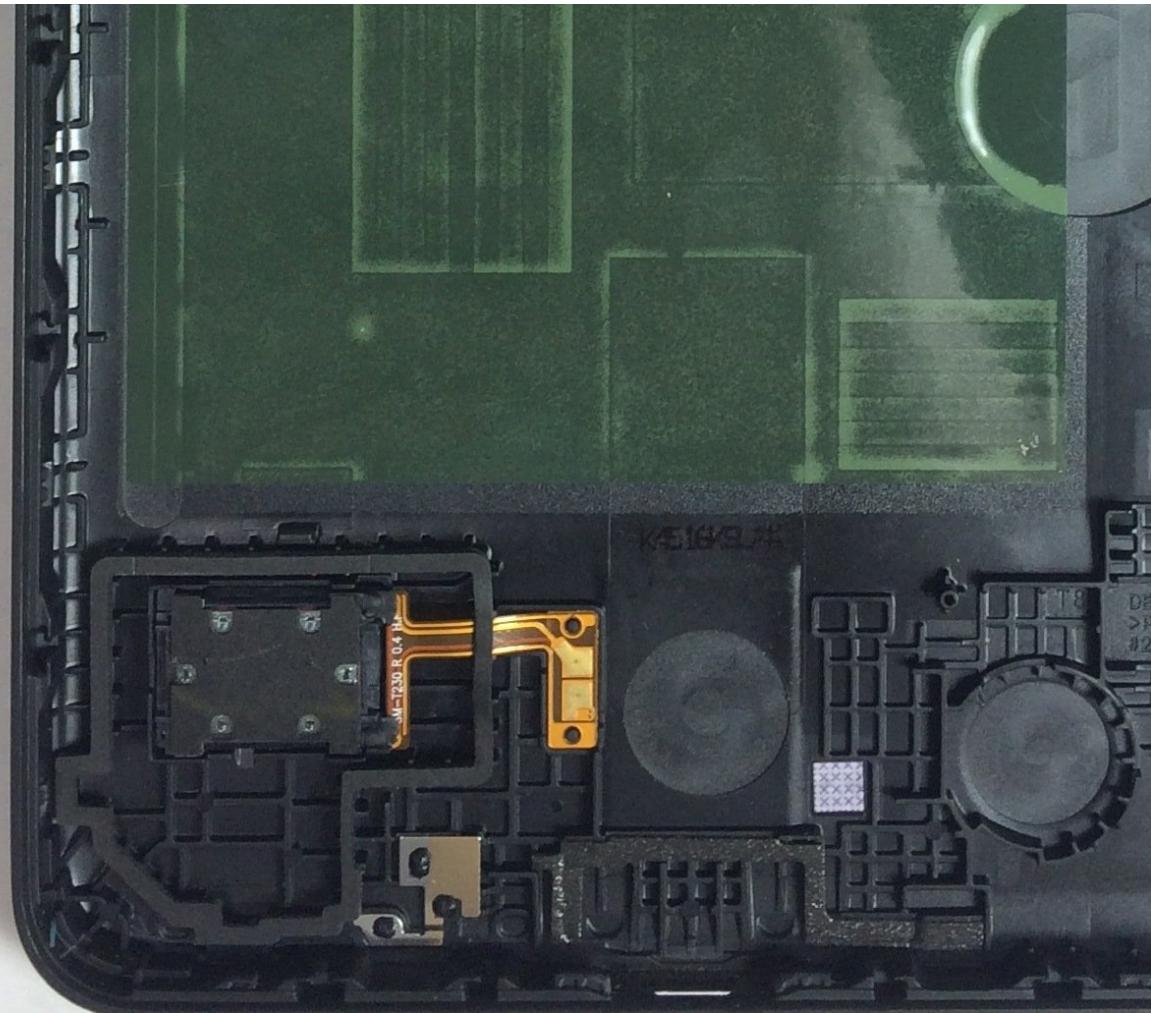

# Samsung Galaxy Tab 4 7.0 Speaker Replacement

The speaker may have taken a blow if the tablet was dropped. If so, it can be replaced through the instructions of this guide.

Written By: Aubrey Goodwin




## INTRODUCTION

The speaker replacement is relatively easy. It is attached to the back panel and does not require any attention with the motherboard.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

## Step 1 — Back Panel

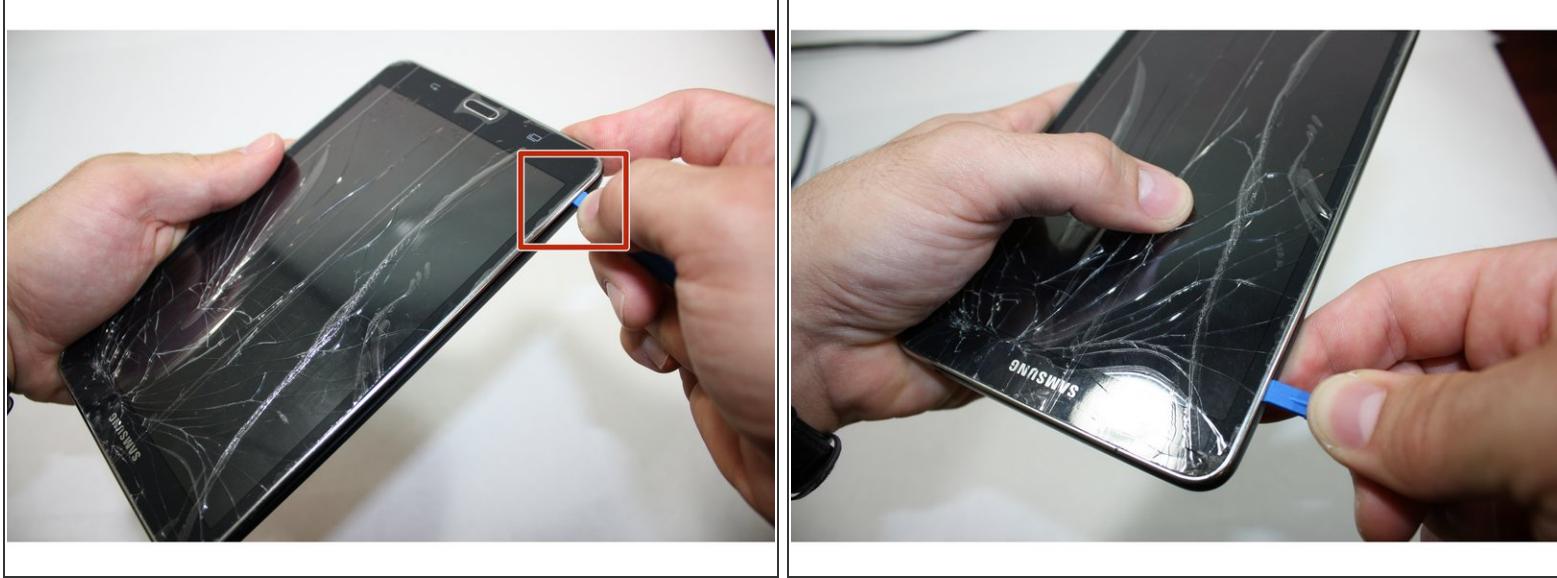


- Starting at any corner, insert the pry tool between the chrome screen frame and black phone housing.
- Slide the pry tool around the tablet while applying force to pry the screen away from the phone housing.

## Step 2




- Carefully separate the rear housing from the front panel assembly.

## Step 3 — Speaker

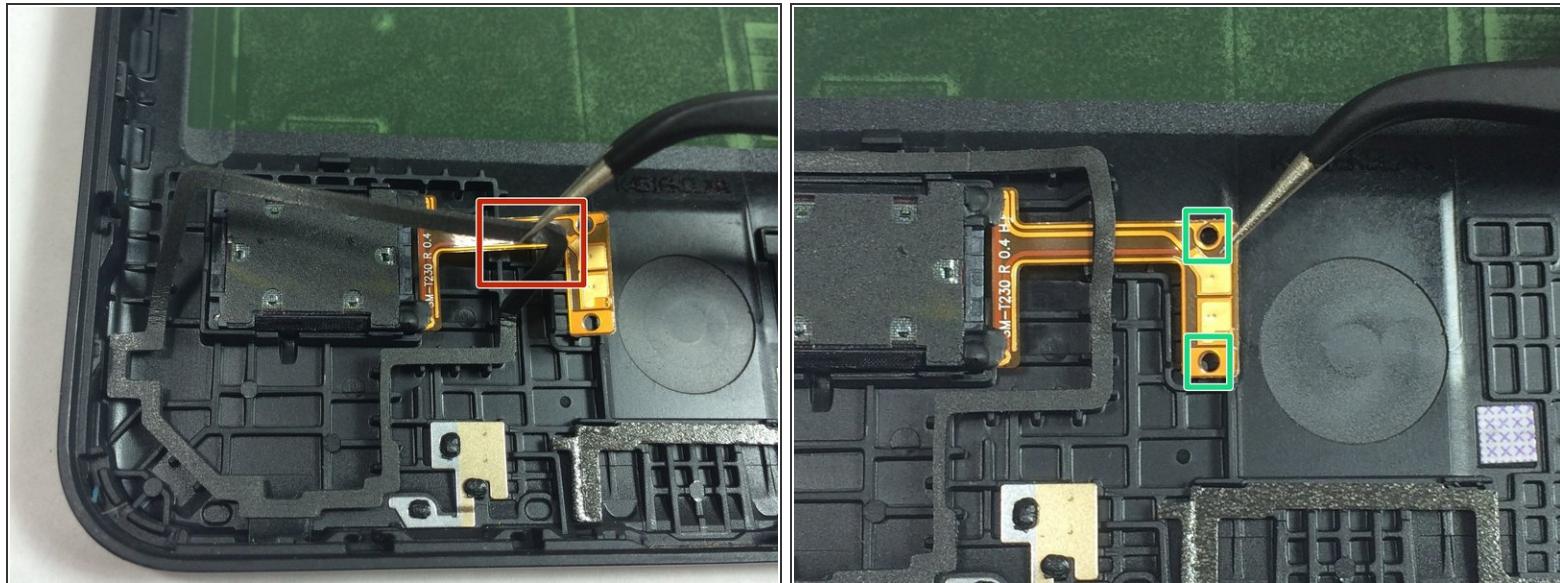

- In order to separate the speaker connection, you must first peel back part of the surrounding water gasket.
- With the tweezers, grab the overhanging corner and peel the gasket back slowly.
- If you look closely, you will see the two slots indicated. Use the tweezers to lift this portion of the connection away from these slots.

## Step 4

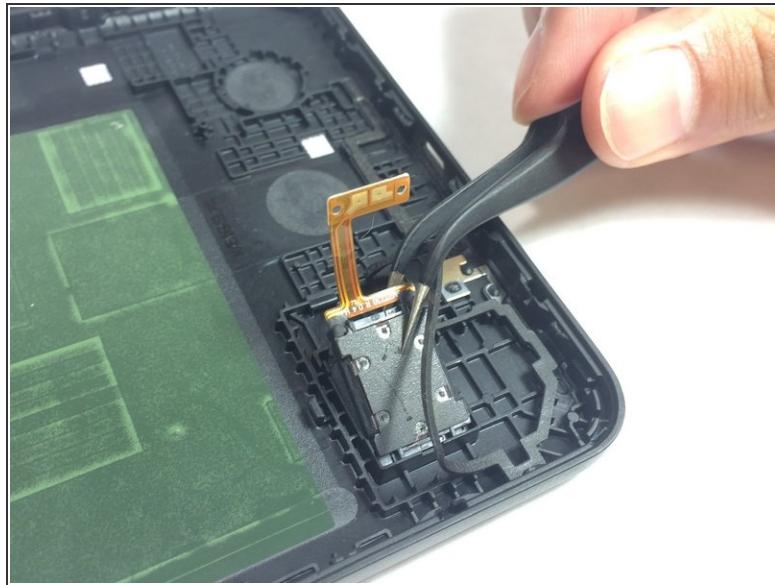

- Now you should be able to lift the speaker out of it's small fitting with the tweezers.

To reassemble your device, follow these instructions in reverse order.