




Samsung Galaxy Tab E Lite 7 Kids Speaker Replacement

This replacement guide will show you how to replace the speaker in your Samsung Galaxy Tab E Lite 7 Kids.

Written By: Nicholas Nolan

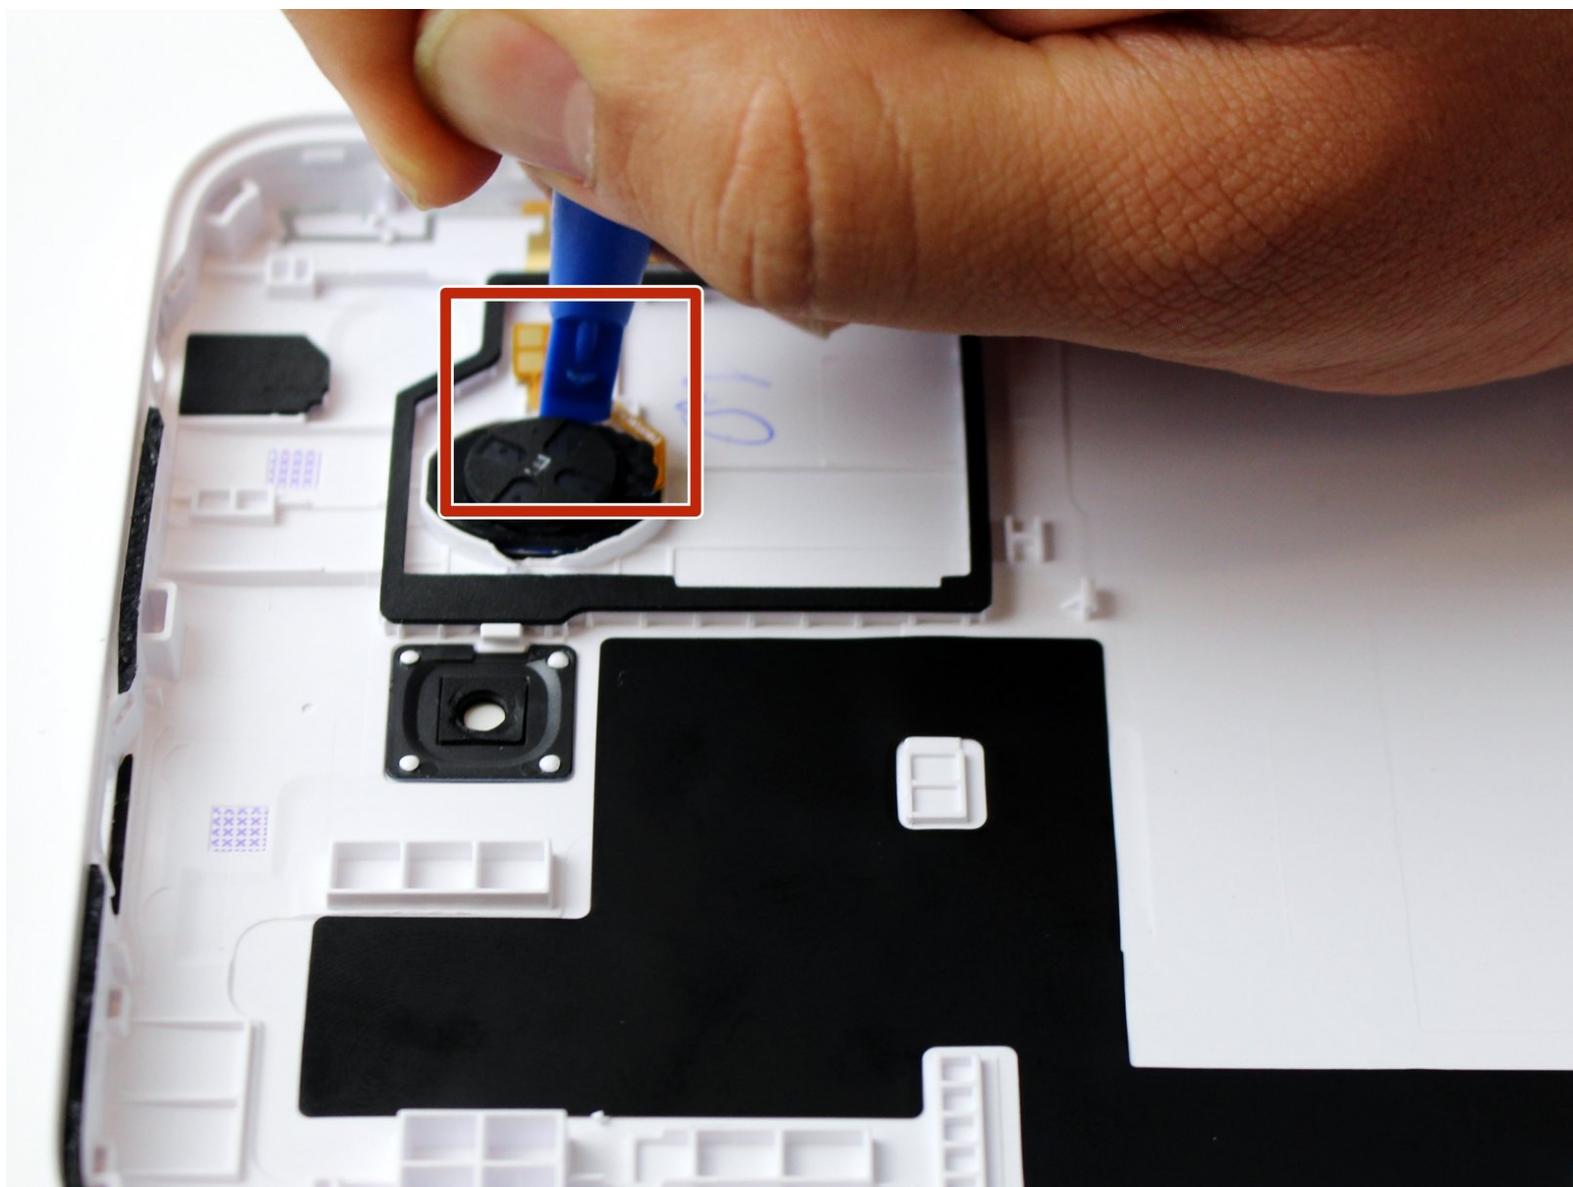

This document was generated on 2019-10-04 09:38:42 AM (MST).

INTRODUCTION

This replacement guide will show you how to replace the speaker in your Samsung Galaxy Tab E Lite 7 Kids. You will need to follow the instructions carefully as to not damage any fragile components in your tablet.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Rear Case



 Make sure the device is turned off before attempting to disassemble it.


- Using a plastic opening tool, wedge in the seam between the screen and the case.
- Rock the tool by moving it towards and away from the middle of the screen, trying to separate the tape holding the screen and case together.

Step 2



- After separating the latches holding the screen and case together, slowly take the screen off the case.

Step 3 — Speaker

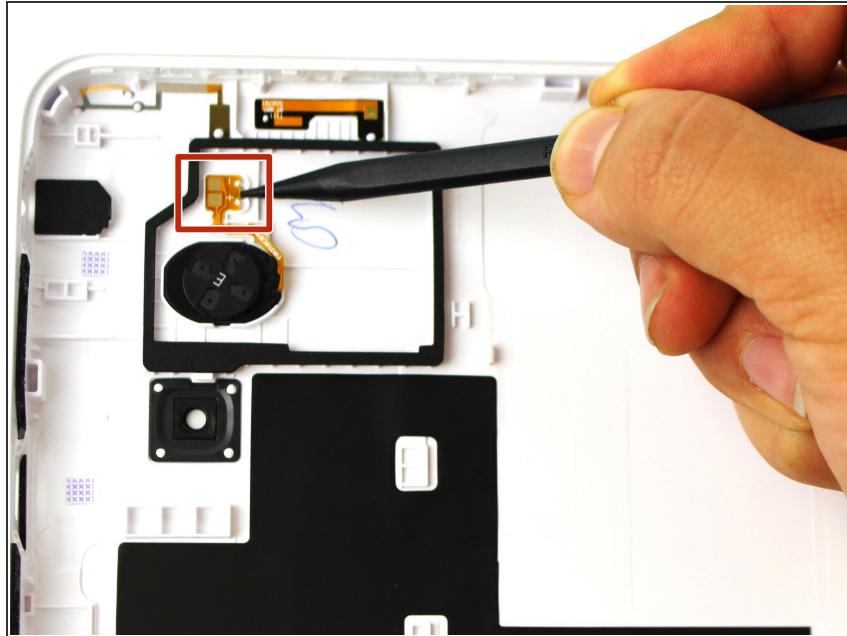

- Using a spudger, pry up the speaker ribbon cable.

Step 4



- Using the plastic opening tool, place it on the opening in the plastic around the speaker.
- Pry the speaker out of its seat.

To reassemble your device, follow these instructions in reverse order.