



# Samsung Galaxy Tab S2 SD Card Replacement

Replacement of a micro SD card

Written By: Jovina Martinez



## INTRODUCTION

If you need additional space to hold data like music, photos or games (among other things) you may need to insert an SD card into the device.

### **TOOLS:**


- [SIM Card Eject Tool \(1\)](#)

## Step 1 — SD Card



- Locate the small hole on the right side of the device.

## Step 2

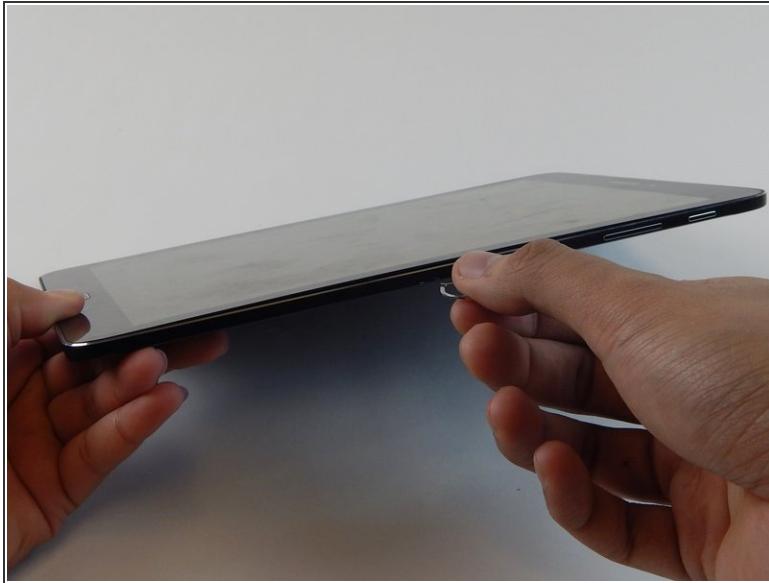

- Using the tool supplied with the Galaxy Tab, insert the pointed end into the hole on the side of the device.
- Apply pressure until the plastic SD card slot pops out.
- Gently pull out the plastic insert completely.

This document was generated on 2019-10-02 02:48:08 PM (MST).

## Step 3



- Insert the Micro SD Card in the plastic insert, and replace it into the device.

***i*** This device can only handle SD cards with memory up to 64 GB.

To reassemble your device, follow these instructions in reverse order.