



# Samsung Gear 360 Speaker Replacement

Use this guide to remove the speaker from the Samsung Gear 360.

Written By: Aidos Duisembayev



## INTRODUCTION

Use this guide to remove the speaker from the Samsung Gear 360. You will need to complete an almost full tear-down of the device to get to the speaker, but you can safely remove it after separating the two cases.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [1.0 mm Flathead Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Case



- Twist silver ring on the lens counter-clockwise with force to remove it.

## Step 2

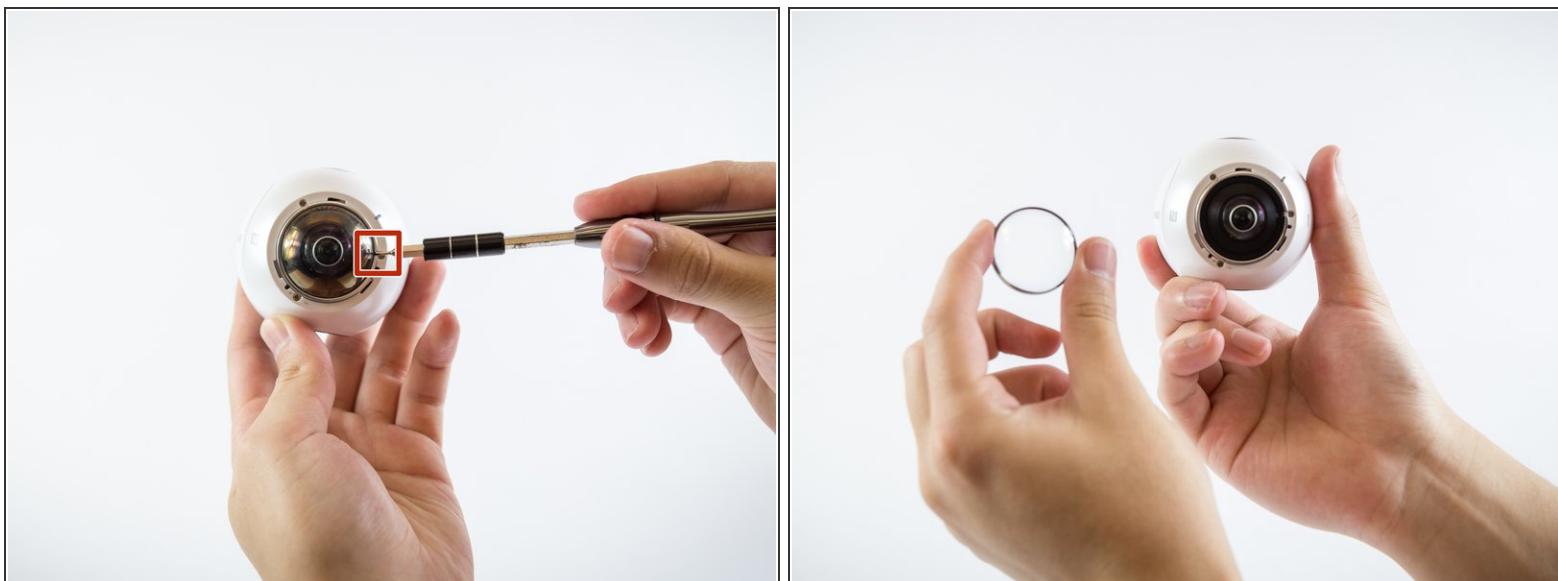

- Insert a small flathead screwdriver into marked slot on camera lens and pry off camera lens cover.

## Step 3



- Using a PH00 screwdriver head, remove all Phillips #00 0.75 mm screws on the front of the camera.
- Repeat for the back side of the camera.

## Step 4




- Peel off the black rubber located on the bottom of the device using your hand or a small flathead screwdriver.

## Step 5




- Once the black rubber has been removed, unscrew all Phillips #00 0.75 mm screws on the bottom of the device using a PH00 screwdriver head.

## Step 6

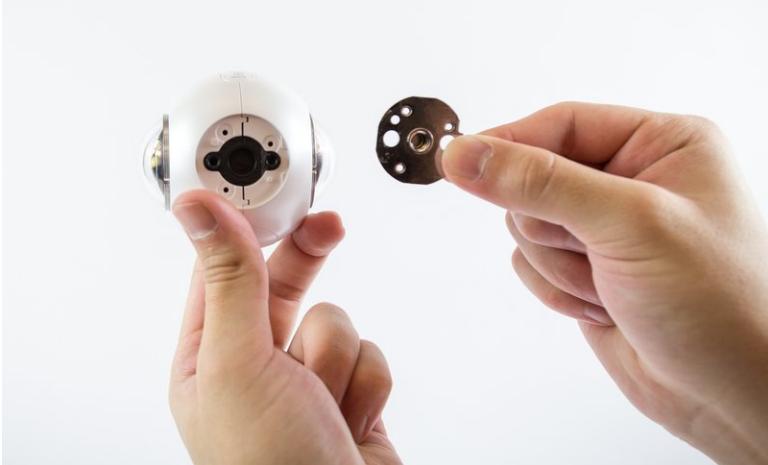


- Using a plastic opening tool, pry the tripod mount off the device.

## Step 7

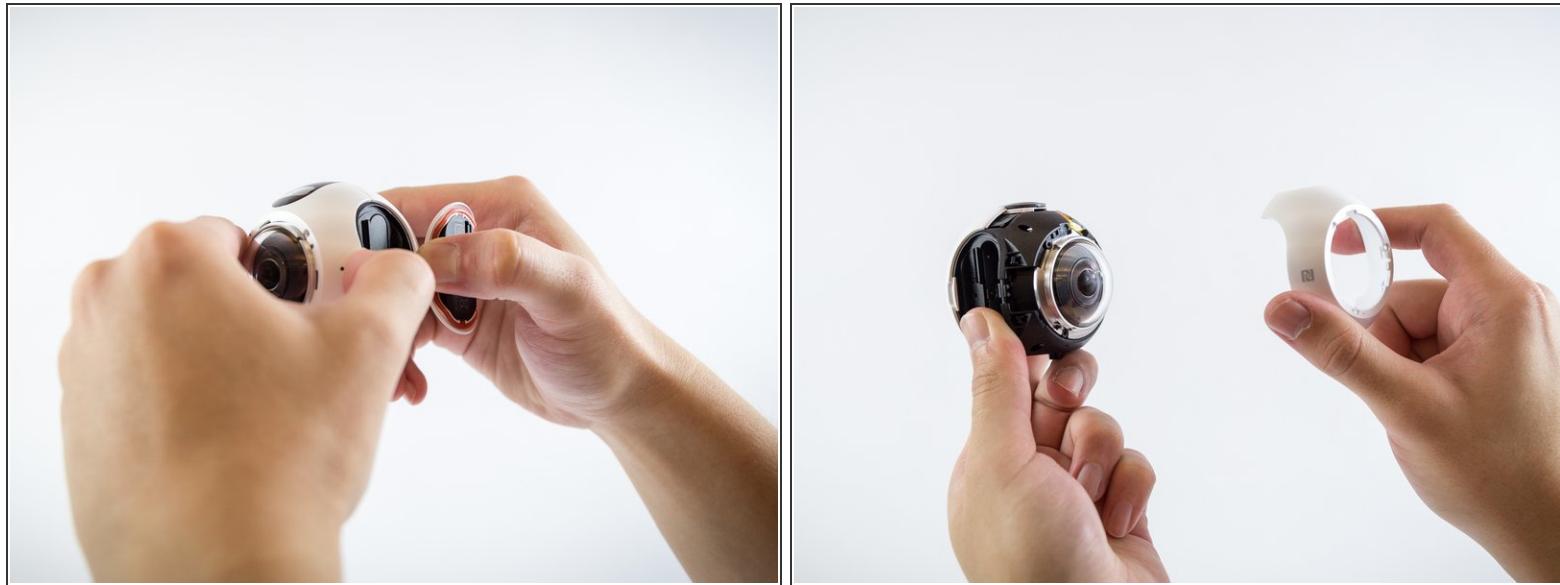


- Using both hands, carefully remove the right cover off the camera body.

## Step 8

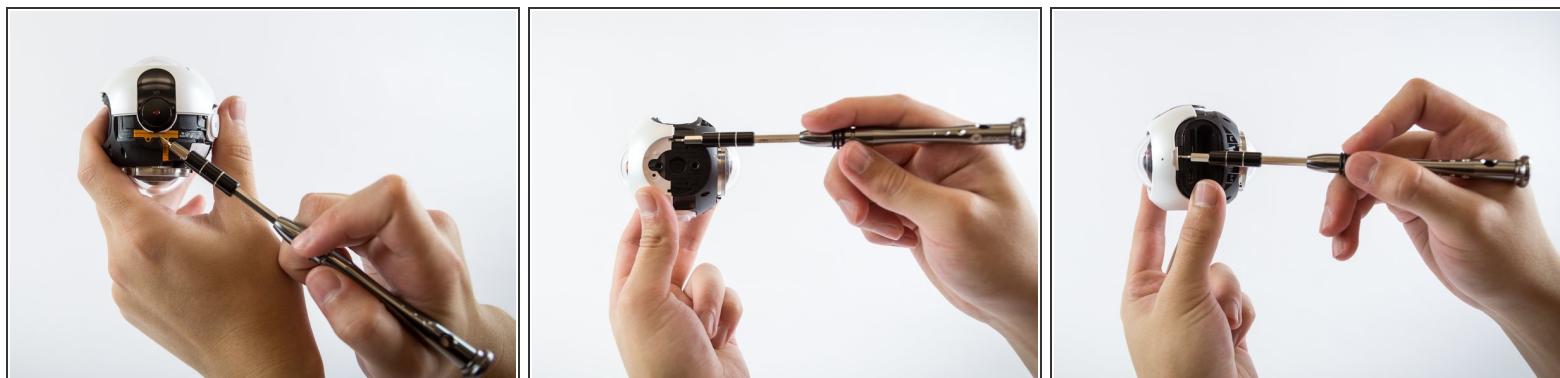

- To remove the left cover of the camera body, lift the left cover using a small flathead screwdriver and pull it off.

## Step 9

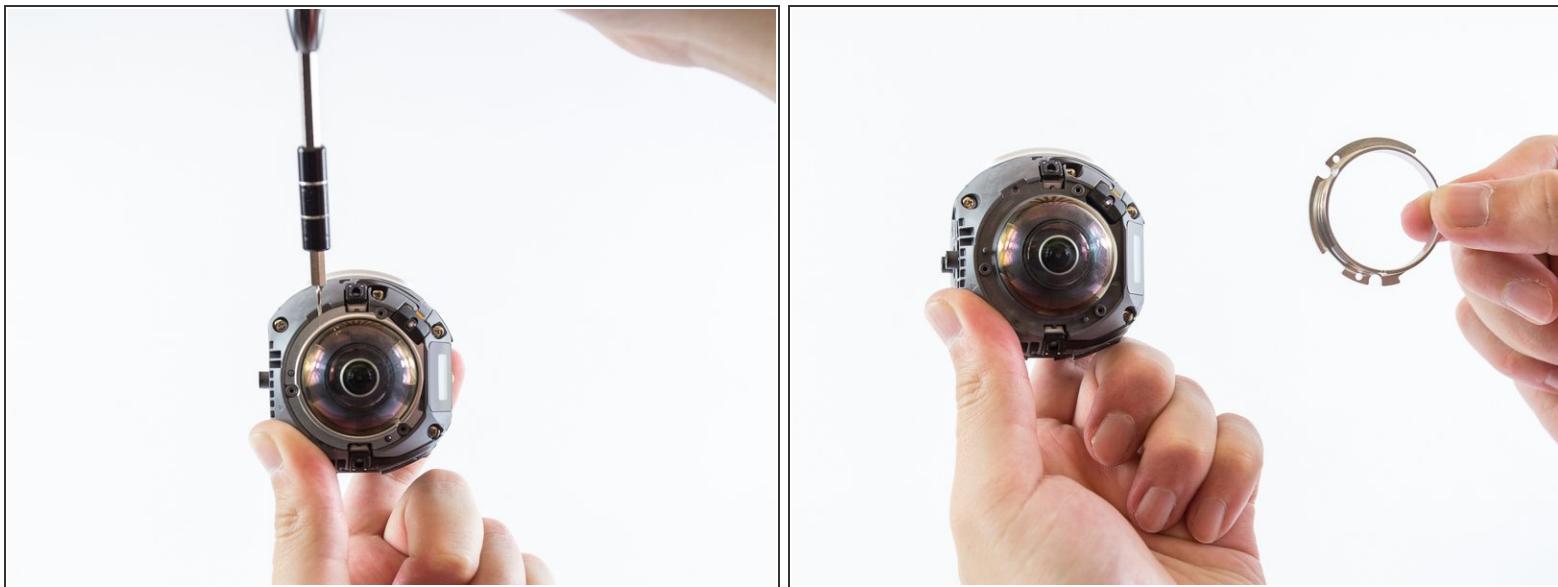

- Once the camera body has been removed, lift and pull off the metal support ring using a small flathead screwdriver.
- Repeat for both sides of the camera.

## Step 10




- Remove all Phillips #00 0.75 mm screws from the body of the camera using a PH00 screwdriver head.

## Step 11




- Carefully lift the three sensors off using a plastic opening tool and pull them aside.

## Step 12

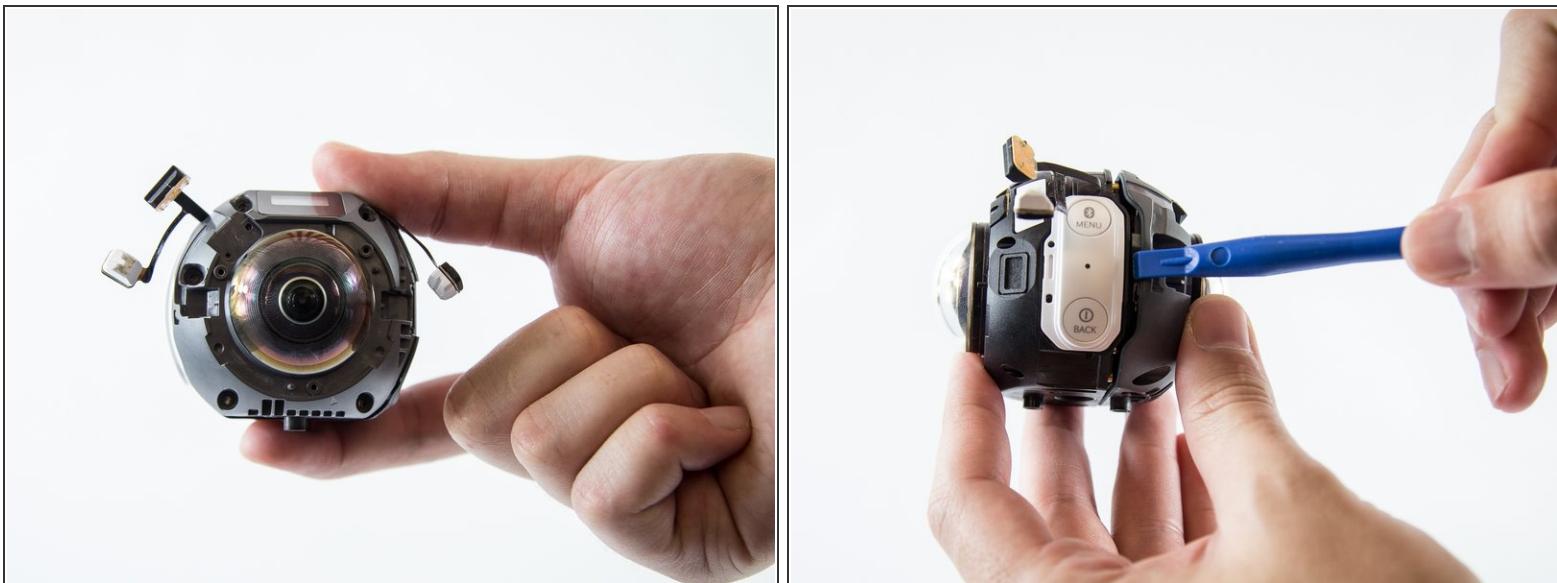


- Carefully use a plastic opening tool to separate the gray case from the black case on the device.

## Step 13

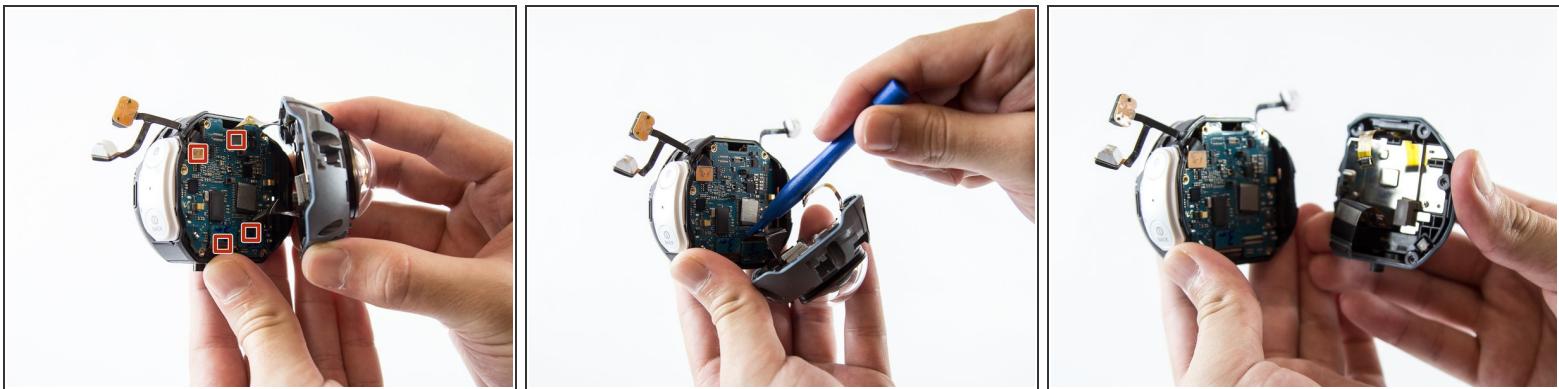


- Insert a plastic removal tool underneath the four sensors on the motherboard to fully separate the camera case.

## Step 14 — Speaker

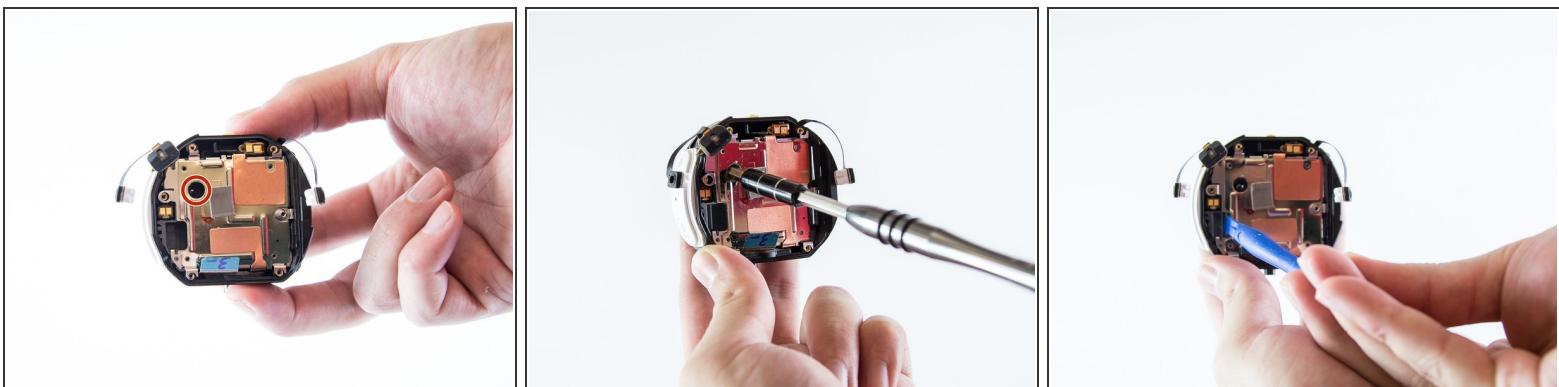

- Within gold metal half of the case, unscrew the Phillips #00 0.75 mm screw located on the metal plate using a PH00 screwdriver.
- Using a plastic opening tool, remove the metal cover.

## Step 15

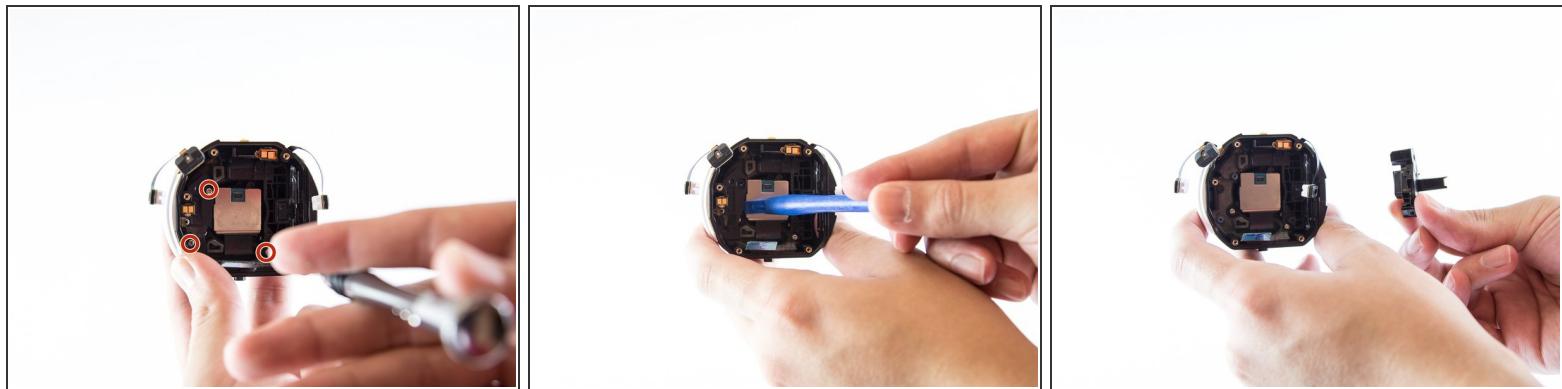

- Using a PH000 screwdriver head, unscrew all Phillips #00 0.75 mm screws.
- To remove the speaker from the device, use a plastic opening tool on the edge and gently lift it up.

To reassemble your device, follow these instructions in reverse order.