



Samsung Gravity TXT microSD Card Replacement

Use this guide to replace the microSD memory card.

Written By: Mounir Karmada



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery




- Pry the back cover off with a plastic opening tool, or your fingernail, in the indentation on the bottom of the device.

Step 2



- Lift the back cover away from the main body of the phone.

Step 3

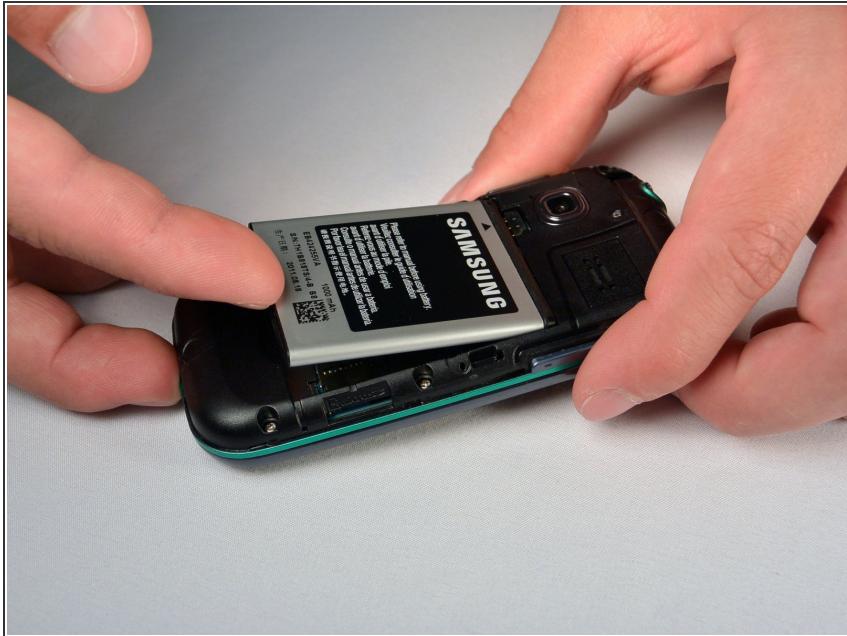

- Insert your finger in the groove below the battery.
- Press the battery toward the audio jack while lifting upward and away from the phone.

☞ Remember to place the battery back with the copper contacts on the battery lined up with those on the phone.

Step 4 — microSD Card



- Using your fingernail, push the microSD card slightly deeper into the slot, until you hear a click.
- The removal of the battery is not required for this operation; therefore, step 3 can be skipped if just replacing the microSD card.
- After the click, release the microSD card to allow it to pop out.
- Remove the microSD card from its slot

☞ When placing the microSD card back in the phone, make sure the card clicks in place.

To reassemble your device, follow these instructions in reverse order.