




# Samsung HMX-W300 Front Case Replacement

How to replace the front case.

Written By: Robert

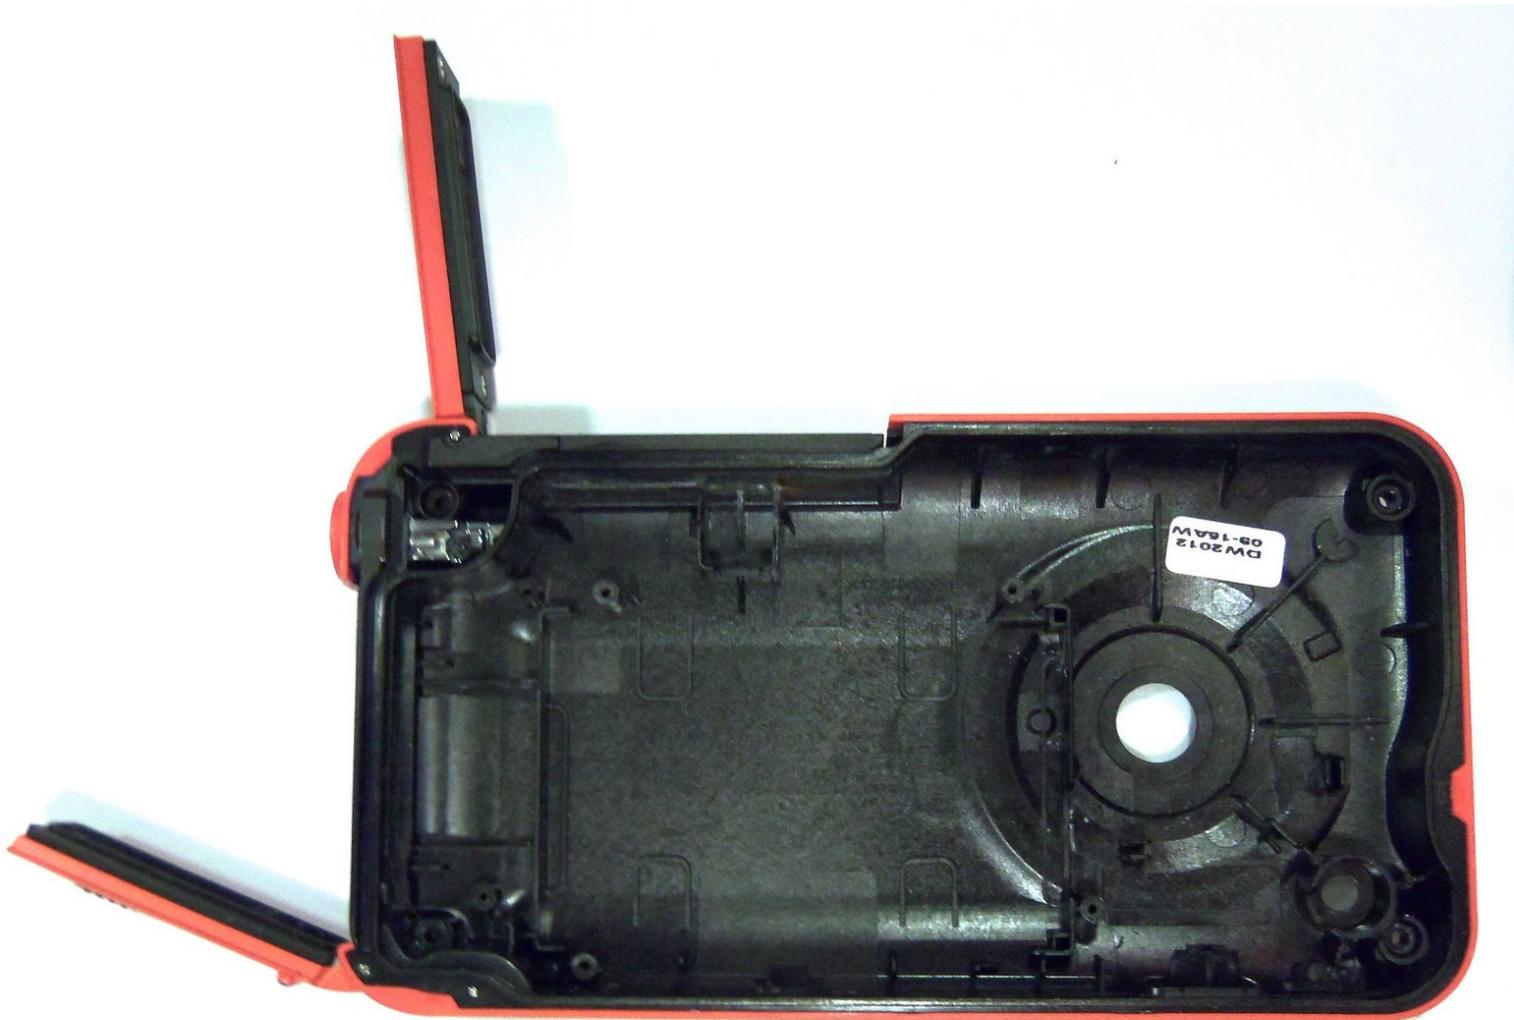


## INTRODUCTION

Demonstrates how to replace the front case of the camera through pictures and words. Replacement of the rear case requires disassembling battery housing and battery from front case.

### TOOLS:

- [1.5mm Hex Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Remove wristband

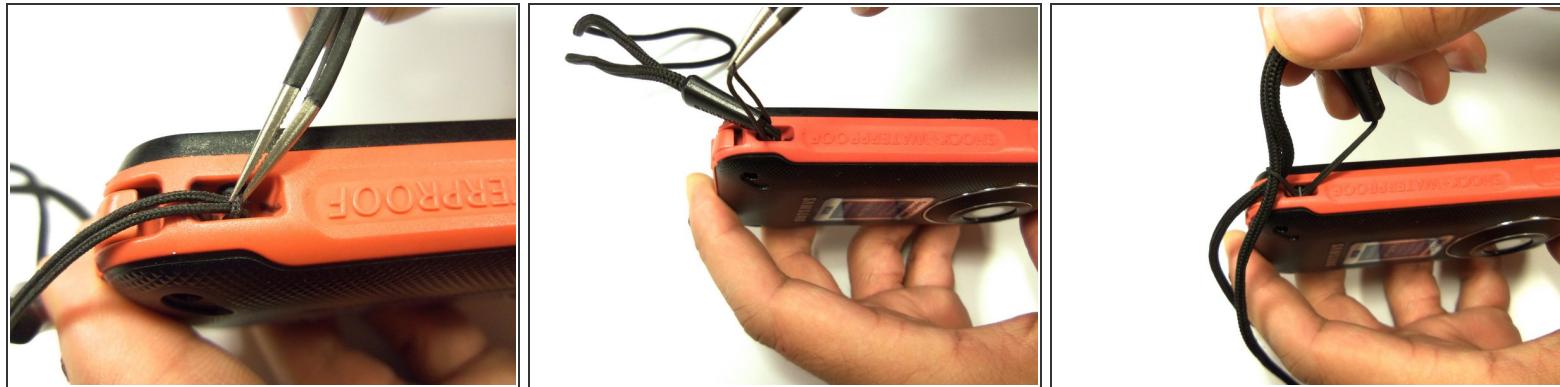

- To remove the wristband of the device, grab the middle loop and pull. Pull the band through as shown in the picture.

## Step 2 — Front case screw removal




- Remove all four Hex screws with a Hex 1.5 mm screwdriver.

### Step 3 — Remove HDMI screw



- To remove the HDMI screw, open the HDMI door on the side. Remove the screw using a Phillip size 00.


### Step 4 — Open front case.

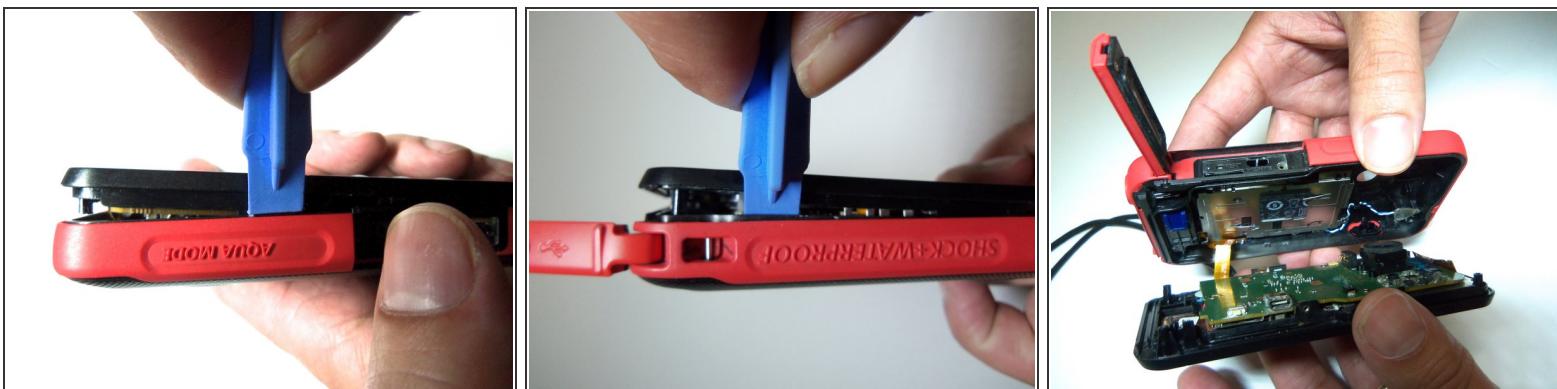

- As shown in the picture, use the plastic opening tool on both sides on the device. Pry apart both parts.


**⚠** Do not pry apart the device too hard. There is a wire that attaches the front case with the rear case.

## Step 5 — Unplug wire.

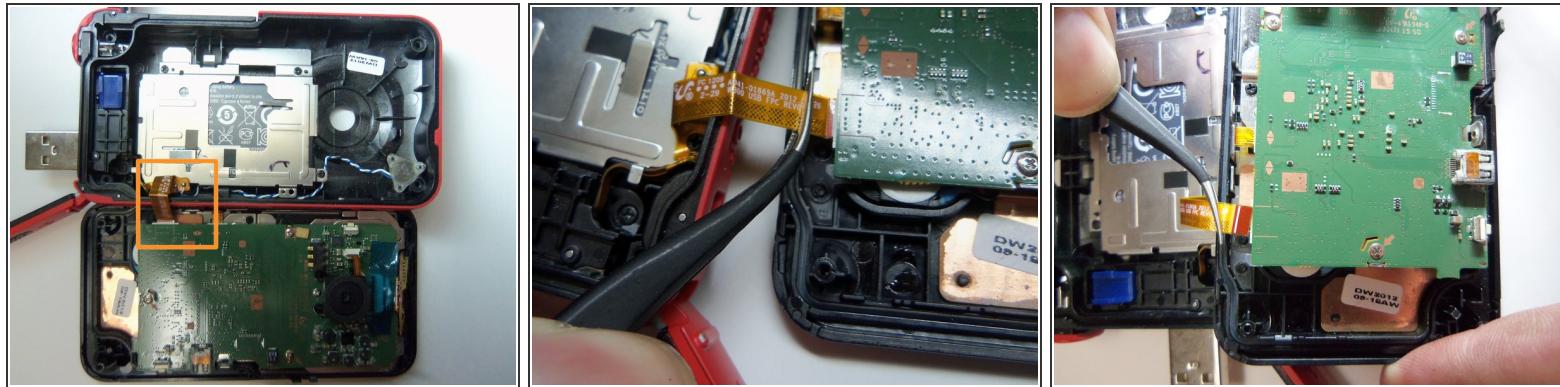


- Pull the wire ribbon out with a pair of tweezers.

## Step 6 — Battery screw removal

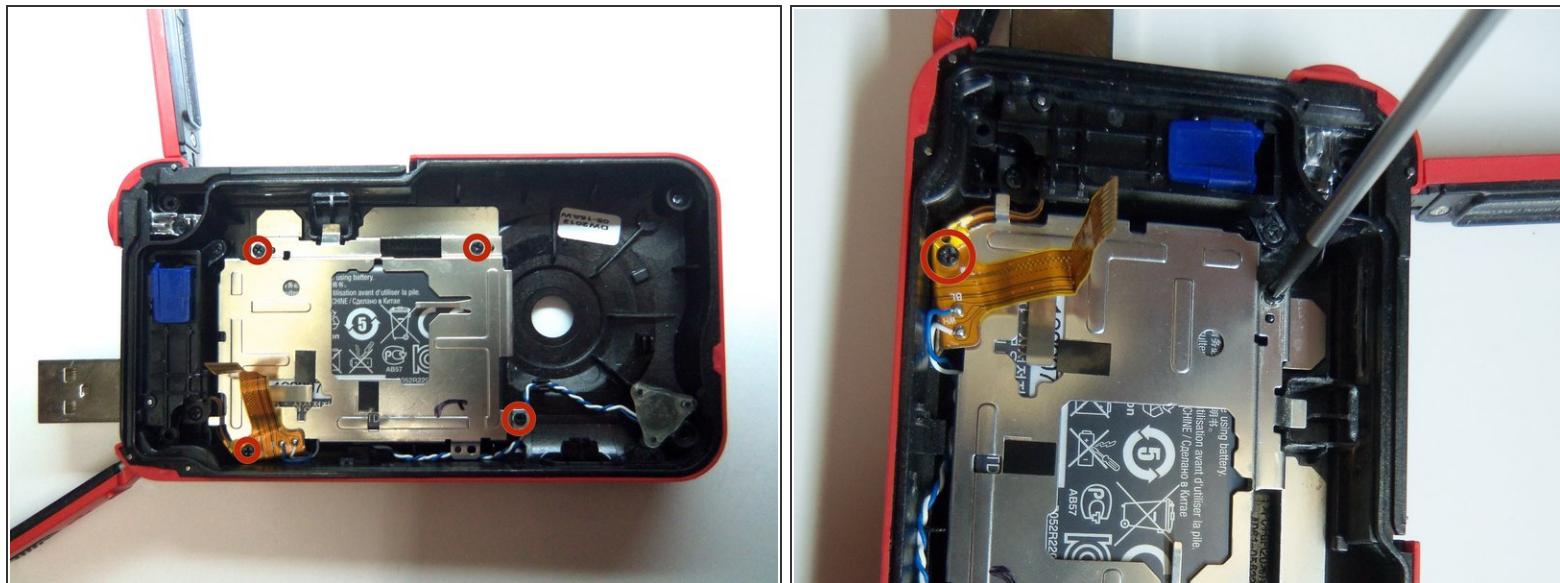


- To remove the battery housing, you must first use a Phillips size 00 to remove the 4 screws.

## Step 7 — Battery housing removal

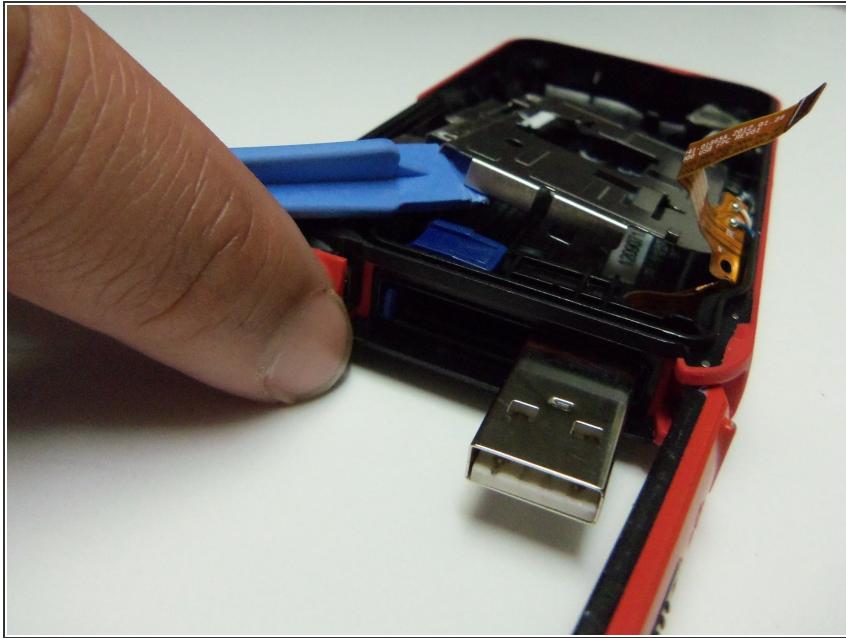

- Use the plastic opening tool to pry the battery housing open.

## Step 8 — Remove battery

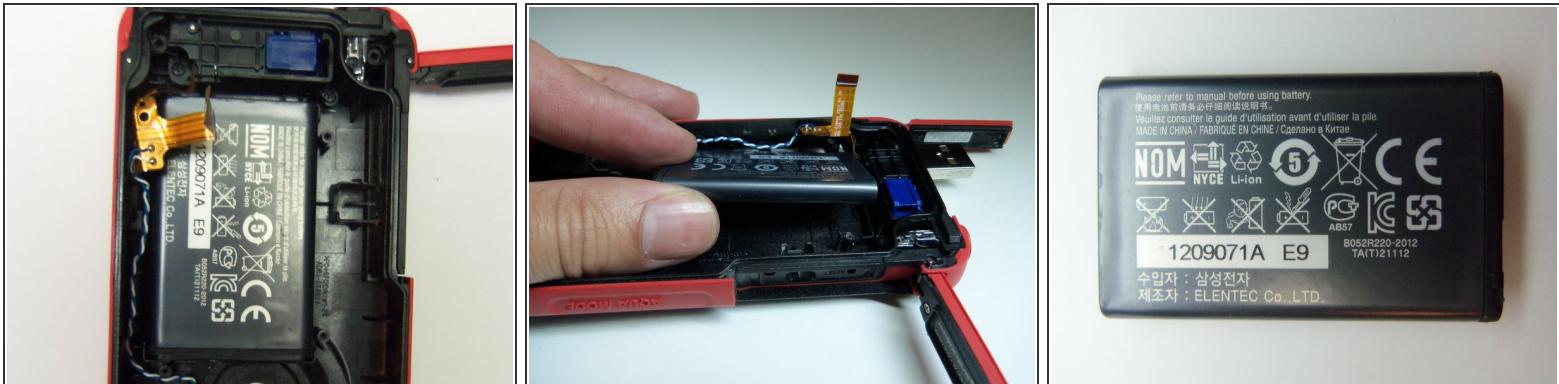

- After removing the battery housing, take the battery out.

## Step 9 — Location of USB screws and wire slots.




- Here highlighted are the two Phillips size 00 and the slots where the wire is held.

## Step 10 — Remove wire.





- Use plastic opening tool to pry the plastic cover as shown
- Use tweezers to remove the wire out of slots.

## Step 11 — Remove screw

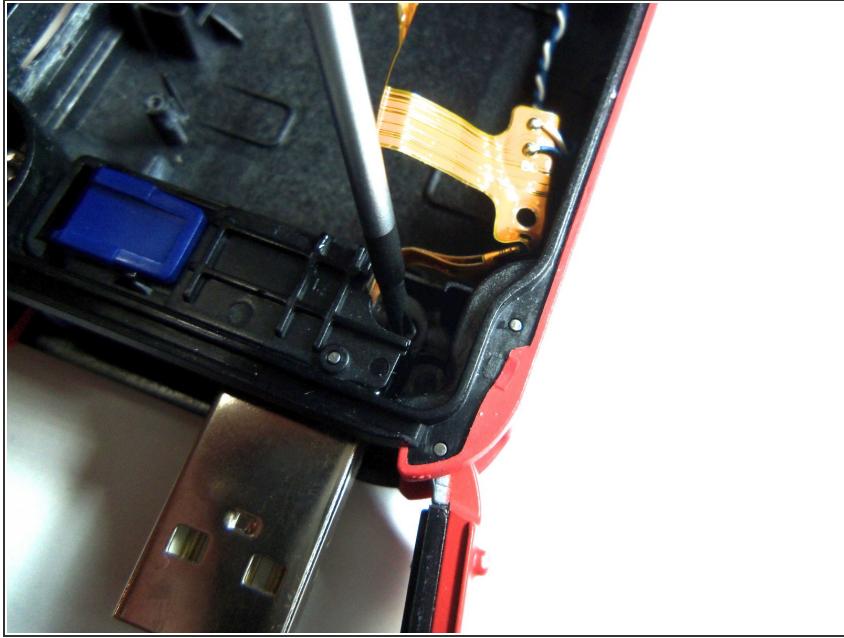


- Remove both Phillips size 00 on USB port.

## Step 12 — Removal of USB

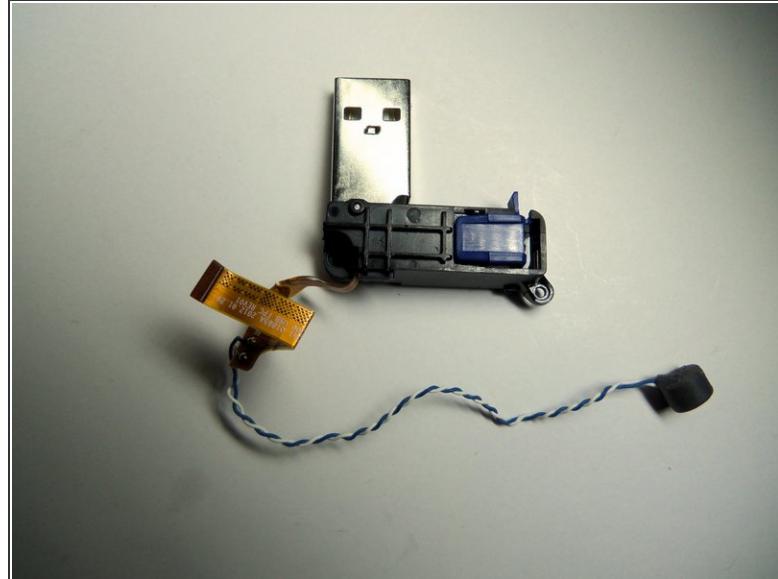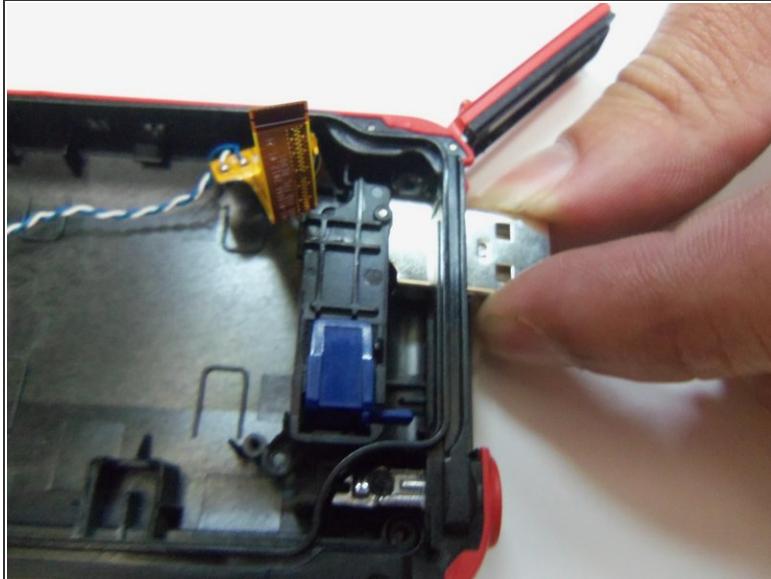

- Now push USB port inside the case to remove as shown.

## Step 13 — Replace front case

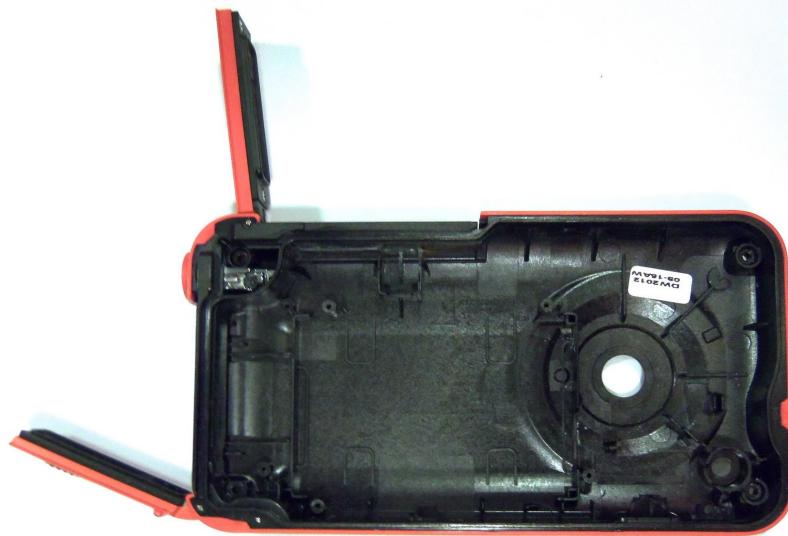

- Removal of the front case completed.

To reassemble your device, follow these instructions in reverse order.