



Samsung L100 camera lens replacement

Written By: Adriel



INTRODUCTION

If camera lens jams or breaks, this guide will help you replace it.

TOOLS:

- Phillips #0 Screwdriver (1)
- Tweezers (1)

PARTS:

- Samsung L100 Camera Lens (1)


Step 1 — Removing Back Cover



- Remove the **six** external screws from the camera using a **Phillips #0** screwdriver.
- After the screws has been removed, the bottom of the back half of the external case should be loosened from the camera.

 Be careful, make sure you don't lose the screws.

Step 2

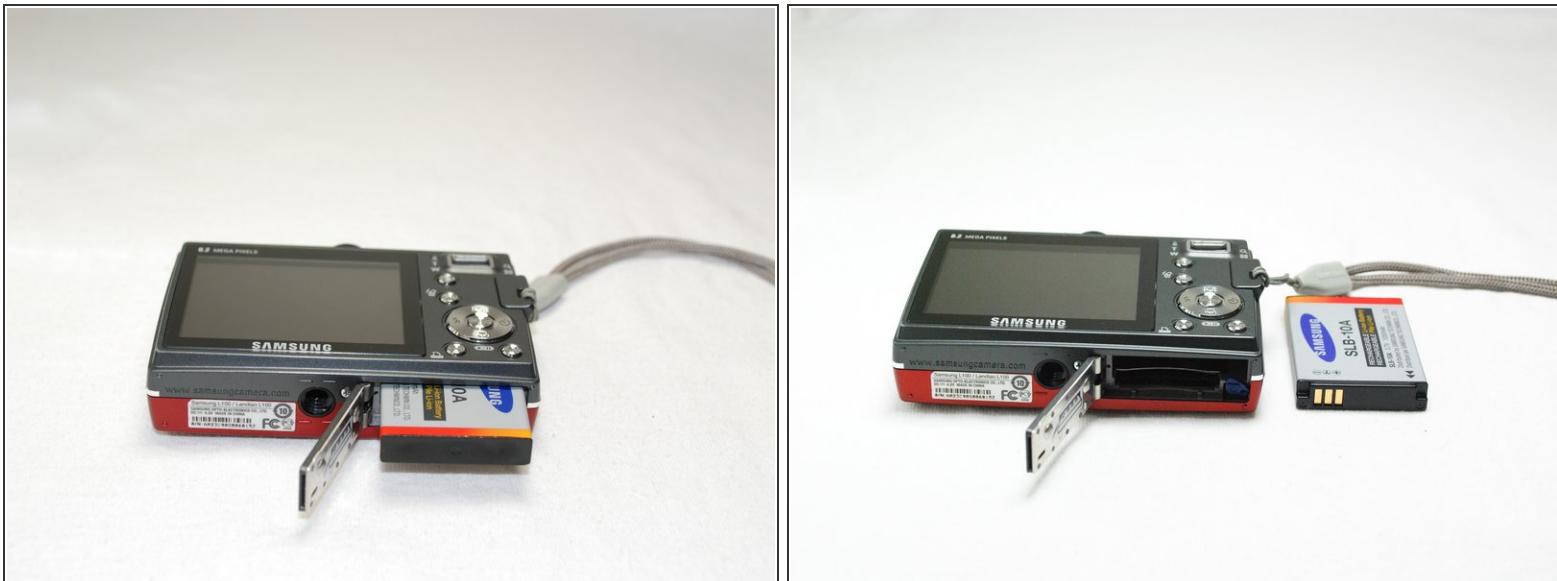


- Open the battery cover that's located on the bottom right side of the camera and carefully remove the battery.

Step 3



- Slide your fingernail or a plastic spudger in the groove from the bottom to the top right side of the camera.

Step 4

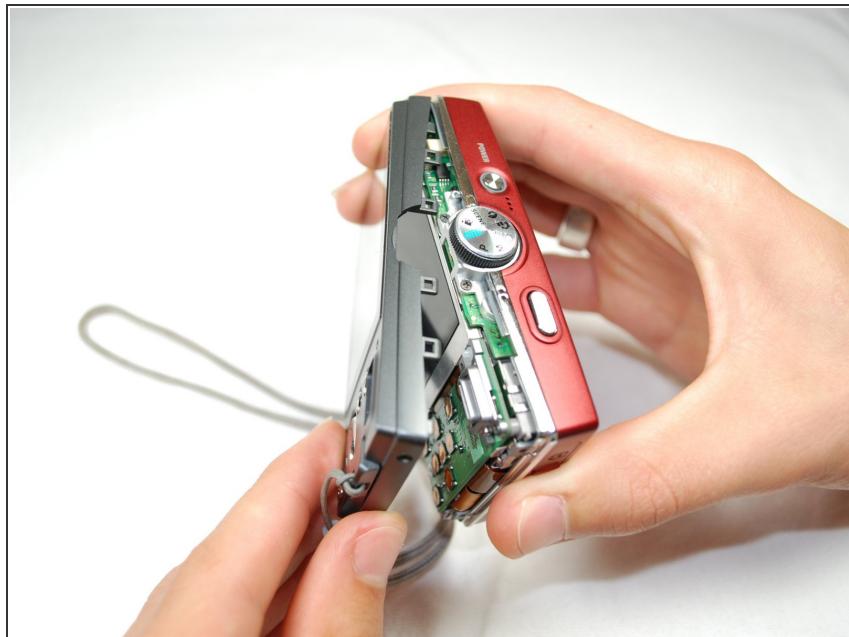

- Carefully squeeze the top right corner of the camera and pry off the external cover.
- If you hear a "cracking" sound. This is normal.
- Continue to pull the external cover and it will come off cleanly.


⚠ Be cautious of the flash capacitor. It carries an electrical charge, that may give you an unpleasant shock.

Step 5



⚠ Carefully pull off the back cover, parts behind the back of the case might fall out.


Step 6 — Camera Lens

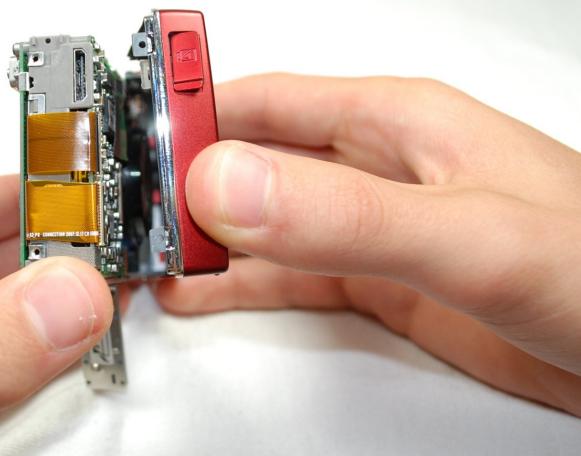

- Remove the front cover, it comes off easily.


⚠ Buttons might fall out when you remove the front cover.

Step 7

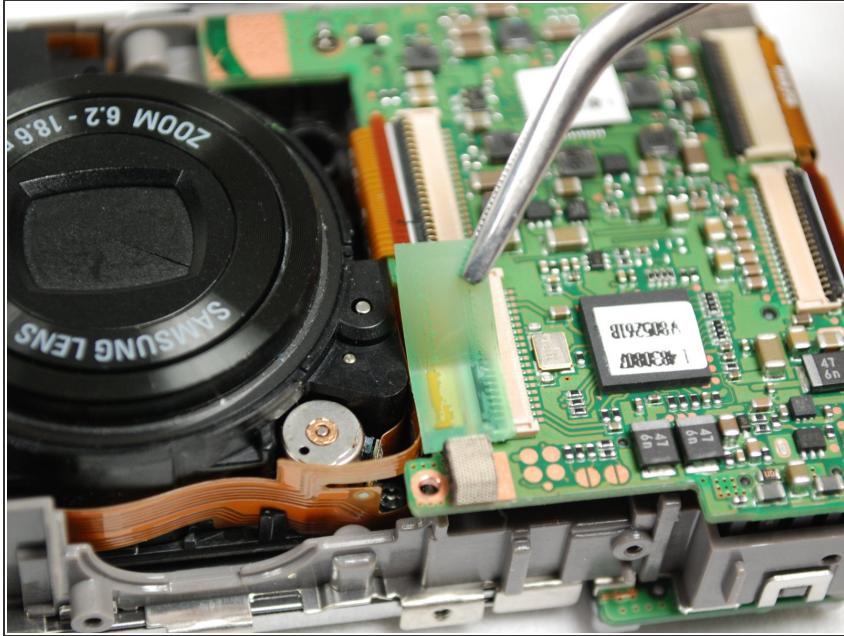


- Remove green tape from ribbon.

Step 8

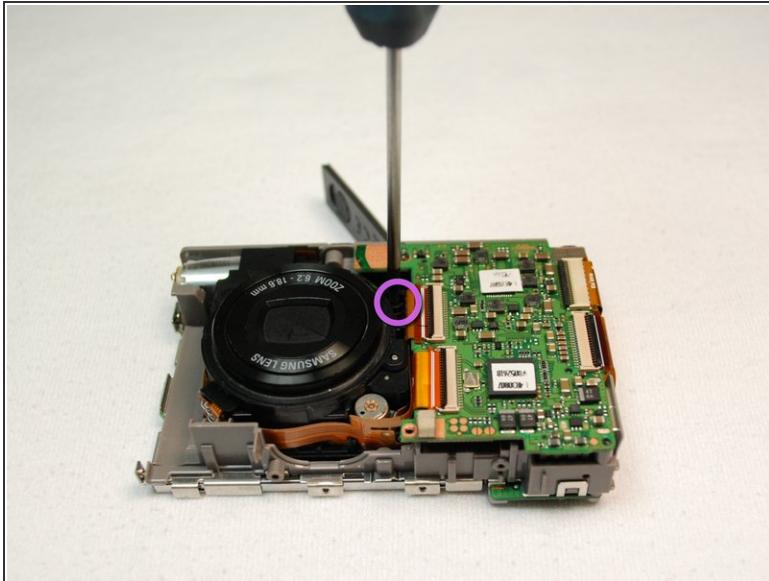


- Remove four screws around lens.

Step 9

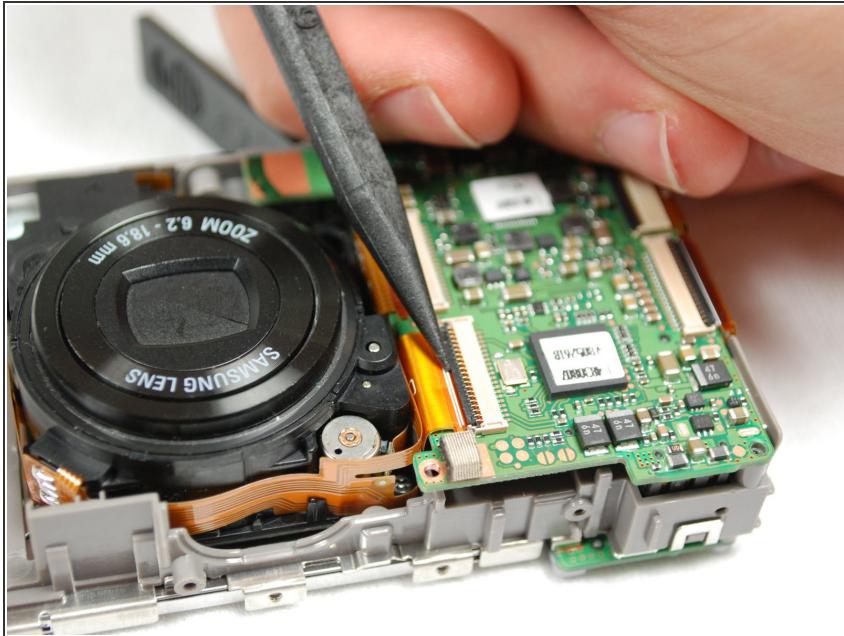

- Use spudger to remove ribbon connecting the circuit board from lens.

Step 10

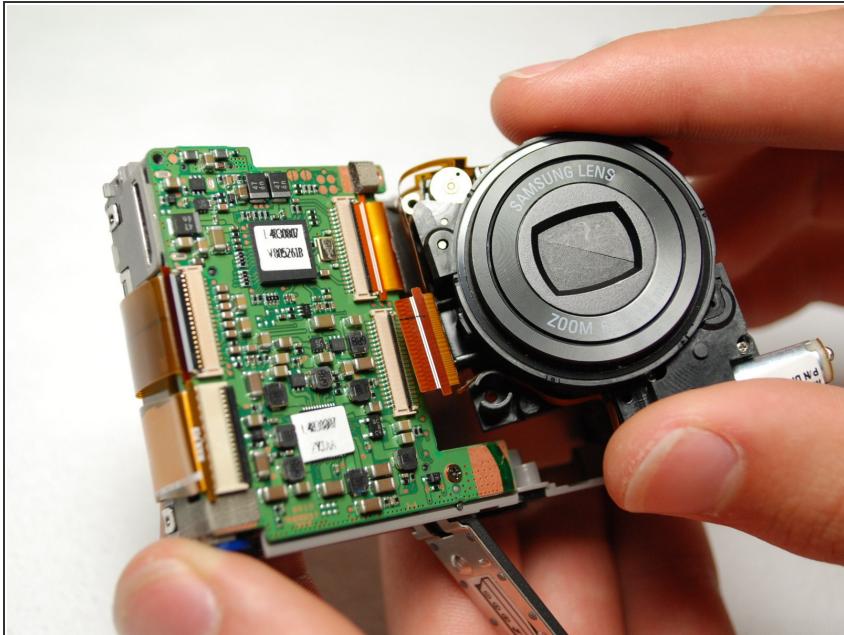

- Remove lens from camera.

To reassemble your device, follow these instructions in reverse order.