



Samsung NP305E5A-A03US RAM Replacement

This guide will show you how to remove your RAM.

Written By: Julia Dotter




INTRODUCTION

This is a step-by-step guide of how to remove your RAM in order to replace it.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Hard Drive

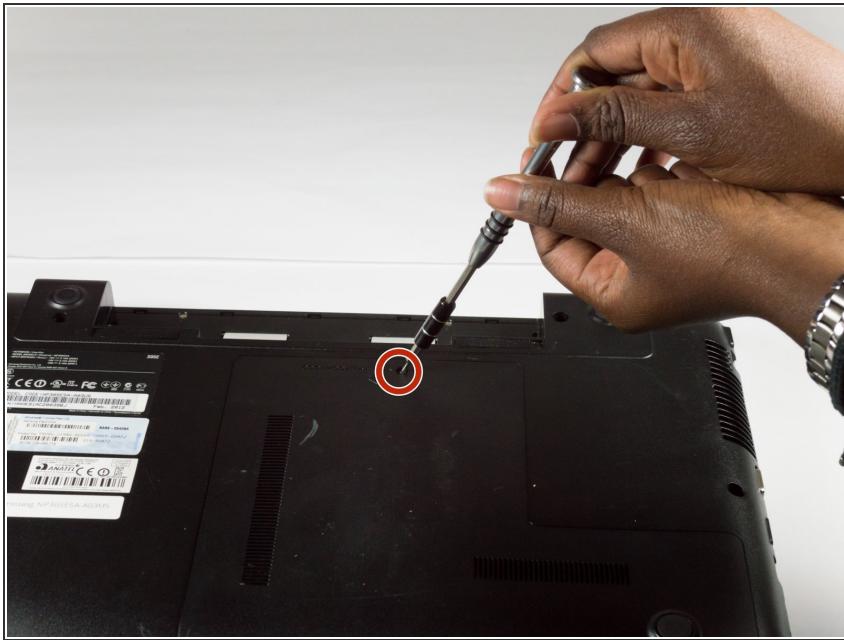

- Unscrew the 3.5mm screws using a Phillips J0 Screwdriver by rotating the screwdriver in the counter clockwise direction.

Step 2

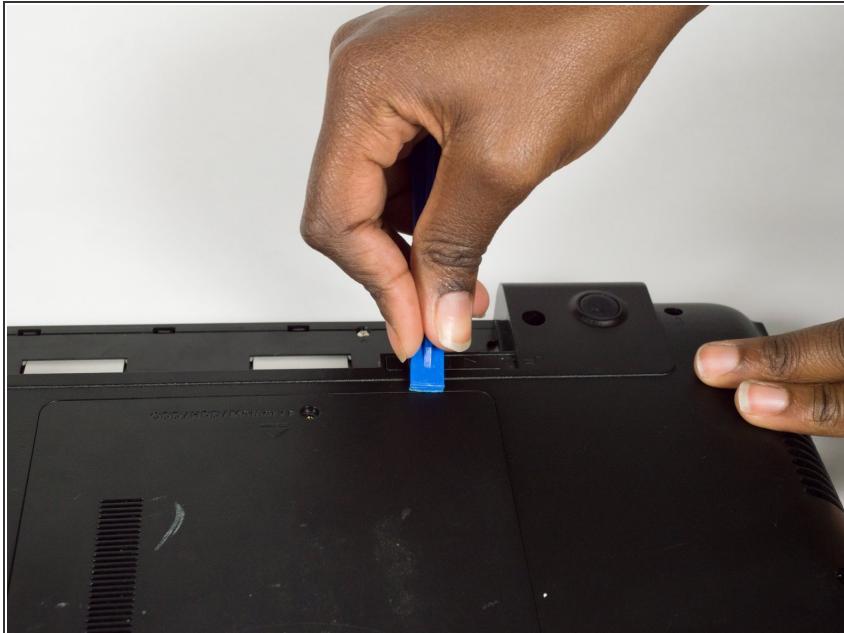

- Wedge the plastic opening tool between the L-shaped back panel to slide the panel off.


(i) Note this may take force. If you have difficulties using the plastic opening tool, try to use your hands to pull the panel off.

Step 3




- Pull the panel towards you to remove the panel.

Step 4

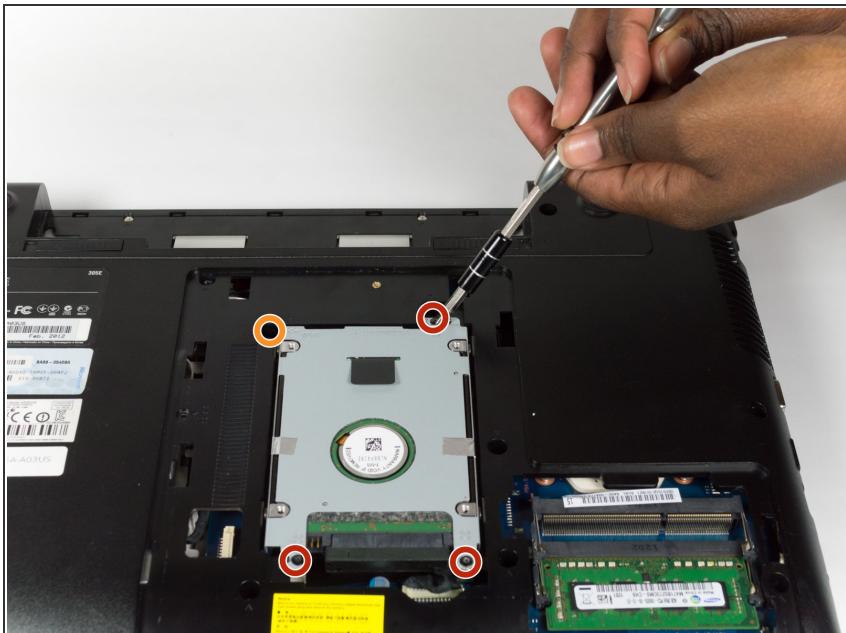


- Unscrew the three 3.5mm screws using a Phillips J0 Screwdriver by rotating the screwdriver in the counter clockwise direction.
- Unscrew the one 4.45mm screws using a Phillips J0 Screwdriver by rotating the screwdriver in the counter clockwise direction.

Step 5

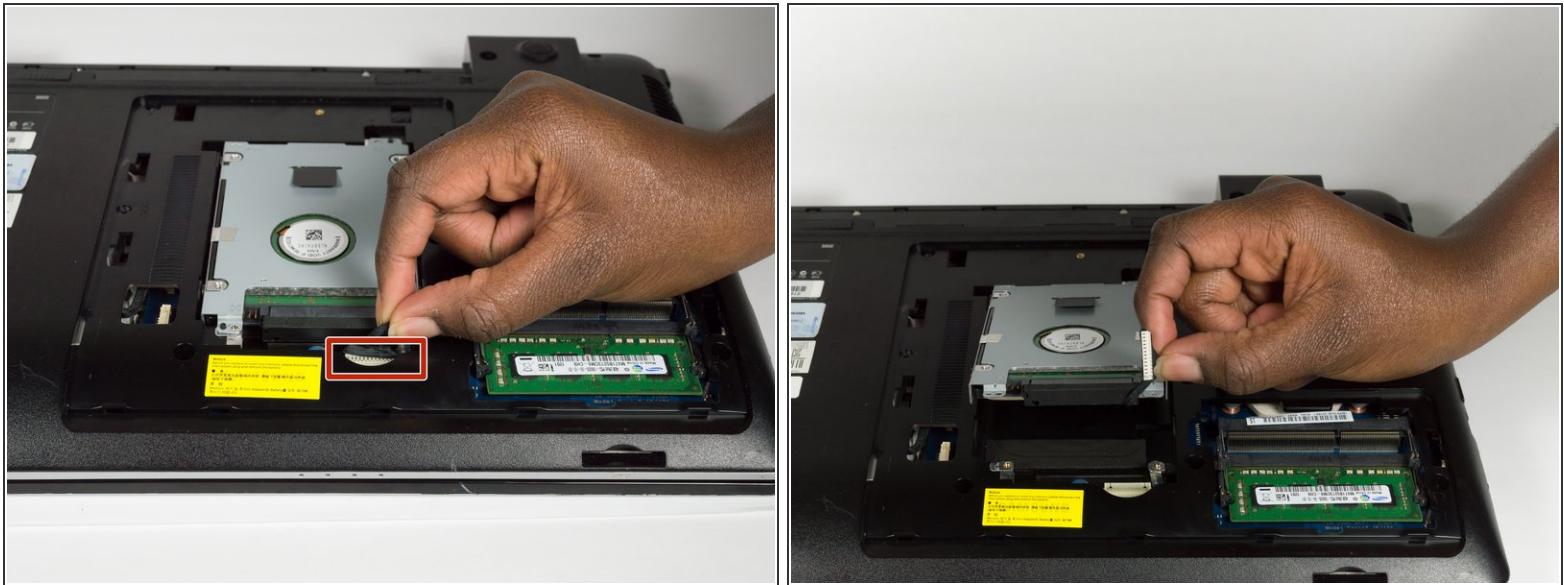


- Pull the cord that connects the Hard Drive to the Motherboard to disconnect it.

Step 6

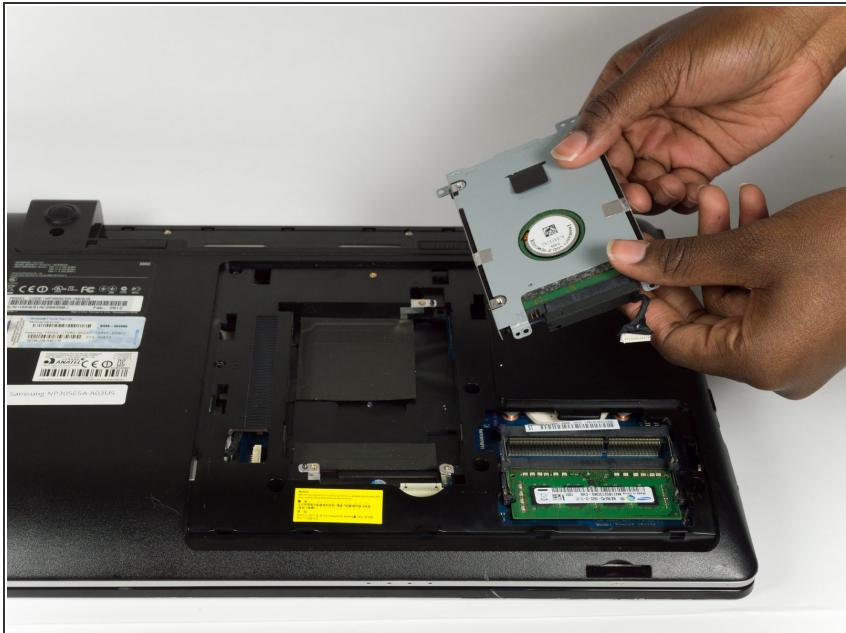



- Remove the Hard Drive by lifting it towards you.

Step 7 — RAM

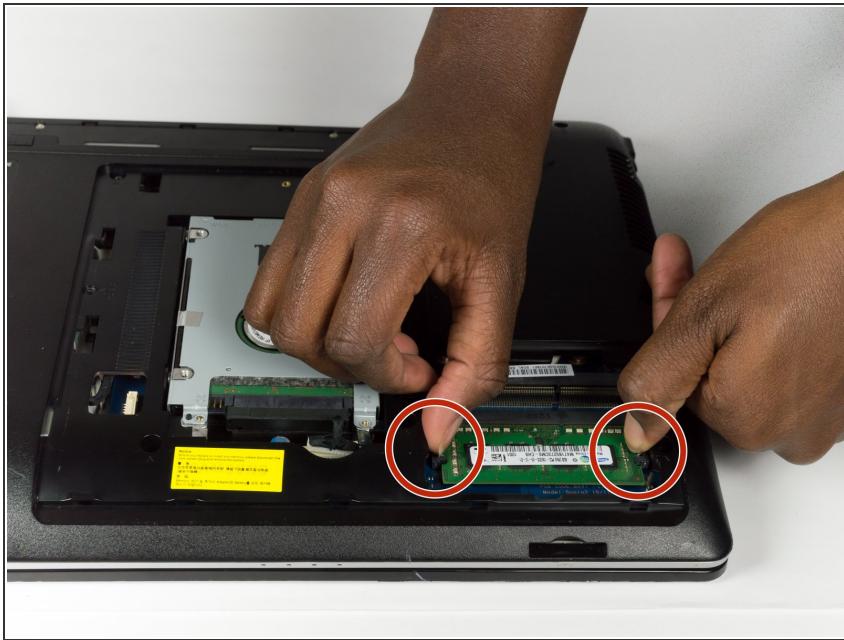

- Place your thumbs on the metal tabs.
- Push outwards on the metal tabs to release the RAM.

Step 8

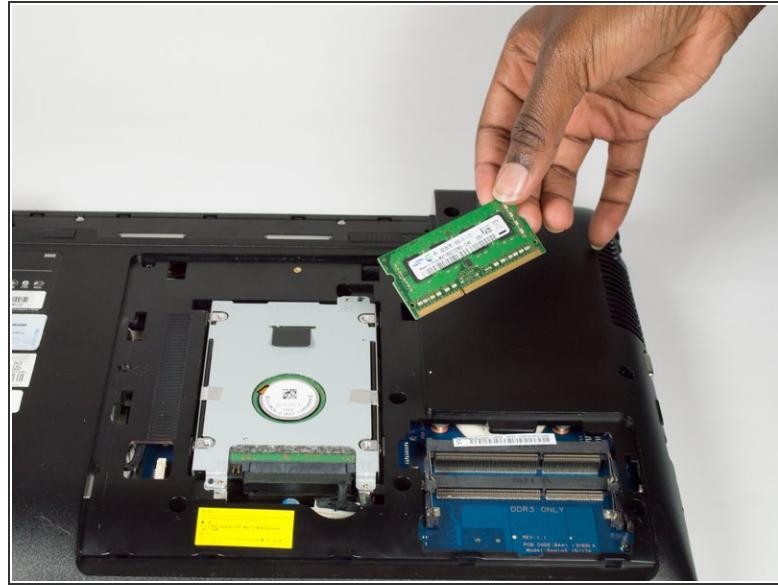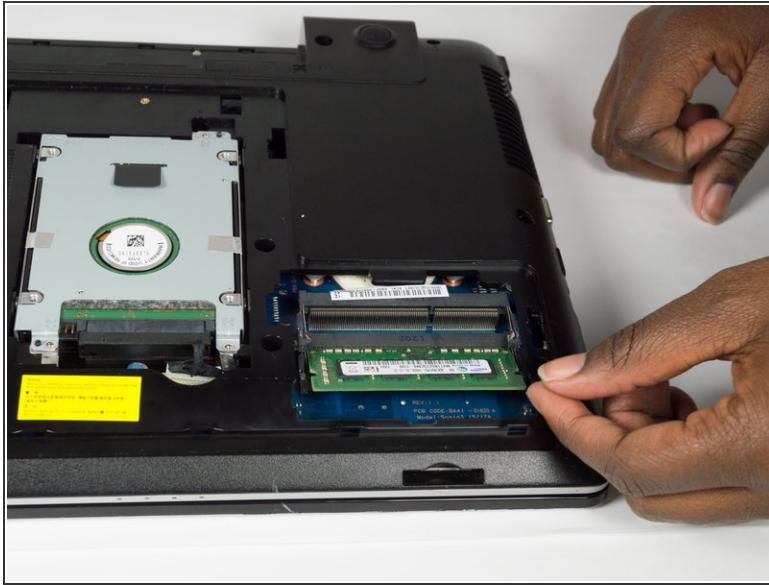

- Pull out the RAM towards you to remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.