



# Samsung NP350E5C-A02US Optical Drive Replacement

This guide will help you replace a faulty optical drive.

Written By: James Kingrey



SN-208DN/SCFHT  
F/W=SC00  
RS2L6GLCC0040EV  
H/W/A Ver.DN DECEMBER 2012  
DVD Writer Model SN-208  
5V KCC-REM-TSS-SN208 033475 cUL us  
CLASS 1 LASER PRODUCT  
APPAREIL A LASER DE CLASSE 1  
LASER PRODUCT KLASSE 1 PRODUKT  
MACH EN 60223-1:2007  
Fachhafte Samsung Storage Technology Plasma Corporation  
14F, Samsung Techwin Bldg., 255, Gwangchon-dong, Yongin-si, Gyeonggi-do, Korea, 443-734  
Gwangchon-dong, Yongin-si, Gyeonggi-do, Korea, 443-734  
MADE IN PHILIPPINES  
SEC S/N : PHBA5903711ABQES2CI0947

## INTRODUCTION

If the optical drive isn't working correctly, this guide will help you replace the drive.

### TOOLS:

- Phillips #0 Screwdriver (1)

## Step 1 — Battery



- Lay the laptop down so that the bottom is facing up.

***i*** There is no battery in the picture.

## Step 2



- Slide the two plastic tabs to the opposing sides.

***i*** There is no battery in the picture.

## Step 3



- While both are in the unlocked position, slide the battery out.
- *(i)* There is no battery in the picture.

## Step 4 — Hard drive and memory stick cover




- Remove the M2.5x5 mm screw with a Phillips #0 screwdriver.

## Step 5



- Slide the cover 1/4" towards the front of the laptop.

## Step 6

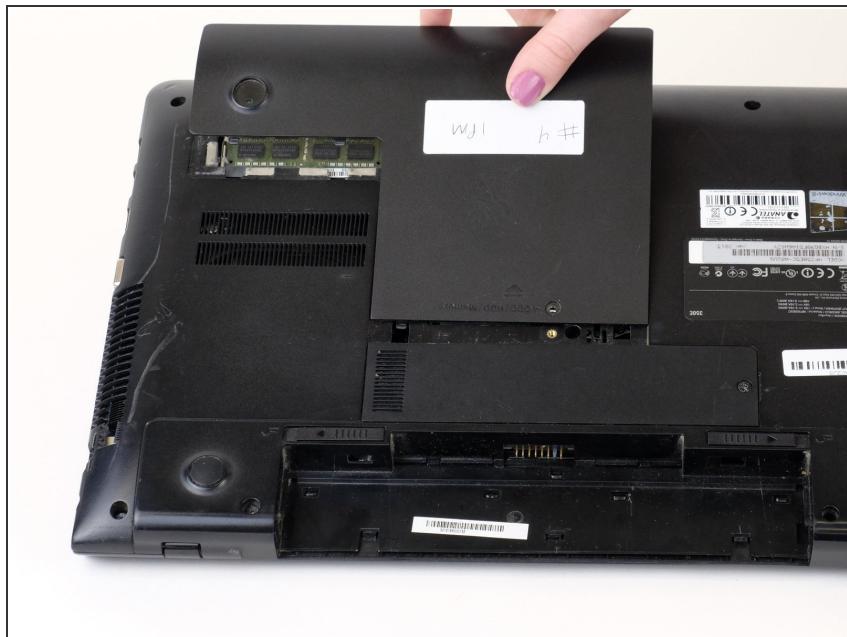

- Then, lift the cover off.

## Step 7 — Optical Drive



- Find the screw between the hard drive and the model label. Then remove the M2.5X5 screw with a Phillips #0 screwdriver.

## Step 8



- Pull the optical drive straight out.

To reassemble your device, follow these instructions in reverse order.