


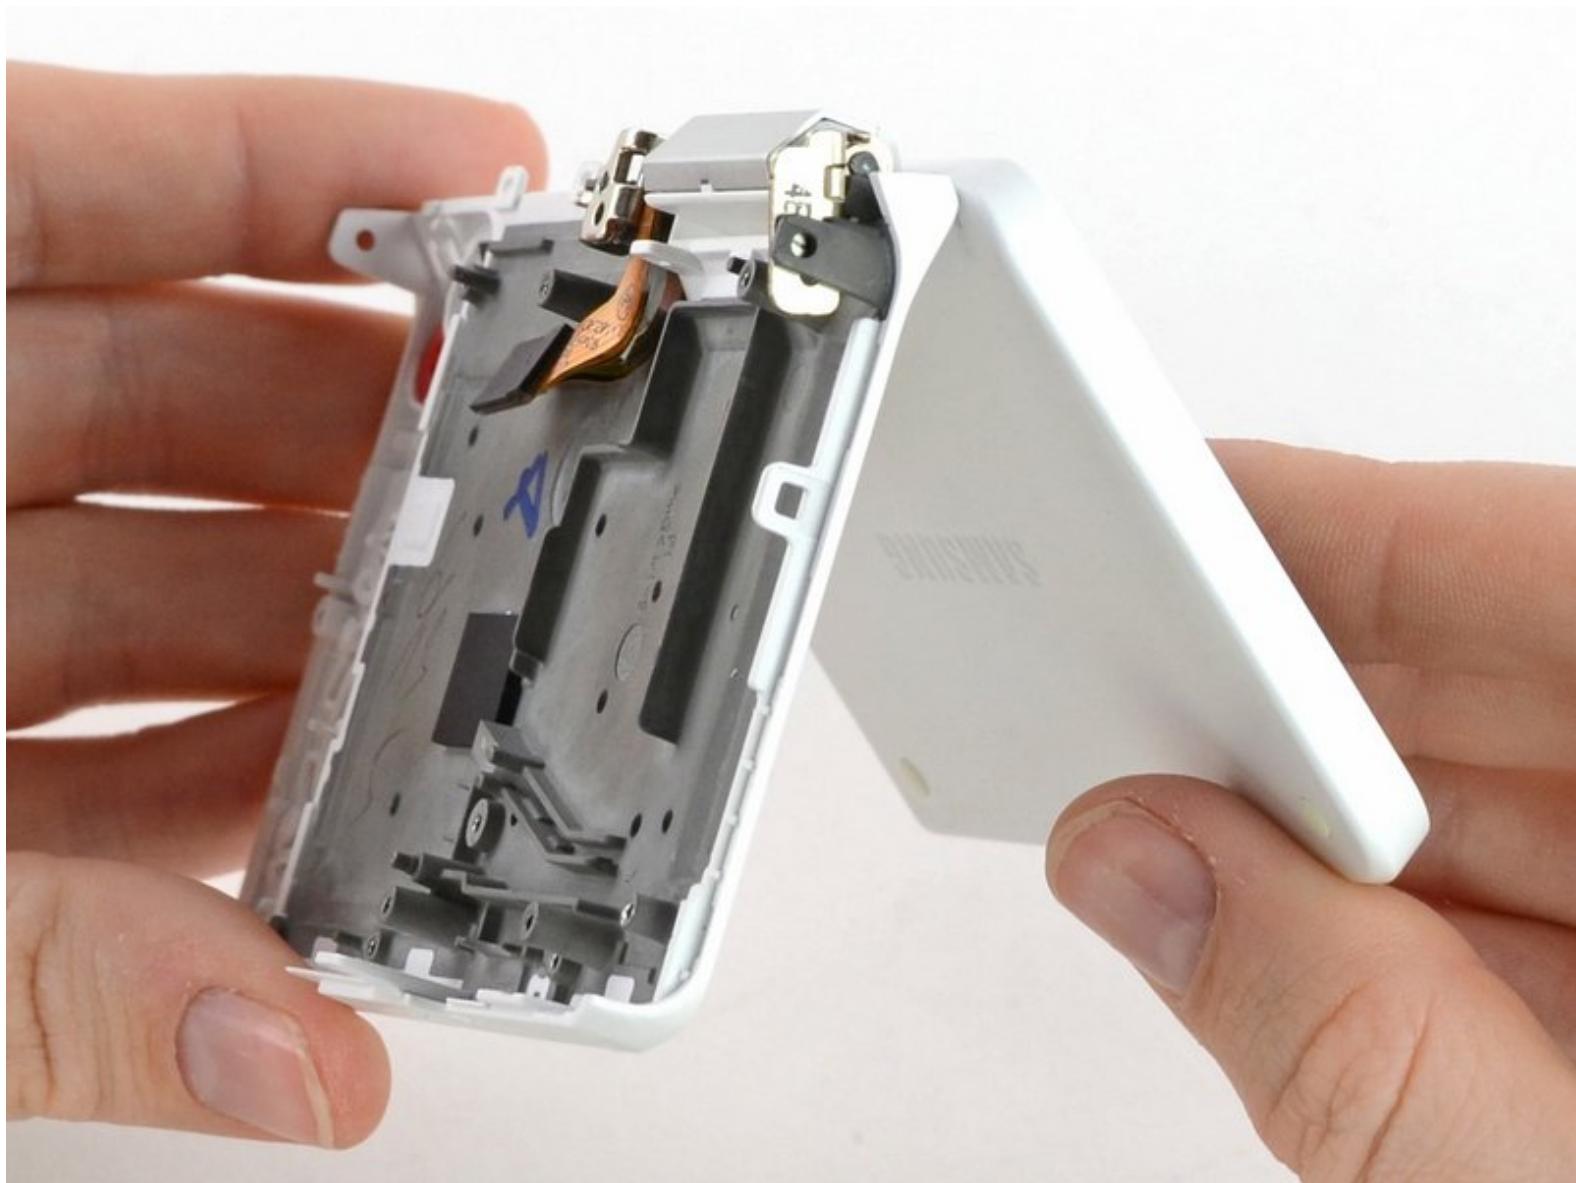

Samsung NX Mini LCD Replacement

This guide will show you how to replace the LCD on the Samsung NX Mini.

Written By: Kelsea Weber



INTRODUCTION

Is your LCD stuck in place, cracked or unresponsive? Use this guide to remove the LCD assembly and make necessary repairs.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)
- [Magnetic Project Mat](#) (1)

Step 1 — Battery



- Orient the camera so the button panel and LCD are facing you.
- Use a spudger or fingernail to open the battery compartment on the right side of the camera.

Step 2



- Push the blue trapdoor to the left to release the battery, and remove the battery.
- There is no battery shown in this photo.

Step 3 — Front Case



- Use a Phillips #00 screwdriver to remove the 4 mm screw inside the battery compartment.

Step 4



- Remove the 4 mm Phillips #00 screw hiding in the external flash port.

Step 5



- Remove the four 5 mm Phillips #00 screws from the lens assembly.

Step 6



- Remove the metal lens mount by hand or with tweezers.

⚠ Be careful not to touch the sensor in the center of the lens assembly.

Step 7




- Use tweezers to remove the inner metal ring.

Step 8




- Use a Phillips #00 screwdriver to remove the three 4 mm screws from the bottom of the case.

Step 9

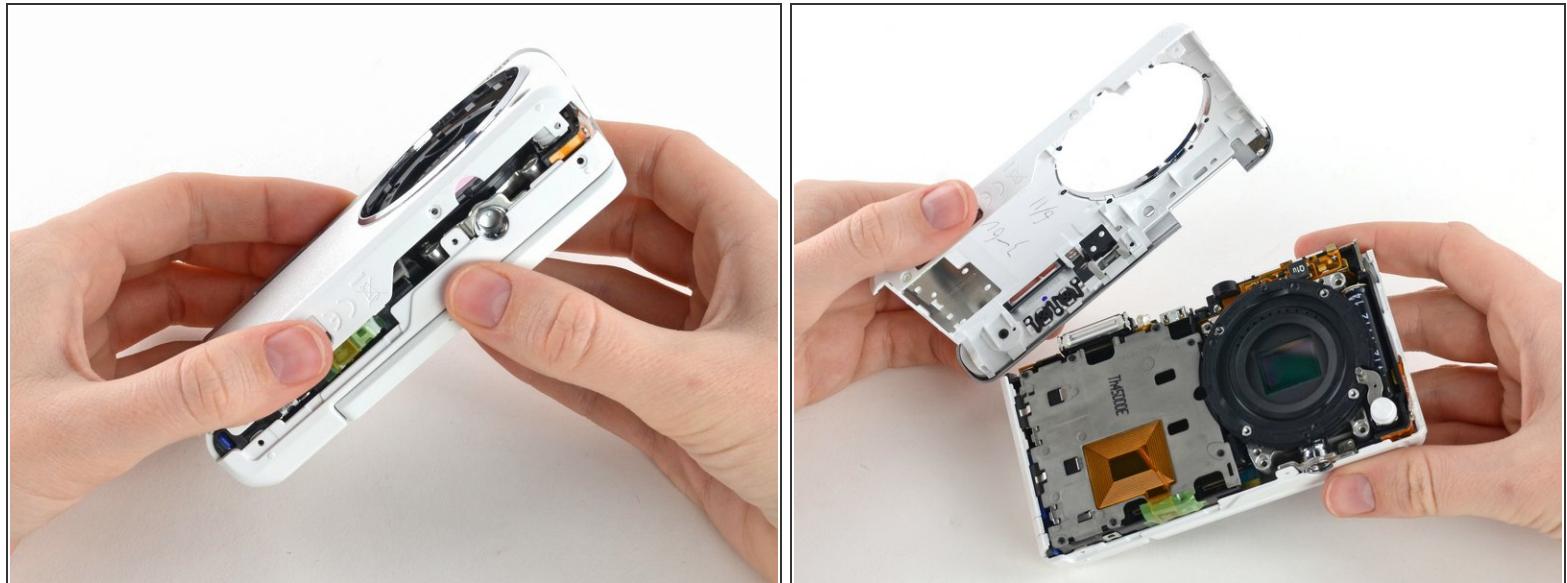

- Use your hands to slowly pull the front casing away from the camera.
- ⓘ The case is attached with multiple clips that may make a cracking noise as you pull it away from the camera.


Step 10 — Sensor

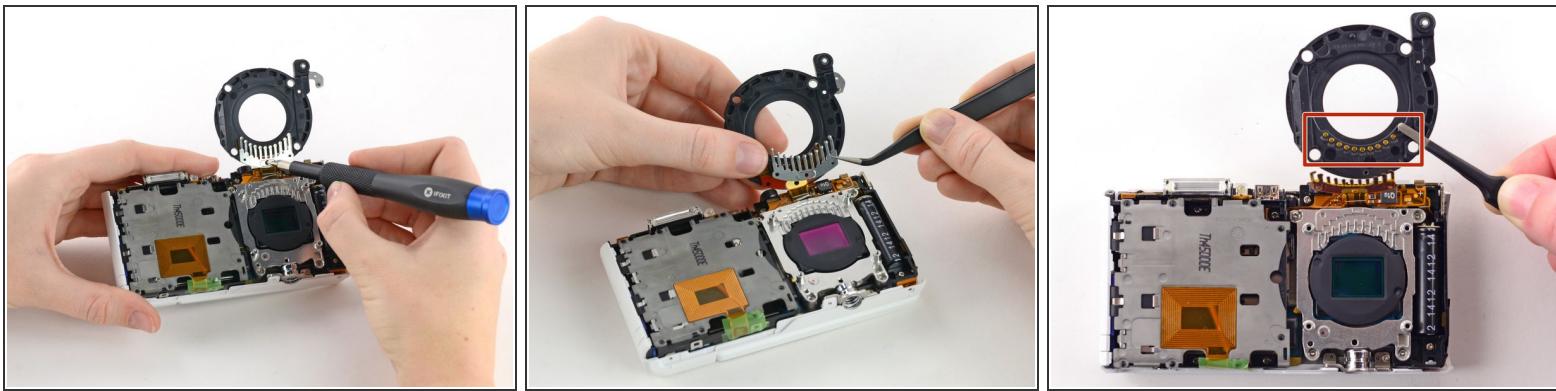

- Gently flip the sensor cover back to expose the screw attaching the sensor cover to the ribbon cable.
- Use a Phillips #00 screwdriver to remove the 3 mm screw from the sensor cover.
- Use tweezers to remove the metal contact cover. Be sure to carefully remove the cover so the gold contacts remain in place.

! The gold lens contacts lying beneath the ribbon cable become loose when the screw and contact cover are removed.


Step 11

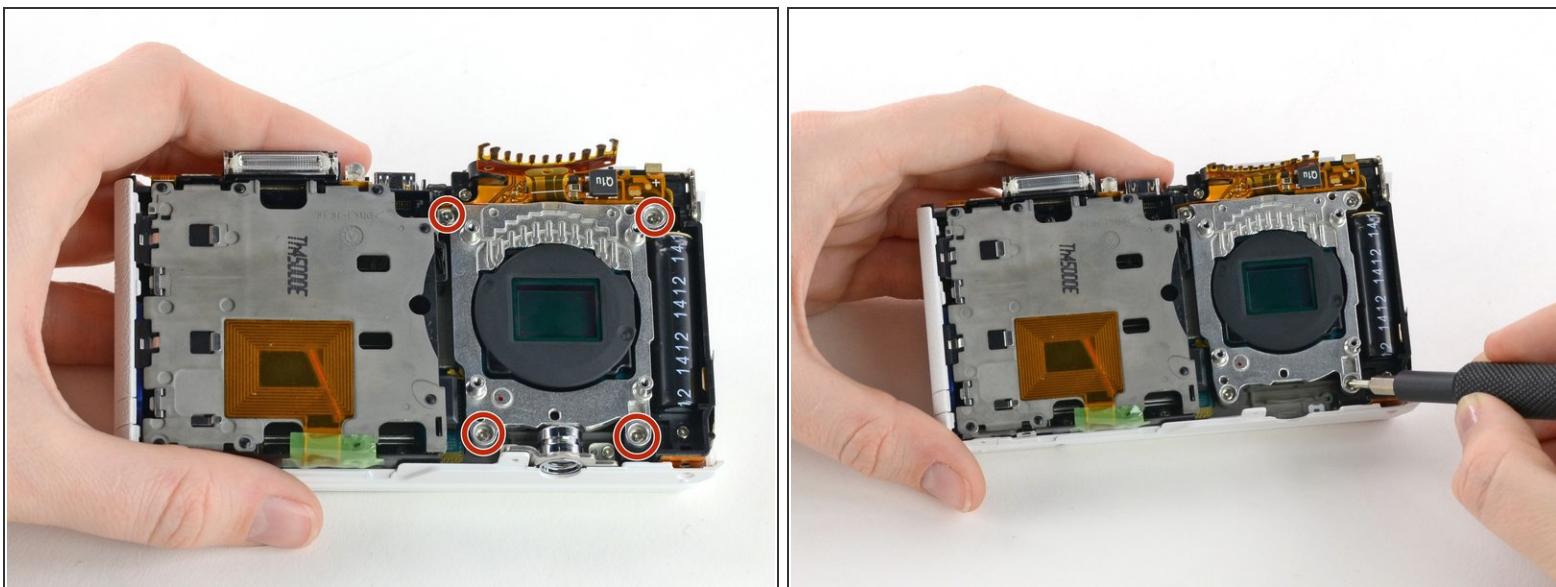

- Remove the four 4 mm Phillips #00 screws holding the sensor mount in place.


This document was generated on 2019-09-22 02:48:43 AM (MST).

Step 12

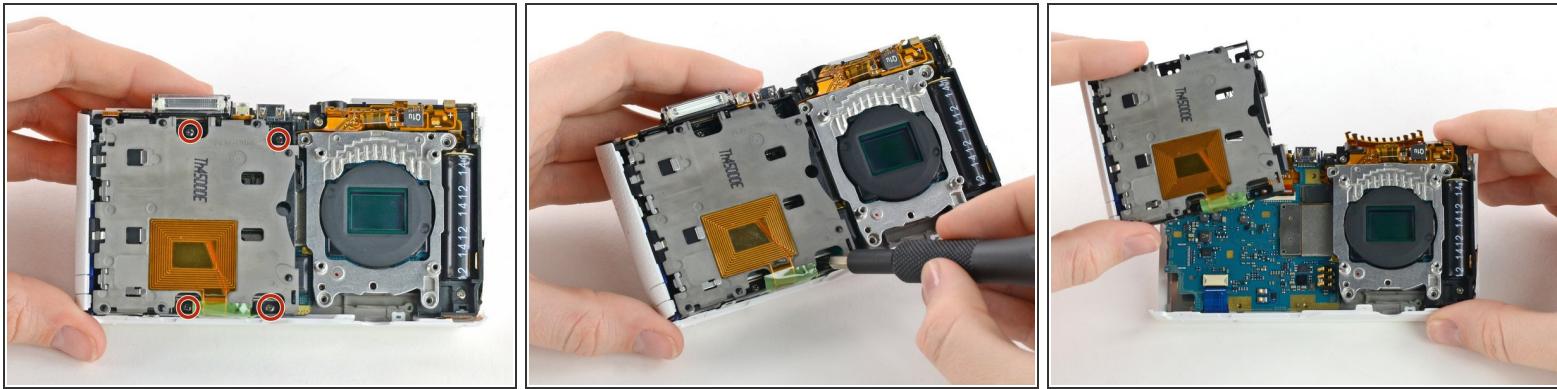


- Remove the four 4 mm Phillips #00 screws securing the battery compartment to the mother board.
- Remove the battery compartment.

Step 13

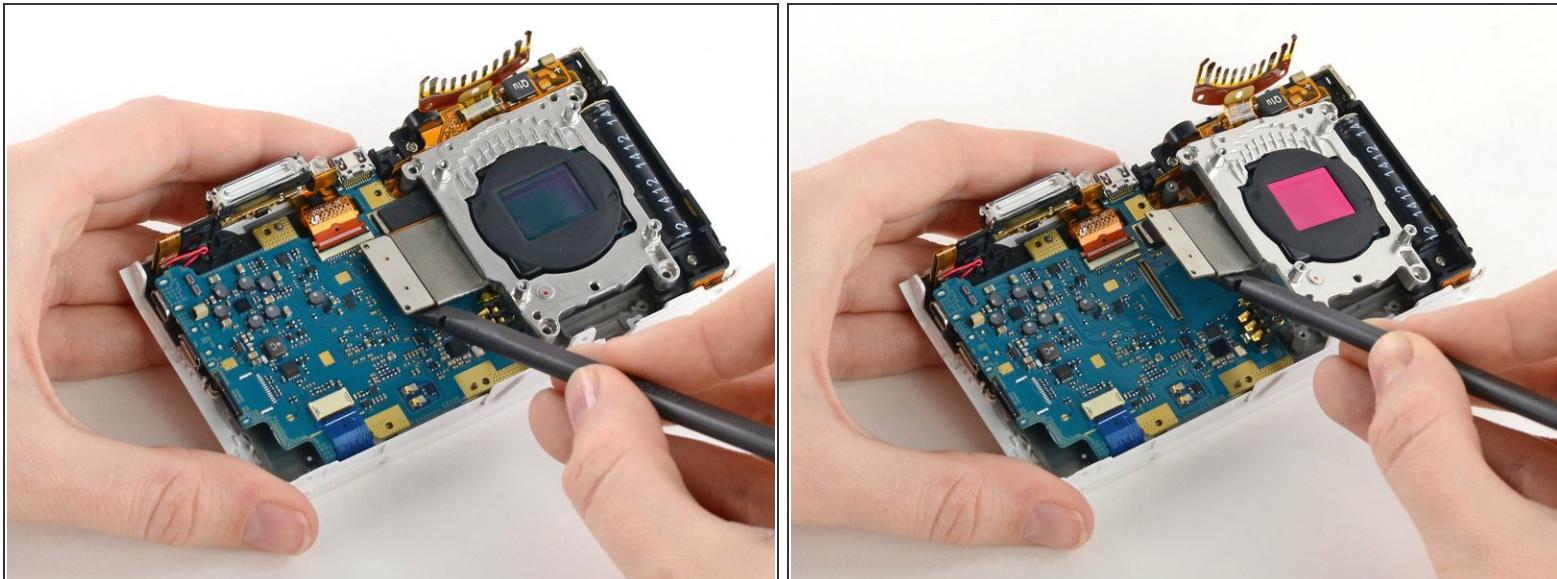


- Use a spudger to disconnect the ribbon cable connecting the image sensor to the motherboard.

Step 14

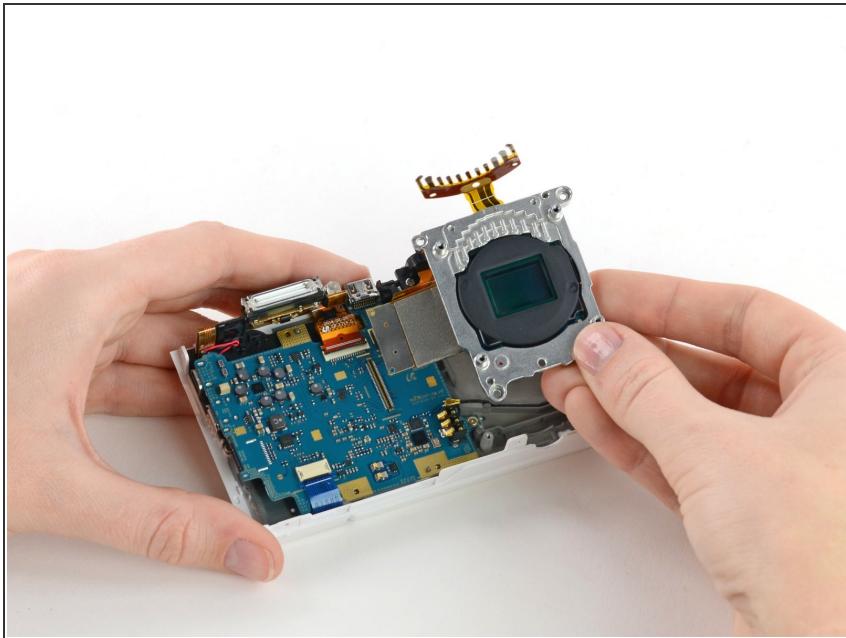


- Gently remove the sensor mount from the camera case.

Step 15 — Flash Assembly

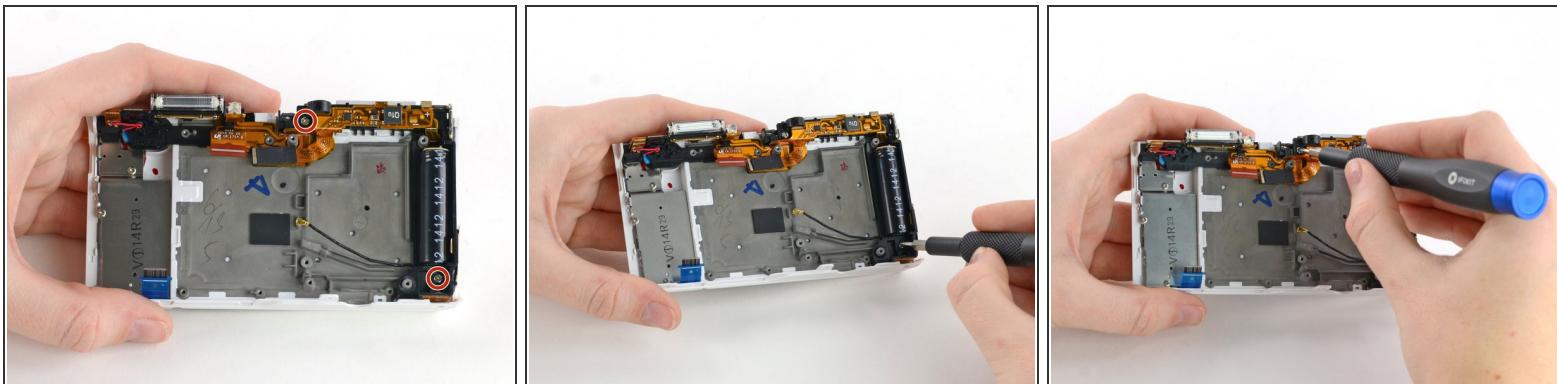


- Use a Phillips #00 screwdriver to remove the two 5 mm screws holding the flash assembly to the camera case.

Step 16

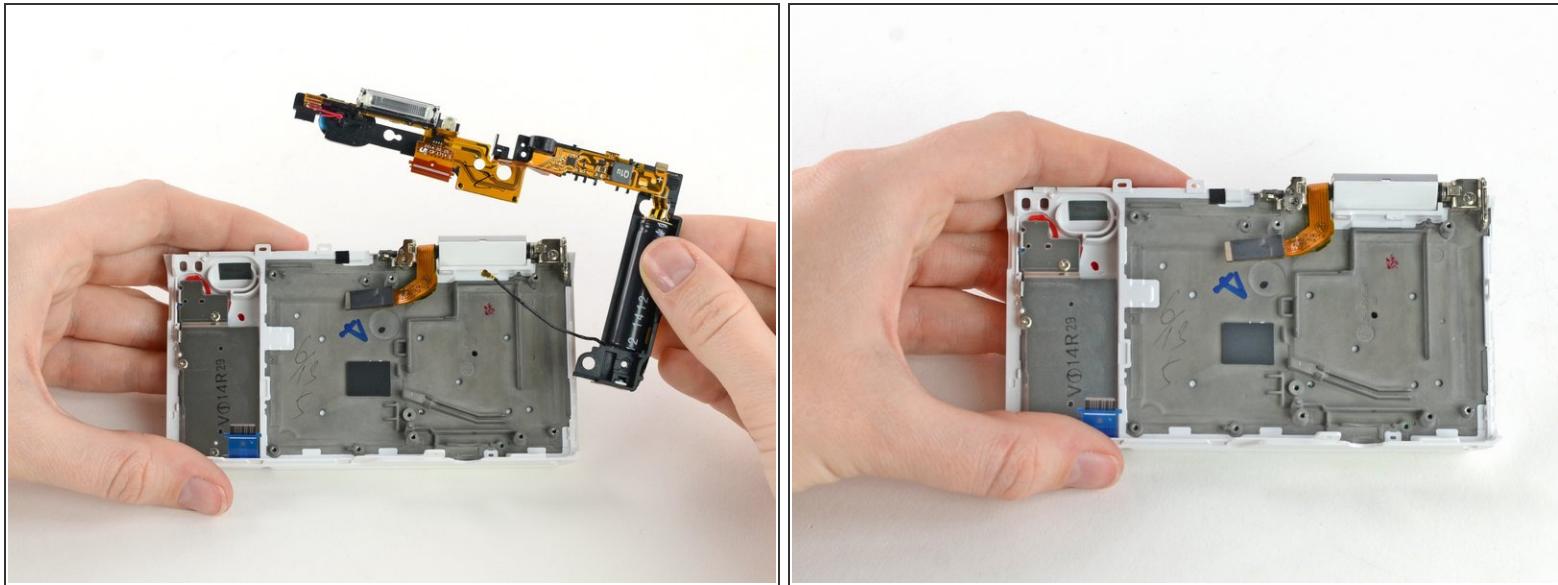


- Remove the flash assembly by gently pulling it away from the case.
- ⓘ You may need to use a spudger to release some of the clips holding the assembly in place.
- ⚠ Avoid touching the ends of the capacitor (the large black cylinder on the right). Capacitors that haven't been discharged may cause electric shock. Learn how to discharge a capacitor [here](#).

Step 17 — LCD

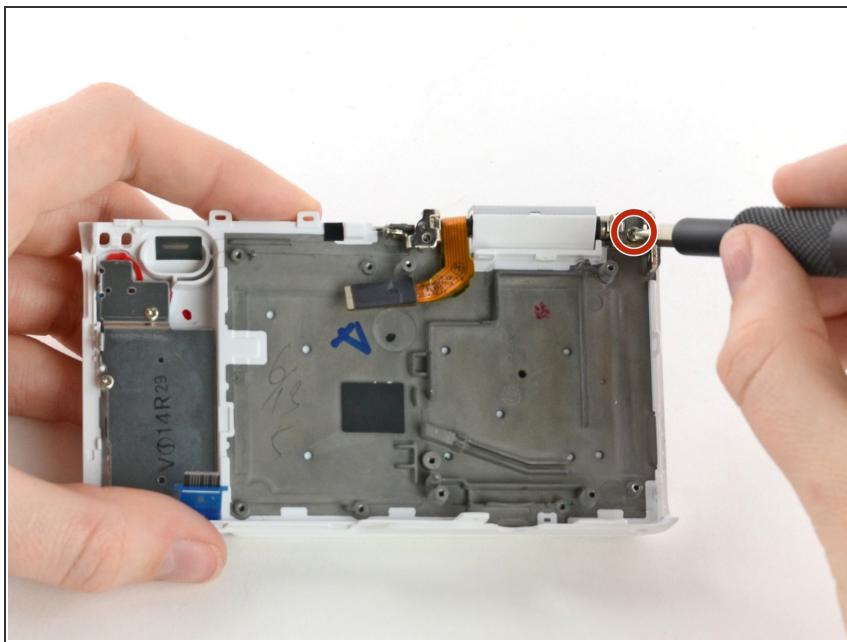

- Remove the 5 mm Phillips #00 screw in the top right corner of the LCD assembly.

Step 18

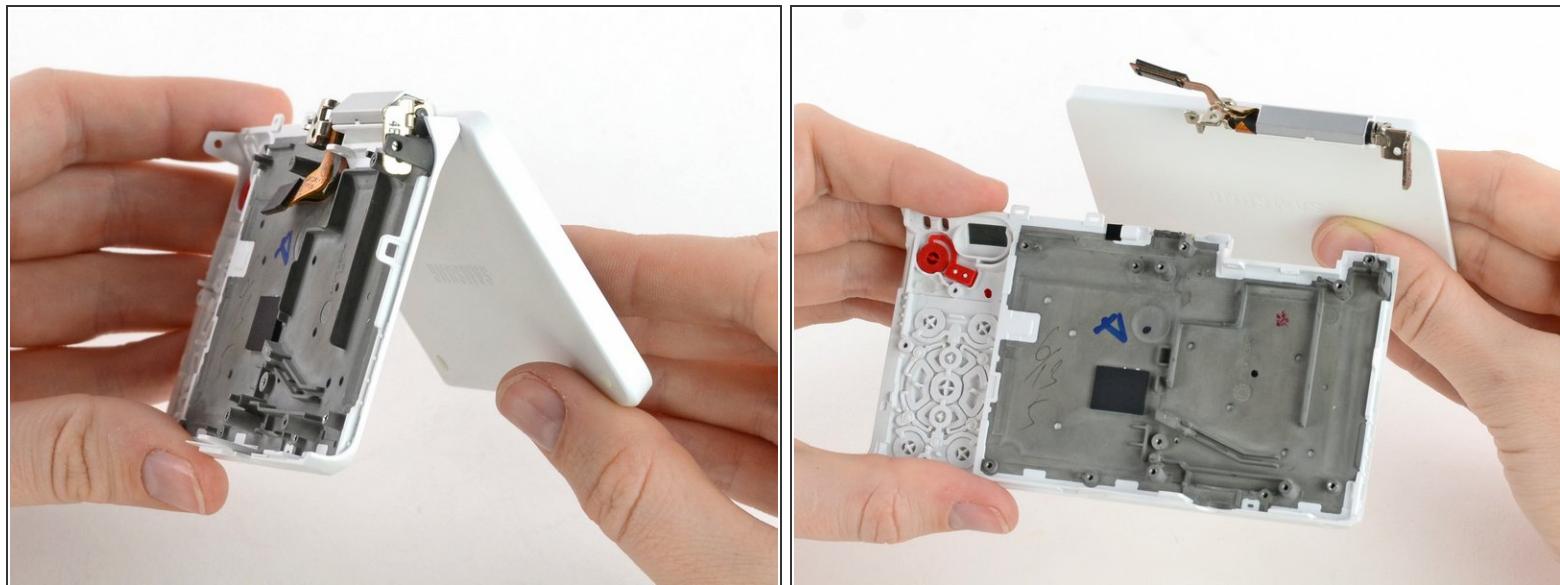

- Tilt and wiggle the LCD to remove it from the case.

To reassemble your device, follow these instructions in reverse order.