



Samsung NX30 Screen Replacement

Replace a cracked or broken screen.

Written By: Julia Kilcup



INTRODUCTION

The replacement of your screen takes a little work. With the right equipment though it is not too difficult to do. Just be ready to unscrew a lot of screws.

TOOLS:

- iFixit Opening Tools (1)
- Phillips #00 Screwdriver (1)
- Magnetic Project Mat (1)

PARTS:

- 11 Phillips head screws 4mm long (1)

Step 1 — Battery



- Flip the camera over so that the bottom of the camera is up.
- Push the battery switch towards the back of the camera.

Step 2



- Locate the blue switch above the battery pack.
- Slide the blue switch into the camera in the direction of the arrow on the switch. When the switch has been pushed in the battery will spring up.

Step 3




- Pull the battery out.

Step 4 — Screen



- Unscrew the nine 4mm Phillips head screws surrounding the body of the camera. They are located on the bottom of the camera and both sides of the camera.

Step 5

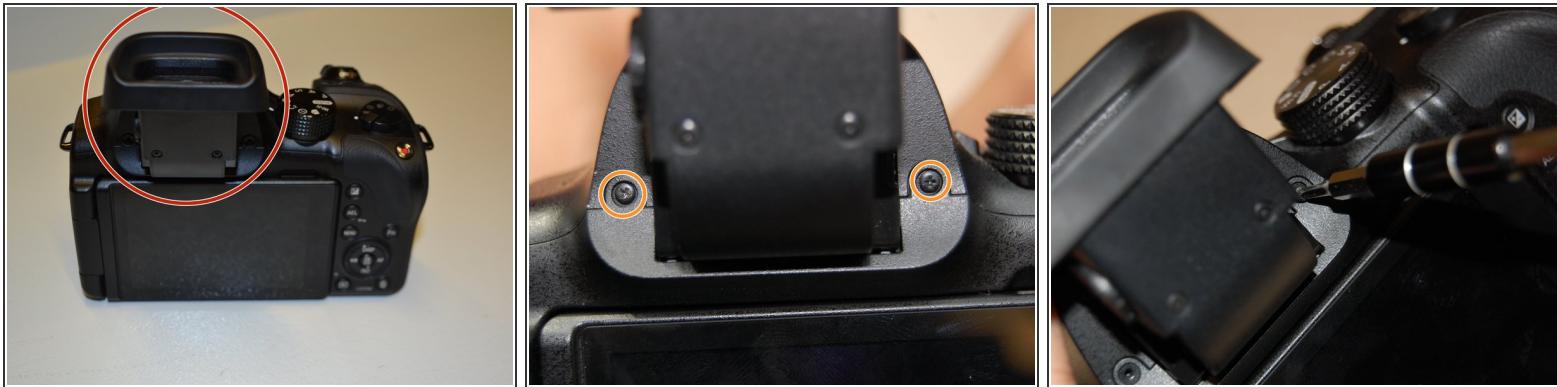

- Pull the viewer out from the camera and then up.
- Unscrew the two black 4mm Phillips head screws under it.



Step 6



- Once the screws are all removed, place the camera face down, with the screen facing up.
- Pry open the body using the plastic opening tool.

⚠ Gently open the body.

Step 7

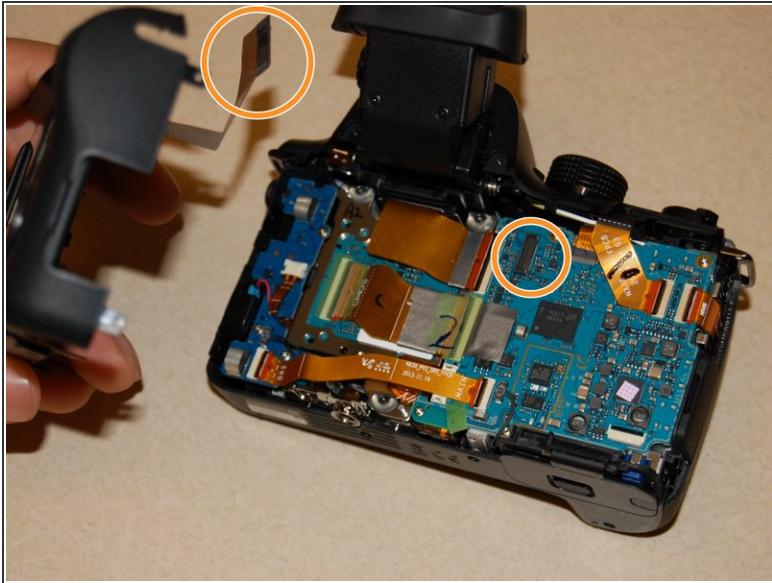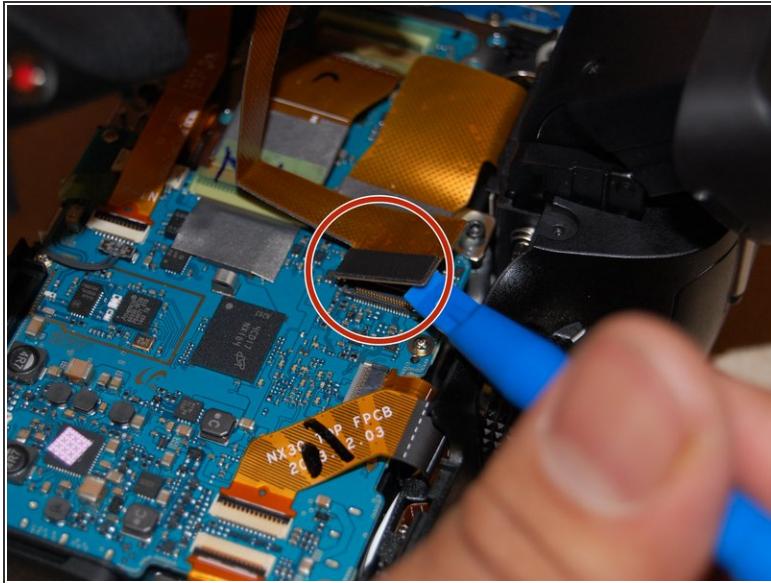

- Then use the plastic opening tool to dislodge the Ribbon Cable, located near the top of the camera, from the Circuit Board.
- The Ribbon Cable will be disconnected from the Circuit Board when you are done.

To reassemble your device, follow these instructions in reverse order.