



# Samsung NX3000 Battery Replacement

This guide will show you how to replace the battery in the Samsung NX3000.

Written By: Kelsea Weber



## INTRODUCTION

Camera not turning on? The battery may need to be recharged or replaced. Use this guide to replace the battery and get back to taking awesome photos!

## Step 1 — Battery



- If you haven't done so already, remove the lens from the camera.
- Turn the camera upside down.
- Slide the button to the left to open the battery compartment.
- Push the blue button up to release the battery.

*(i)* The battery is not shown in these photos.

To reassemble your device, follow these instructions in reverse order.