



Samsung NX3000 Lens Assembly Replacement

This guide will show you how to replace the lens assembly on the Samsung NX3000.

Written By: Kelsea Weber



INTRODUCTION

This guide will show you how to replace the lens assembly on the Samsung NX3000.

We highly suggest you use a [magnetic project mat](#) or an [organization tray](#). This camera has **many** different types of screws and keeping them organized is key to proper reassembly.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Magnetic Project Mat](#) (1)

Step 1 — Battery



- If you haven't done so already, remove the lens from the camera.
- Turn the camera upside down.
- Slide the button to the left to open the battery compartment.
- Push the blue button up to release the battery.

(i) The battery is not shown in these photos.

Step 2 — Lens Assembly




- Remove the four 7.3 mm Phillips screws from the front of the lens assembly.
- Remove the silver ring with tweezers.

Step 3



- Use tweezers to remove the black plastic ring and small metal ring inside the lens assembly.

Step 4

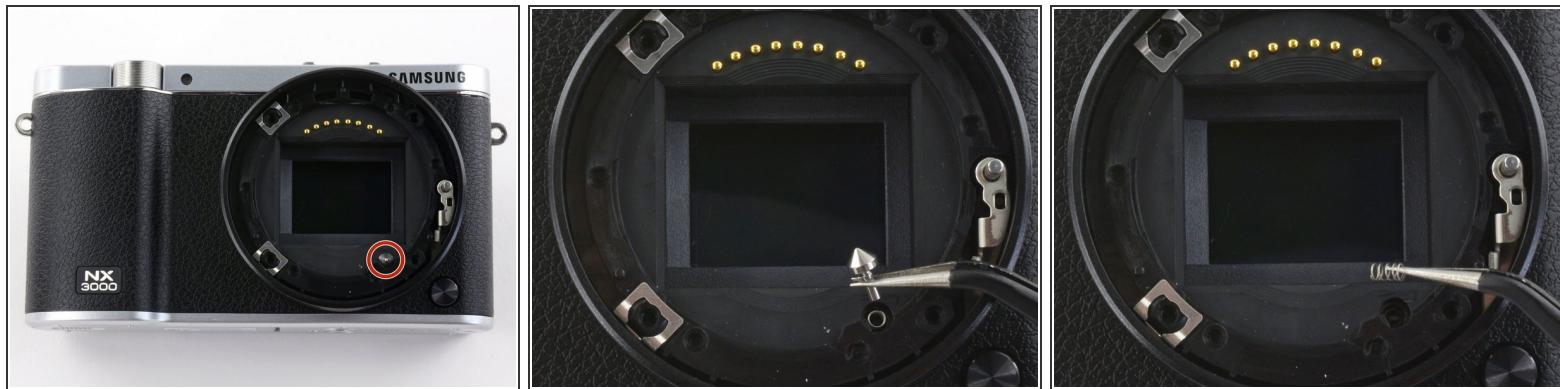

- Use tweezers to lift the pyramid screw and spring from the lens assembly.

To reassemble your device, follow these instructions in reverse order.