



# Samsung NX500 Battery Replacement

Replacement of a faulty battery. If your battery doesn't charge anymore when plugged in, it might be faulty.

Written By: carter grenewicz



## INTRODUCTION

A battery is simply replaced and easily goes out. If you find yourself charging your camera more often, you should replace it.

## Step 1 — Battery



- Pull the switch on the bottom of the camera back with your thumb.

## Step 2



- Push second switch(blue) forward with your thumb.

## Step 3



- Pull out battery.

To reassemble your device, follow these instructions in reverse order.