




# Samsung Notebook 7 Spin NP740U3MK01US

## Wi-Fi Card Replacement

This guide will show you how to replace the wi-fi card in the Samsung Notebook 7 Spin NP740U3MK01US.

Written By: Alexander Ulman

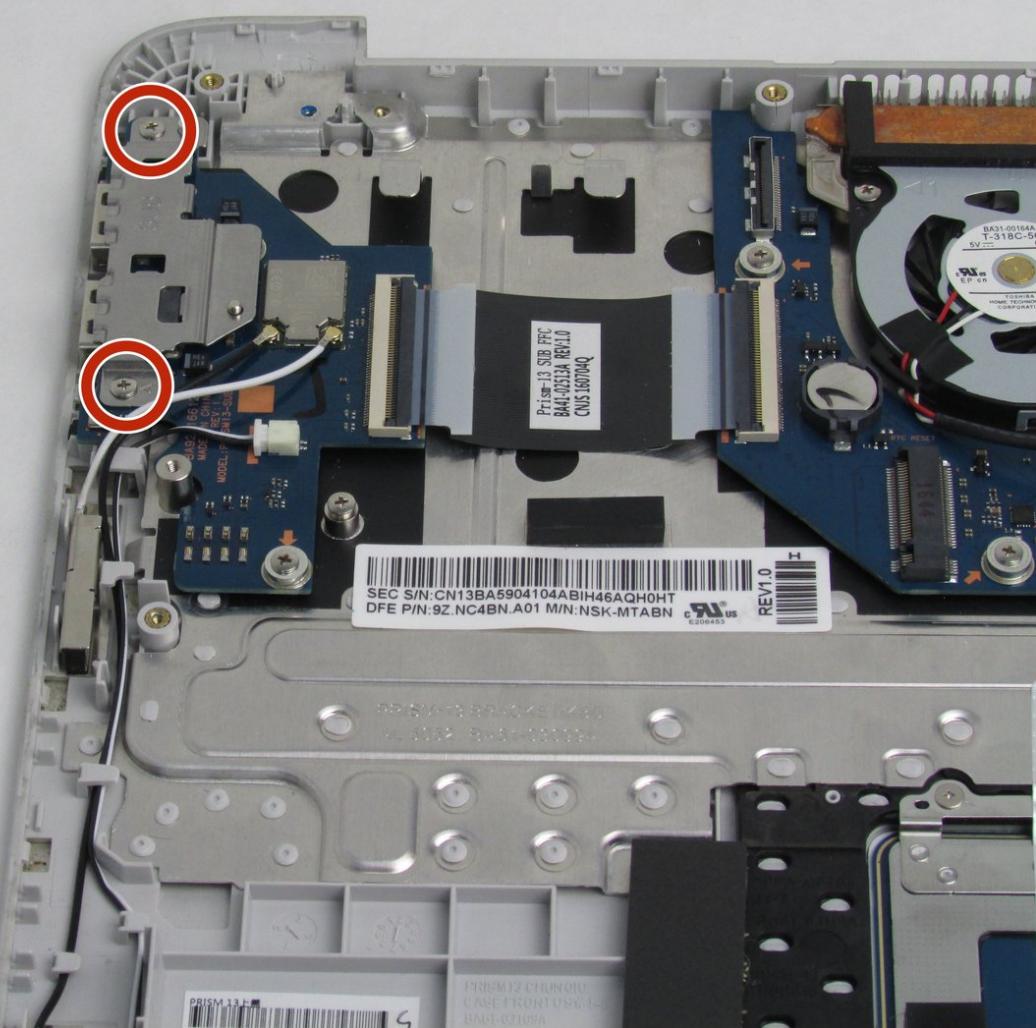

This document was generated on 2020-02-14 12:19:25 PM (MST).

## INTRODUCTION

This is a guide to replace the Wi-Fi card on the Samsung Notebook 7 Spin NP740U3MK01US. However, it is extremely difficult to replace the Wi-Fi card itself so this guide shows how to replace the whole USB board that the Wi-Fi card is attached to. If you are unable to connect to a wireless network use this guide to replace your Wi-Fi card.

## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Battery




- Flip your laptop over so that the back is face up.

## Step 2




- Use a Phillips #00 screwdriver to remove the four 6.5mm screws and the six 4.5mm screws that secure the back plate.

## Step 3

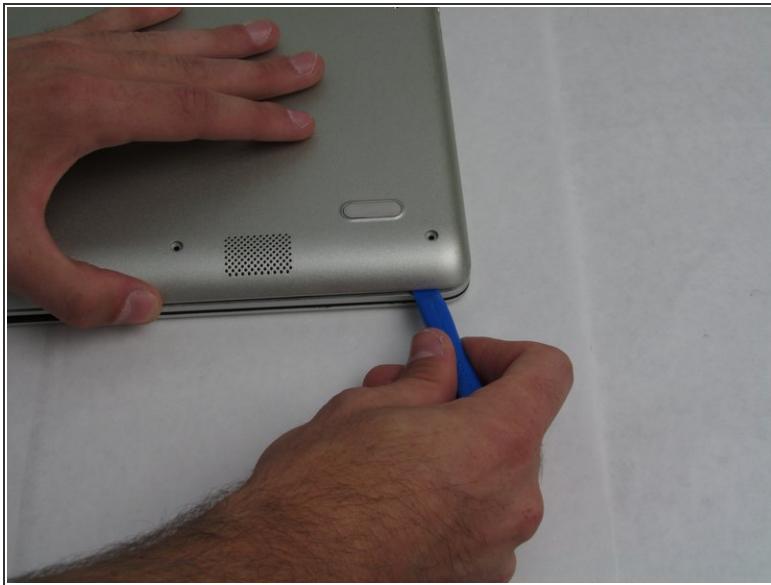


- Use a plastic opening tool to remove the back plate from the laptop.
- *It is recommended that you start from a corner then run the tool along the edge of the back plate.*

## Step 4

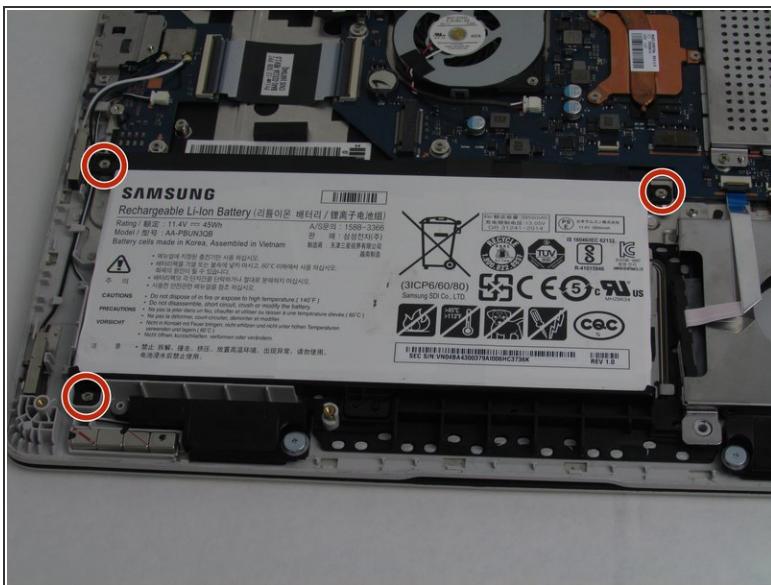

- Use a Phillips #00 screwdriver to remove the three 4.5 mm screws holding the battery in place.

## Step 5

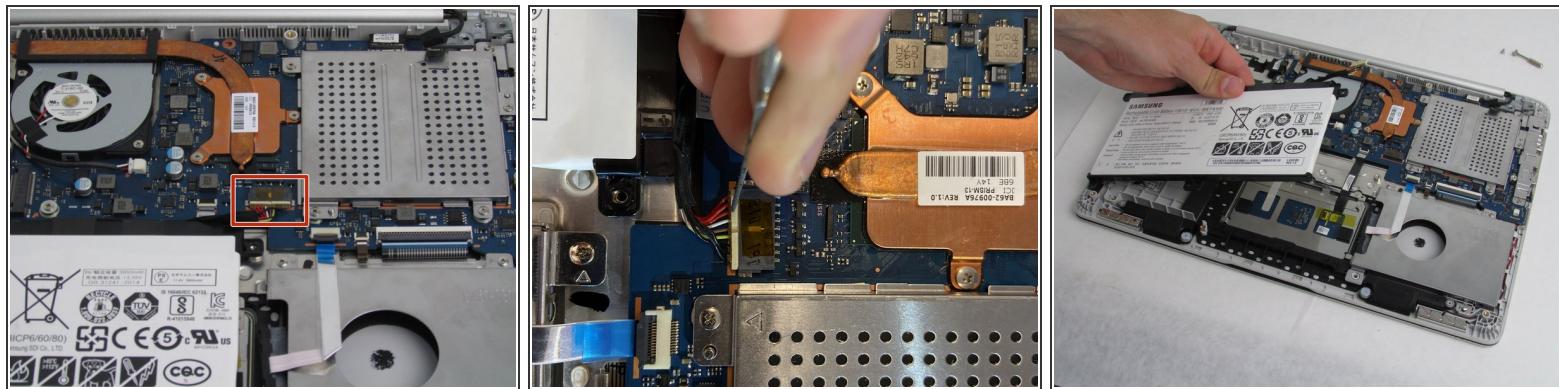

- Use a spudger to pry the battery connecting cable from the laptop and remove the battery.


 Using the metal spudger may severely damage the internal components in your device.

## Step 6 — Wi-Fi Card



- Use the Phillips #00 screwdriver to remove the two 4.5mm screws holding the cover plate in place.

## Step 7

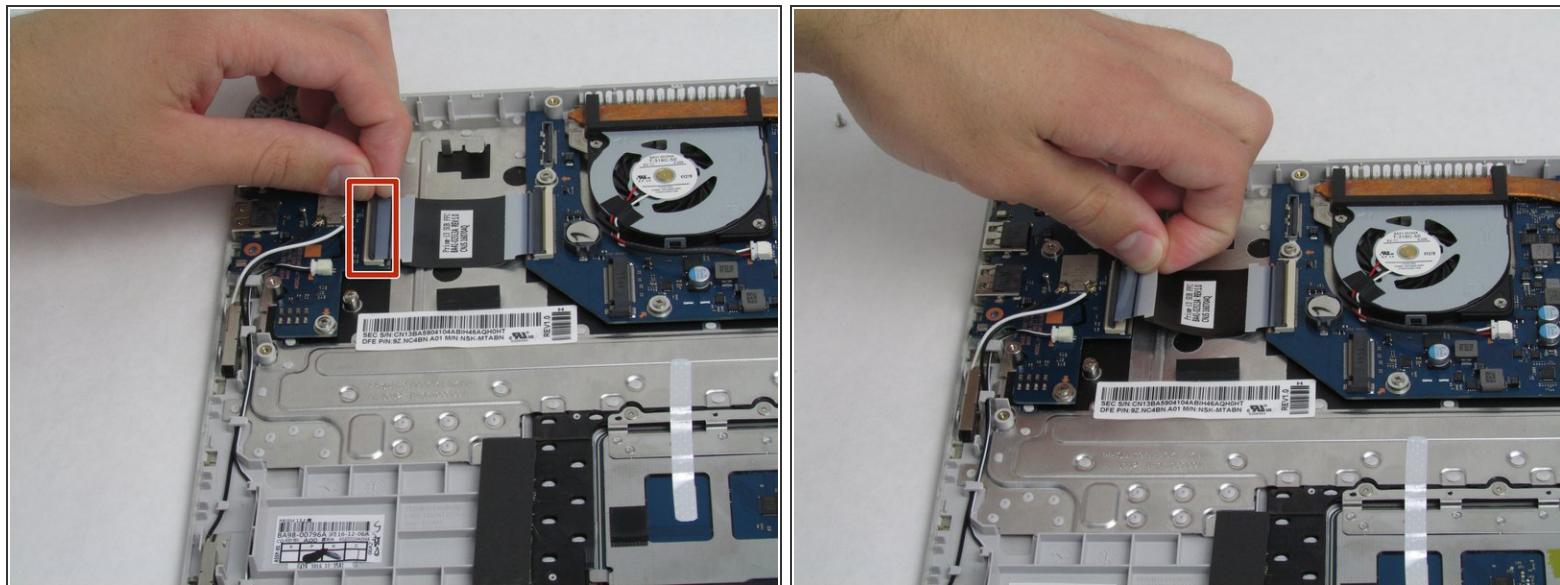



- Remove the black ribbon cable by pulling up on the black cover and sliding out the cable.

## Step 8



- Remove the three black and white cables by gently pulling on them.

## Step 9

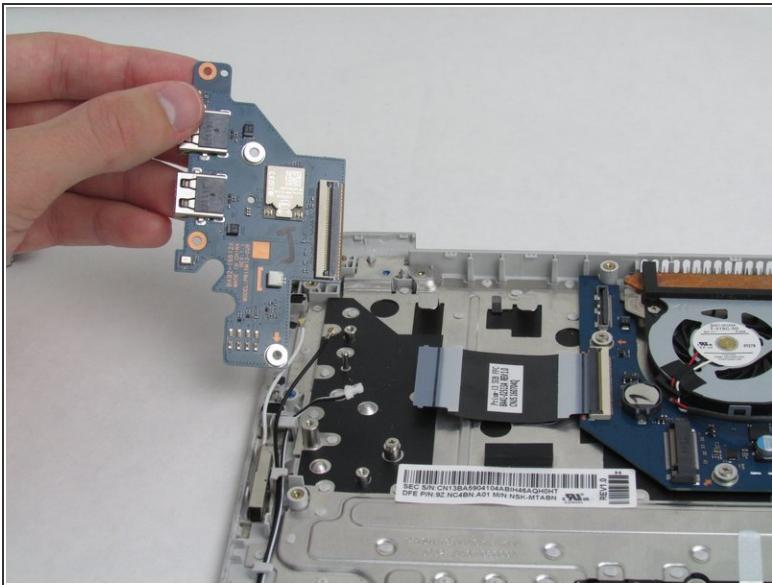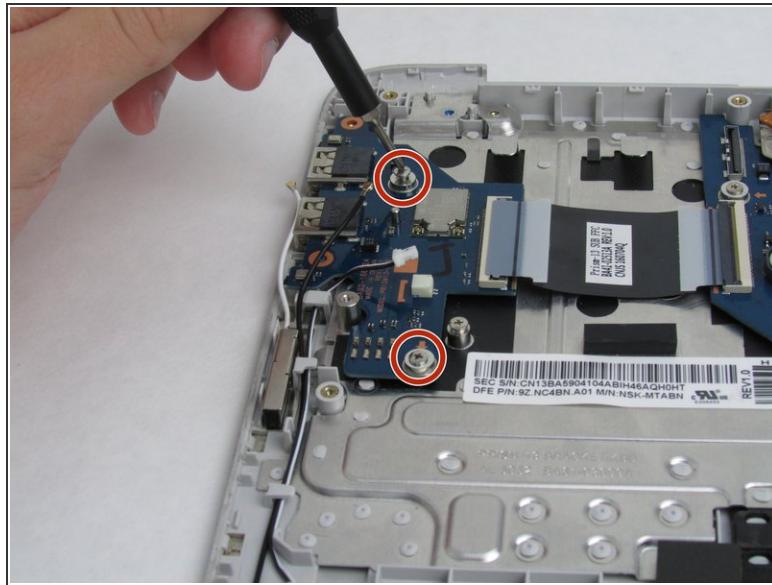

- Use the Phillips #00 screwdriver to remove the two 4.5mm screws holding the USB board down and remove the board.

To reassemble your device, follow these instructions in reverse order.