



Samsung Portable Dualband Tri-Mode Battery Replacement

Use this guide to replace the battery of the Samsung Portable Dualband Tri-Mode phone.

Written By: Kali Kupp



INTRODUCTION

If the battery is dead, damaged or malfunctioning, the battery must be replaced. This guide outlines how to remove a malfunctioning battery for the Samsung Portable Dualband Tri-Mode phone.

Step 1 — Battery



- Slide the battery out from the battery compartment on the back of the phone.

To reassemble your device, follow these instructions in reverse order.