



Samsung Rant Keypad Replacement

Instructions for accessing and removing the keypad in the Samsung Rant cell phone.

Written By: Denise Cooper



INTRODUCTION

In order to access the keypad, you must first remove the back cover, battery and rear case from the cell phone.

TOOLS:

- [Tweezers \(1\)](#)

Step 1 — Back Cover



- Turn phone over in the palm of your hand, with the screen facing down.
- While grasping the bottom part of the phone with one hand, use your thumb to push the release button at the end of the phone.
- This will release the back plate latch; then lift the back plate up and out toward the other end of the phone.
- You should now be able to lift the plate completely off the phone.

Step 2 — Battery



- Place your thumb at the notched area at the bottom portion of the phone.
- Gently lift up and pull the battery out in the opposite direction.

Step 3



- Take battery out of phone.

Step 4 — Rear Case





- Hold the phone steady with one hand.
- In the other hand use a philips screwdriver to loosen and remove all 3 screws.

Step 5



- Gently lift off the rear case from the front case.

Step 6 — Keypad

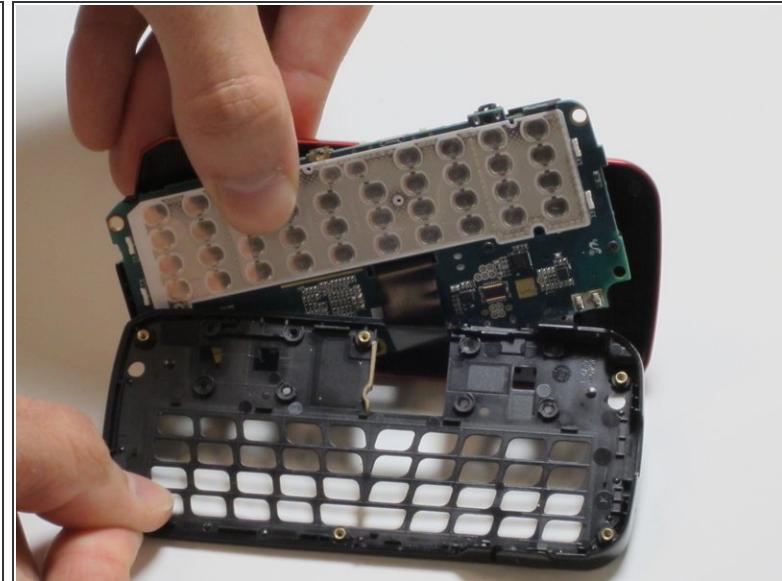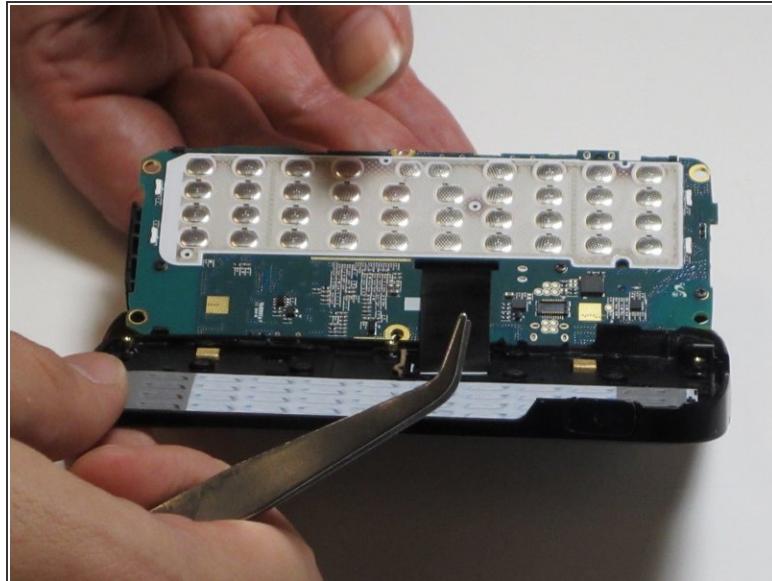

- Using a pair of tweezers, grip the keypad gently.
- Lift the keypad out of the phone.

To reassemble your device, follow these instructions in reverse order.