




Samsung SCH-A670 Screen Replacement

Written By: Nathan Brink

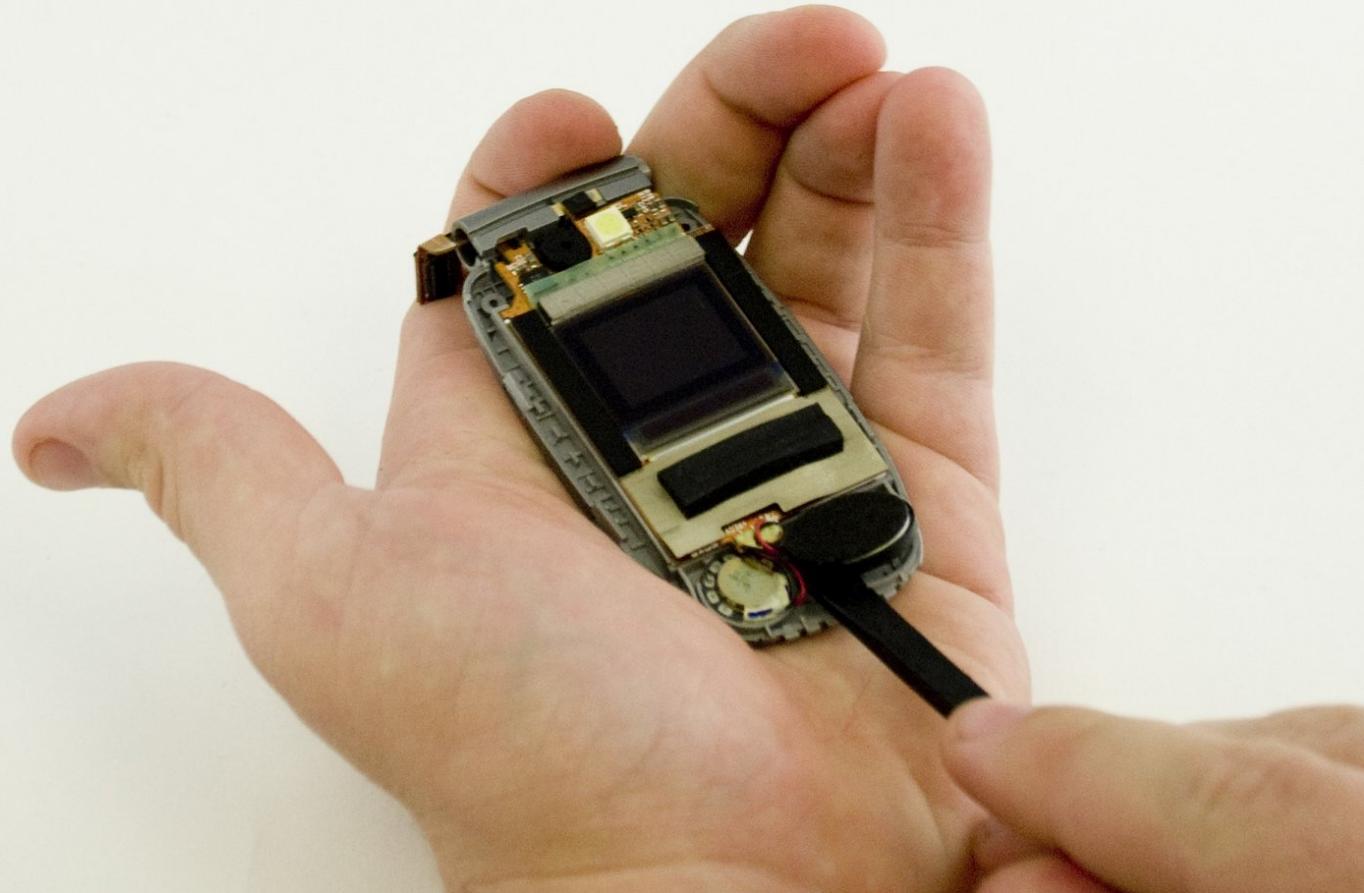

INTRODUCTION

The screen may become broken over time. This guide will assist in the replacement of the screen.

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Battery Cover



- Slide the latch on the back of the phone up.

Step 2 — Battery



- Remove the battery.

Step 3 — Logic Board




- After removing the battery, remove the four small Phillips-head screws with a #0 Phillips screwdriver.

Step 4




- Using a thumbtack, pry the small plastic cover from the case near the base of the antenna.

Step 5

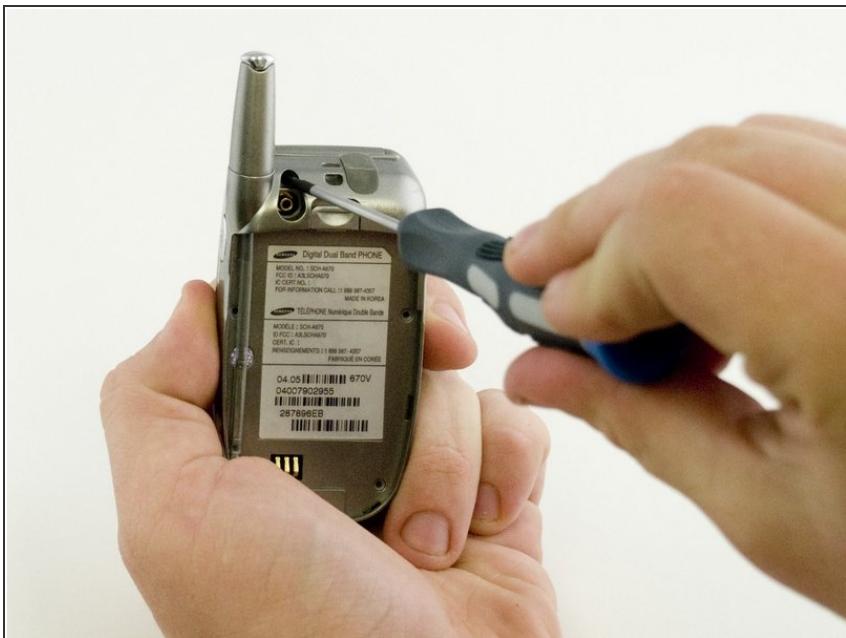

- With a #0 Phillips screwdriver remove the screw which you just uncovered.

Step 6

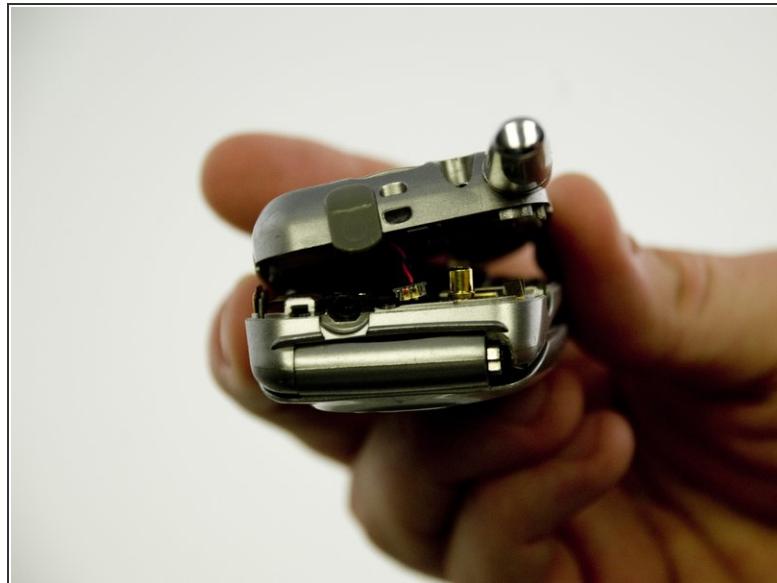

- Using the spudger, carefully pry the case apart starting near the charging port. Ease the case open.
- Then disconnect the small power connector near the top of the phone.


Step 7

- Gently pry up the ribbon-type connector with the spudger.



Step 8

- Carefully pry the logic board from the case with the spudger.

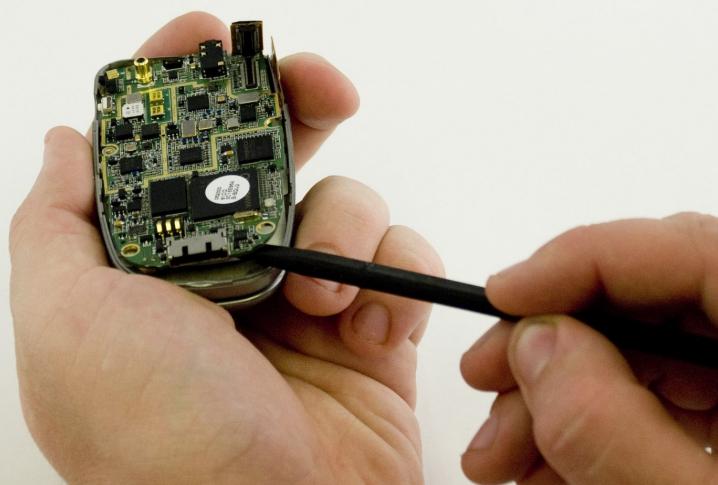

Step 9 — Keypad



- Once the logic board has been removed, peel the keypad up.

Step 10 — Keypad Housing



- When using a spudger the keypad housing comes off quite easily, although it may be necessary to guide the ribbon cable through the slot in the housing.

Step 11 — Screen Casing



- Remove screws with #0 Phillips screwdriver.


Step 12



- Carefully pry apart the casing with the spudger tool.


Step 13 — Screen

- Use the spudger to carefully pry off the speaker.

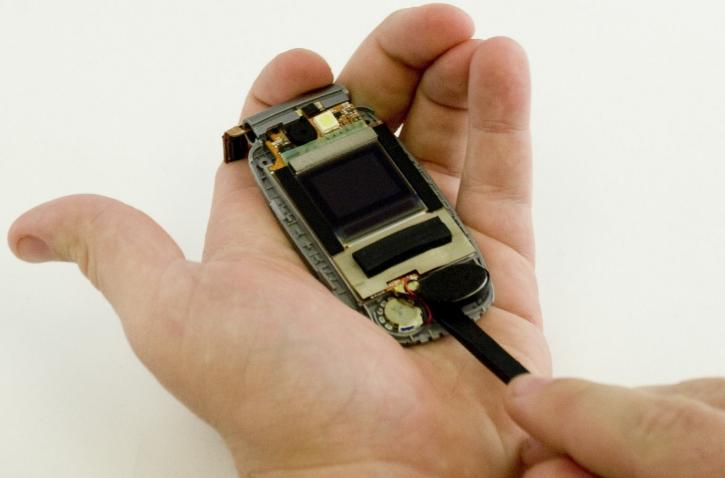


Step 14

- Carefully pry off the ringer with the spudger.

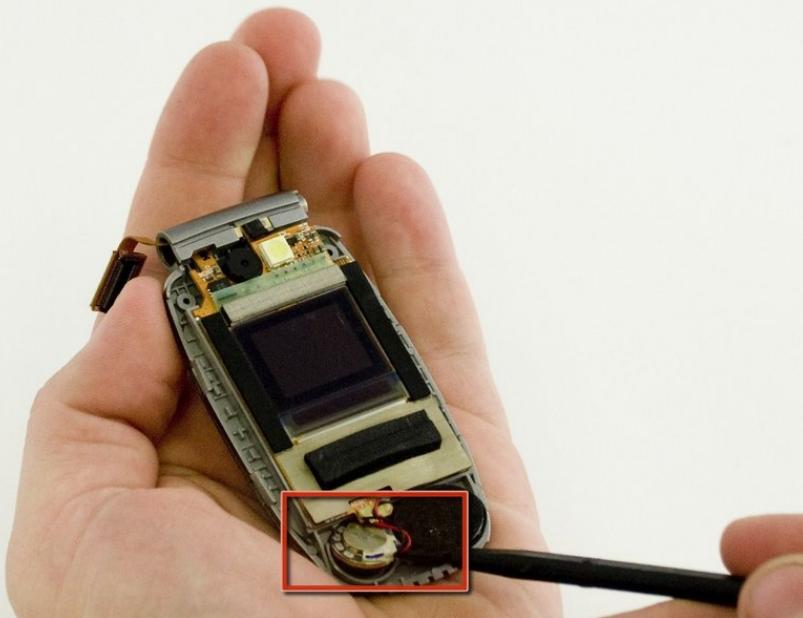

Step 15

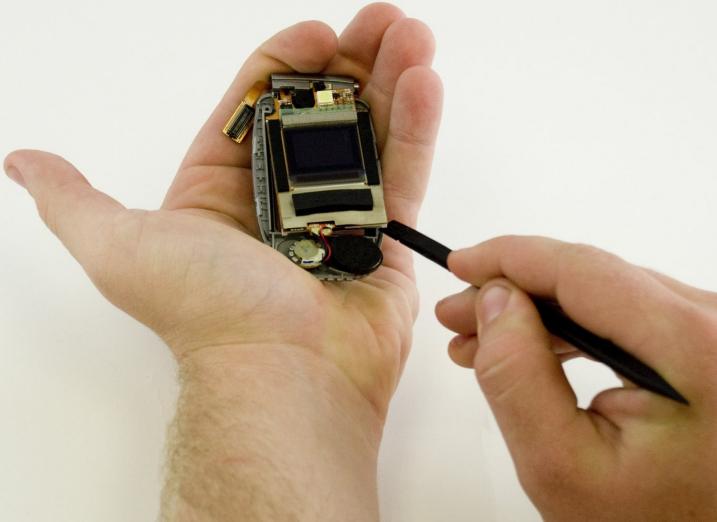

- Carefully pry off the screen with the spudger.

To reassemble your device, follow these instructions in reverse order.