



Samsung ST700 Battery Replacement

This replacement guide will explain in great detail how to replace the battery of the Samsung EC-ST700 digital camera.

Written By: Tanner Studley



Step 1 — Battery



- The battery is located on the bottom of the camera underneath a latch door
- To open the latched door, move the latch (circled in the picture) toward the center of the camera, and the door should pop open.

Step 2



- When the bottom components are exposed, the battery is held by a blue latch. (Blue latch is circled in the picture)
- Push the blue latch latch to release the battery from its slot. It should be pushed out.
- Remove the battery.
- Move the blue latch to put in the new battery.
- Make sure that the battery is going in the correct way. The three golden slits should be matching up with three golden prongs on the bottom of the battery holder.
- Close the latch door over the components and move the latch toward the side of the camera. Try turning on the camera.

To reassemble your device, follow these instructions in reverse order.