




Samsung Series 5 3G Chromebook 16 GB

SanDisk Replacement

This guide will show you how to replace your Chromebook's SSD.

Written By: Helder Avelino

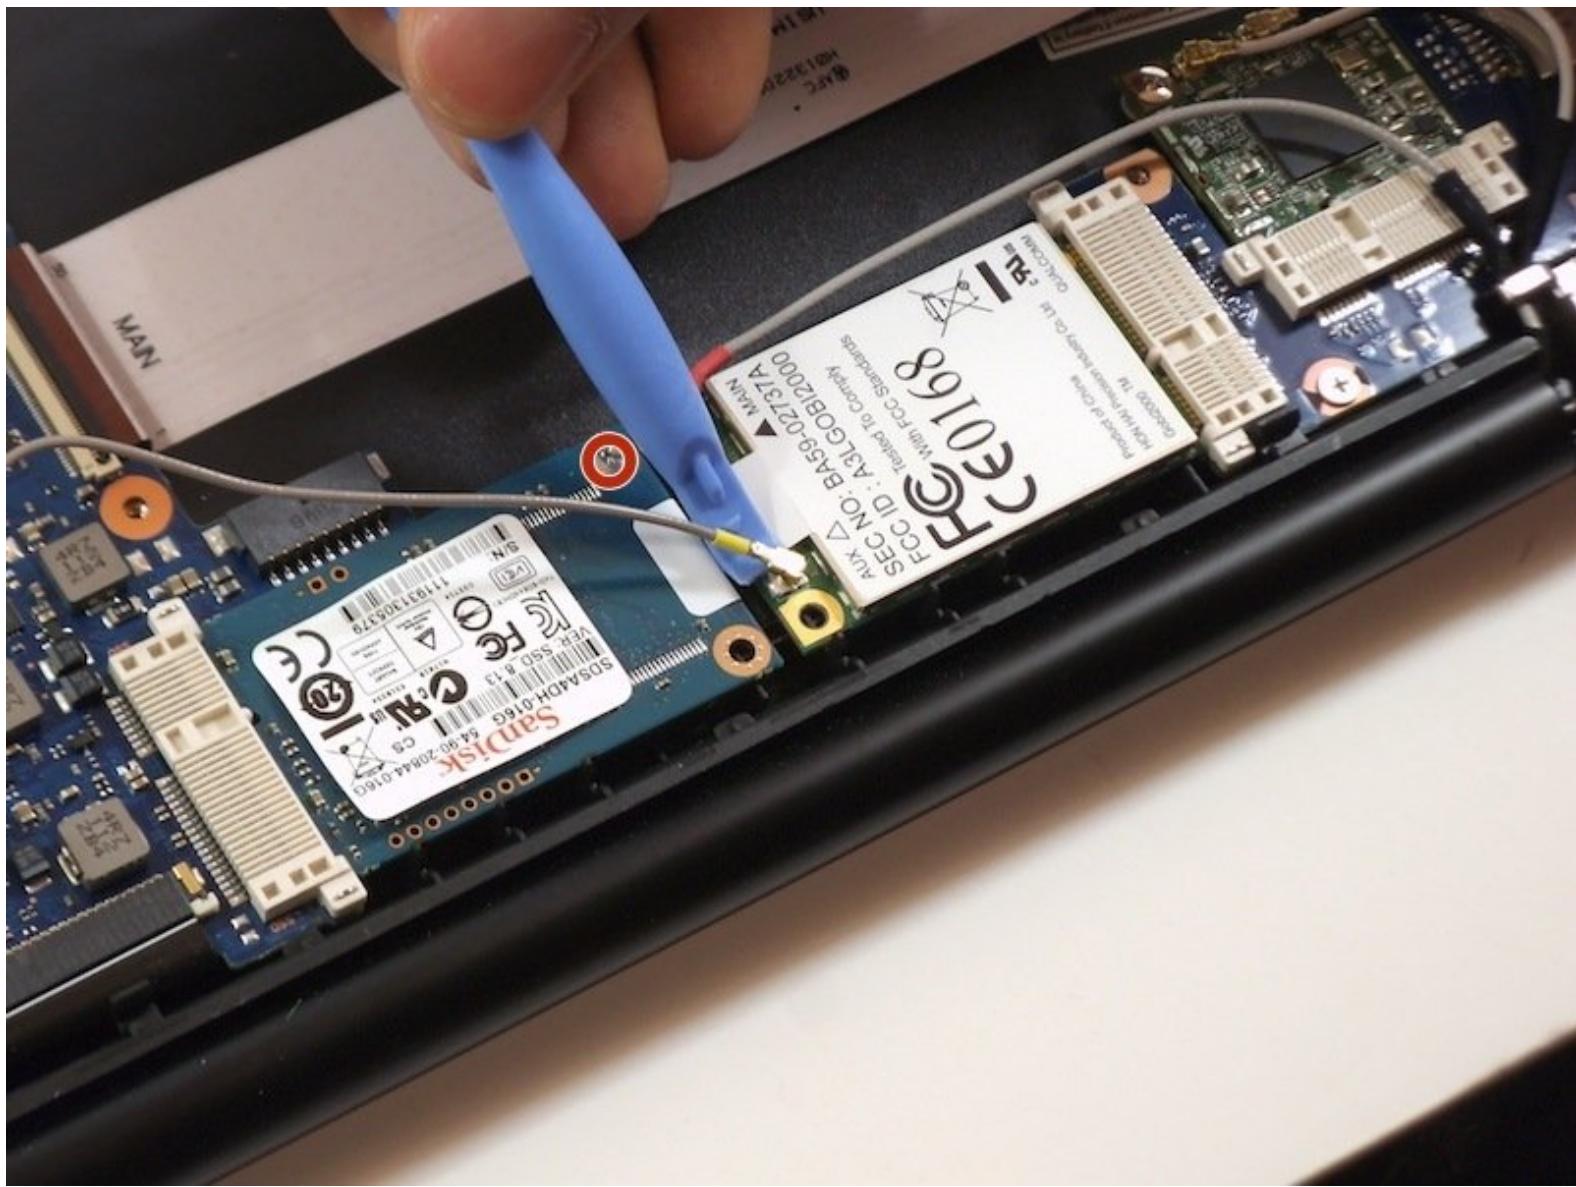

INTRODUCTION

The 16 SanDisk is a limited internal memory capability for the Chromebook.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Back Cover




- Make sure your Chromebook is powered off before you begin.
- Place the laptop on a flat surface with the bottom side facing up.
- Remove the rubber feet from the bottom of the panel. The easiest way to do this is to use your fingernails to pick them out.
- Remove all the seven screws in the bottom panel.

Step 2



- Loosen the back cover panel by using the flathead screwdriver or the spudger.

Step 3

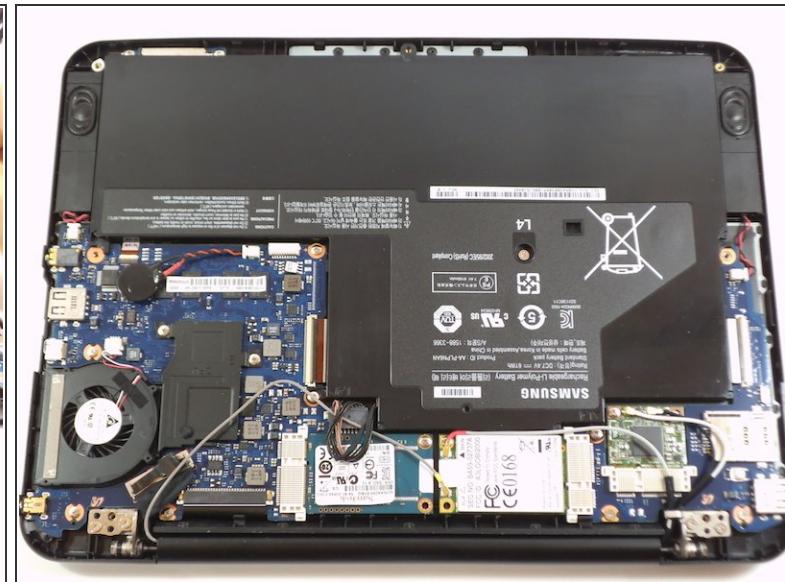

- Once you work your way around, you can remove the panel.

Step 4 — 16 GB SanDisk



- Remove the single screw.
- use the plastic tool to disconnect the WWAN antennas from the board.
- After removing its mounting screw, the 16 GB SanDisk can be removed from the motherboard.

To reassemble your device, follow these instructions in reverse order.