



# Samsung Series 5 3G Chromebook WWAN board Replacement

Removing the WWAN board.

Written By: Helder Avelino



## INTRODUCTION

Outline what you are going to teach someone how to do.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)

## Step 1 — Back Cover




- Make sure your Chromebook is powered off before you begin.
- Place the laptop on a flat surface with the bottom side facing up.
- Remove the rubber feet from the bottom of the panel. The easiest way to do this is to use your fingernails to pick them out.
- Remove all the seven screws in the bottom panel.

## Step 2




- Loosen the back cover panel by using the flathead screwdriver or the spudger.

## Step 3

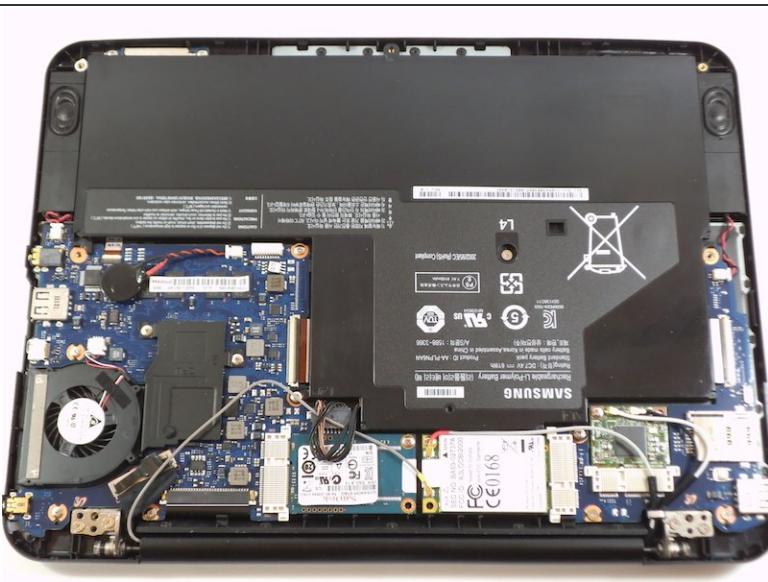

- Once you work your way around, you can remove the panel.

## Step 4 — WWAN board

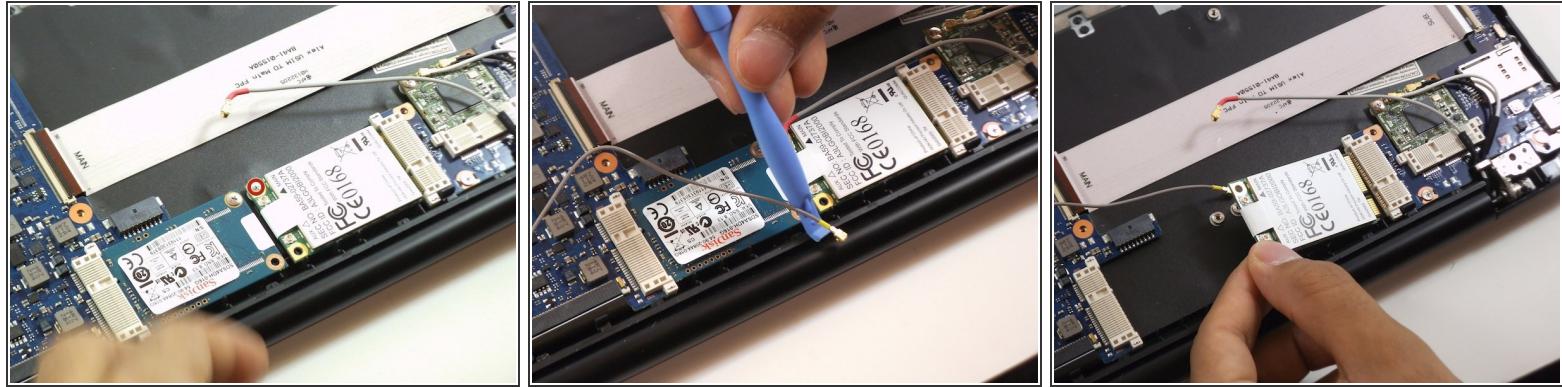

- Remove the single Phillip screw
- Disconnect the WWAN antennas from the I/O board
- Remove the WWAN board from the motherboard.

To reassemble your device, follow these instructions in reverse order.