



Samsung Series 5 Ultrabook LCD Screen Replacement

Whenever a laptop is dropped, the potential exists for the screen to fracture or shatter; the screen may also simply fail. This guide will show how to replace the LCD screen if it is not working.

Written By: Timothy



This document was generated on 2020-01-19 08:18:27 AM (MST).


INTRODUCTION

This guide will show how to fix a broken screen on the Samsung Series 5 Ultrabook. This can be difficult, and care should be used not to injure one's self on the old screen and not to break the new screen.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Remove the Touchscreen

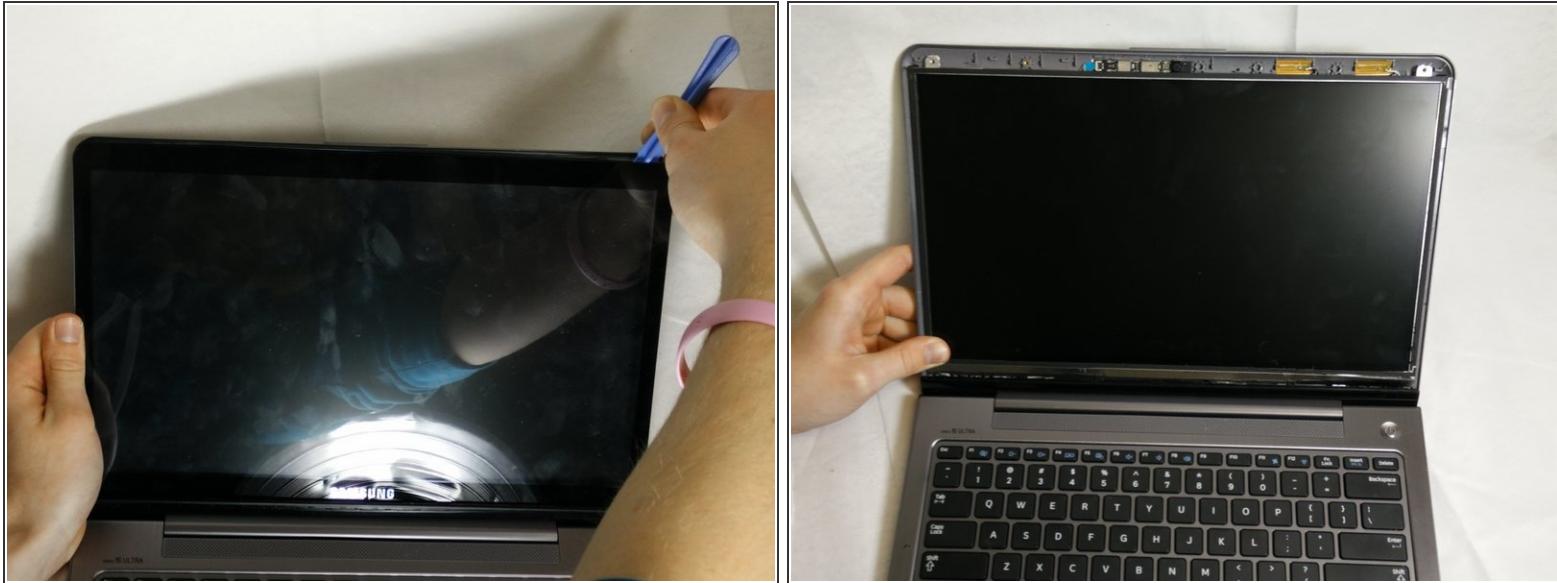

⚠ Before starting, make sure the device is powered off and unplugged to prevent electrocution.


- Using a sharp object, pry the screen away from the back cover. Make sure to pry *over* the rubber rather than underneath as this can cause screws to break out.
- ⓘ This step is difficult! See if a friend will help you take the cover off as it is easier with two sets of hands pulling.

Step 2 — Disconnect the Touchscreen



- There is a small, skinny wire leading from the bottom of the touchscreen to the joint of the laptop. Remove carefully with tweezers.

Step 3 — Remove the Screen's Frame

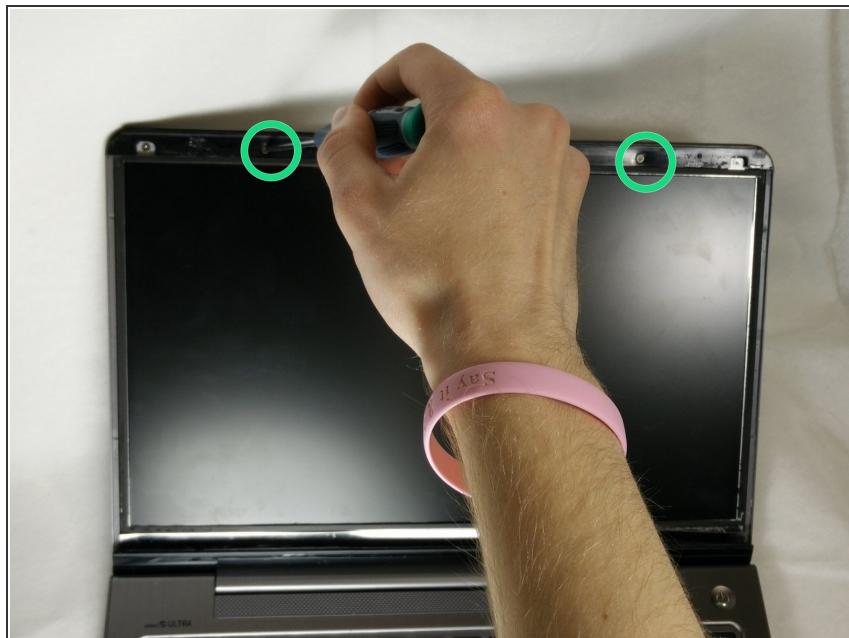

- Remove the frame by unscrewing the two 3.7 mm screws at the top.

Step 4 — Unscrew the Screen



- Unscrew the six 3.7 mm screws holding the screen in place.

Step 5 — Unplug the Video Connection



- Pull the screen down and remove the tape over the video connection.
- Remove the video cables from the screen. This is easiest with tweezers.

Step 6 — Remove the Old Screen



- Remove the old screen from its location.

To reassemble your device, follow these instructions in reverse order.