



# Samsung Stratosphere Display Replacement

Whether black, cracked, or worse, this guide will teach you how to replace your battle-scarred screen.

Written By: William Lai



## INTRODUCTION

This guide will show you how to detach and replace the phone's touchscreen display.

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

## Step 1 — Battery



- Using your fingers, pry along the groove at the top of the phone.
- Pull back on the rear casing until it comes free from the device.
- The casing will make a cracking sound as it is removed.

## Step 2



- With your fingers, pry from the bottom of the battery to loosen it.
- Lift away to remove the battery from the phone.

## Step 3 — Motherboard



- Locate the red and white sim card located above the battery housing.
- Remove the sim card by sliding it downwards from its slot with your fingers.

## Step 4



- Remove the seven silver 3mm screws securing the rear panel using the Phillips #000 screwdriver.


***i*** Once loosened, some screws may get stuck in the casing. Use tweezers to remove them.

## Step 5




- Pry around the rear panel with a plastic opening tool to loosen it.  
 Prying too deeply may damage delicate components inside the phone.
- Remove the rear panel from the phone with your fingers.

## Step 6

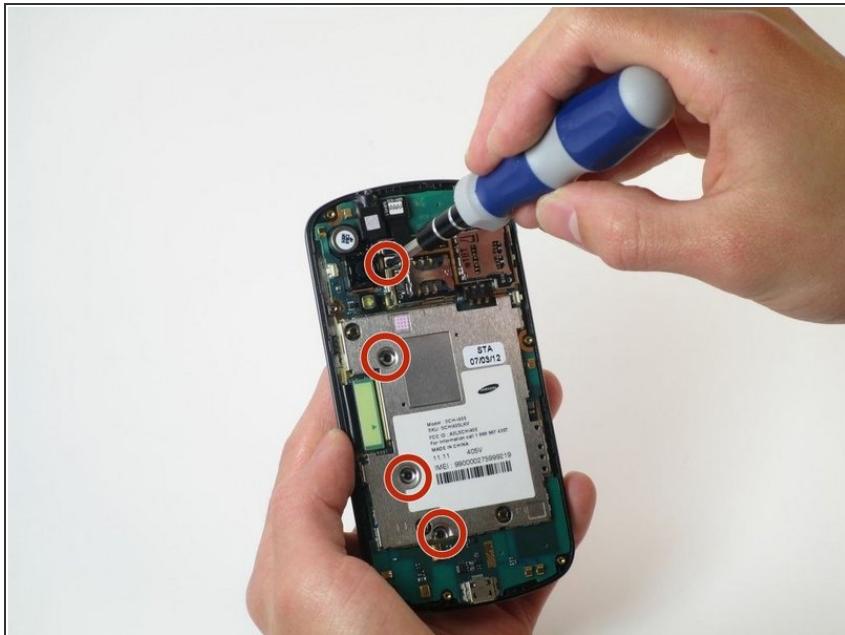

- Remove the four black 3mm screws securing the motherboard with the Phillips #000 screwdriver.

## Step 7

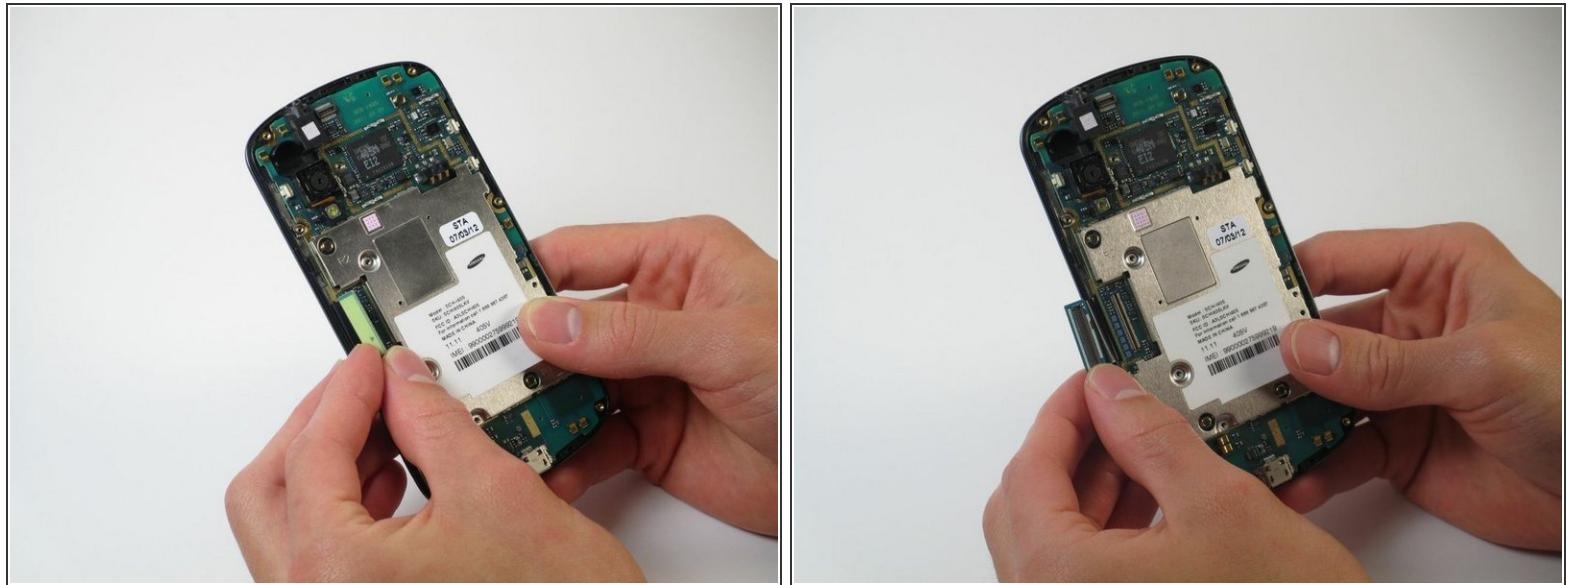


- Locate the flex cable attachment at the tab with a green arrow printed on top.
- Pry from the side the arrow is pointing with your fingers.
  - The cable will audibly snap as it is removed from its attachment.
  - Let the cable hang loosely to the side of the phone.

## Step 8




- Pull the motherboard up from the side opposite the loose flex cable.
- If necessary, use a plastic opening tool to separate the motherboard from the key pad underneath.
- Lift to remove the motherboard from the device.

## Step 9 — Front Camera

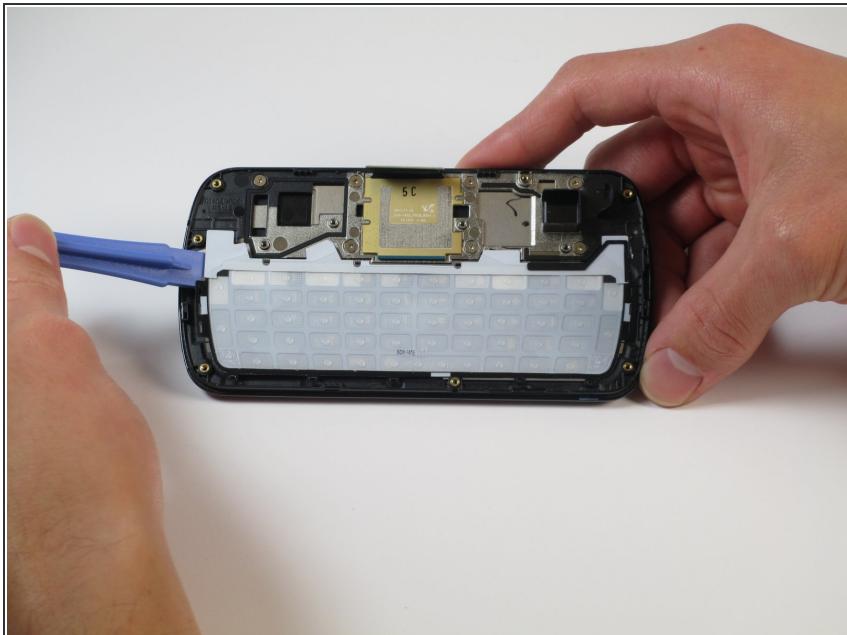


- Insert a plastic opening tool into any side of the phone case to separate the keyboard from the rear panel.
- Pry the keyboard away from the casing with the plastic opening tool.
- The keyboard should come off with almost no force at all.

## Step 10

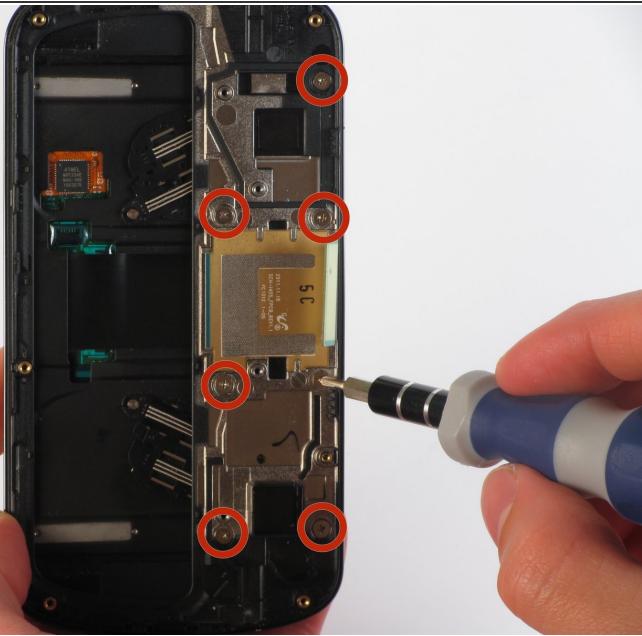

- Remove the 7 silver 2mm screws attaching the silver metal plate to the rear panel with the Phillips #000 Screwdriver.


## Step 11

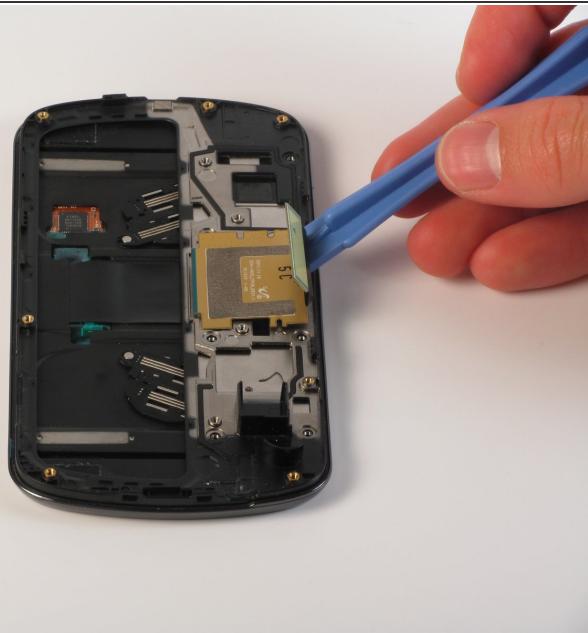

- Use the plastic opening tool to carefully loosen the golden metal plate.


*(i)* The golden metal plate is stuck to the rear panel with a strong adhesive, so a moderate amount of force may be needed.

## Step 12

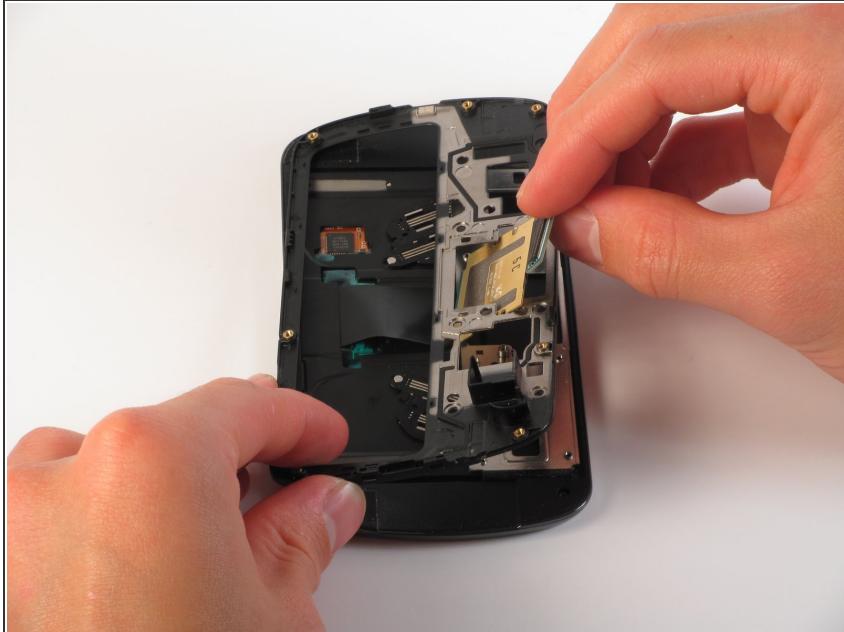

- Lift the gold plate with your fingers, repositioning it to slide through the keyboard casing underneath.
- Carefully take off the keyboard casing with your fingers.
- The golden metal plate should fit through the wide slot of the casing.

## Step 13

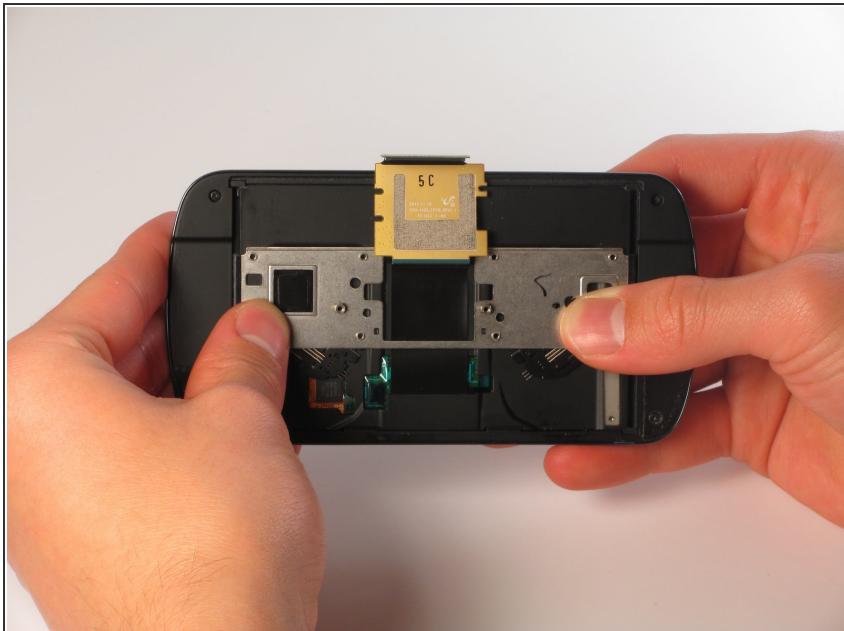

- Slide the silver metal plate down and away from the to the flex cable and gold metal plate.

***i*** The metal plate is attached to springs that offer a small amount of resistance, so it will snap into place.

## Step 14



- Unscrew the 4 black 3mm screws from the rear panel with the Phillips #000 Screwdriver.

## Step 15




- Insert the plastic opening tool into the groove at the top of the rear panel.
- Firmly slide the plastic opening tool all around the rear panel. The panel will audibly snap as it comes apart.

*(i)* These 2 pieces are attached well, so a significant amount of force is needed to separate them.

This document was generated on 2019-09-30 11:19:33 AM (MST).

## Step 16

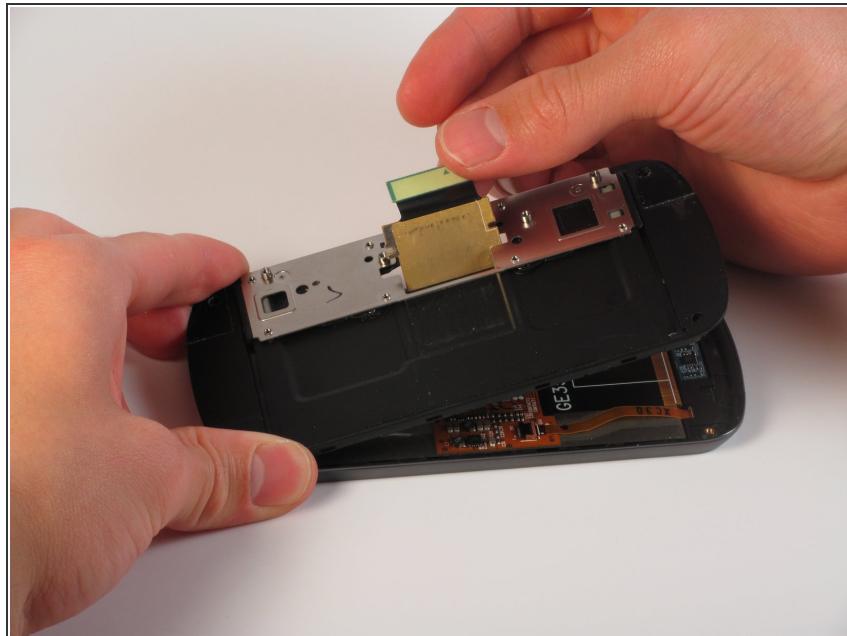


- Lift the flex cable and position it so the part containing the metal plate can come free.
- Pull the part containing the metal plate away from the rest of the rear panel.

## Step 17





- Use tweezers to loosen the front-facing camera from the plastic casing.
- Pull the black rectangular piece, attached to the front facing camera, away from the rear panel.

## Step 18 — Flex Cable

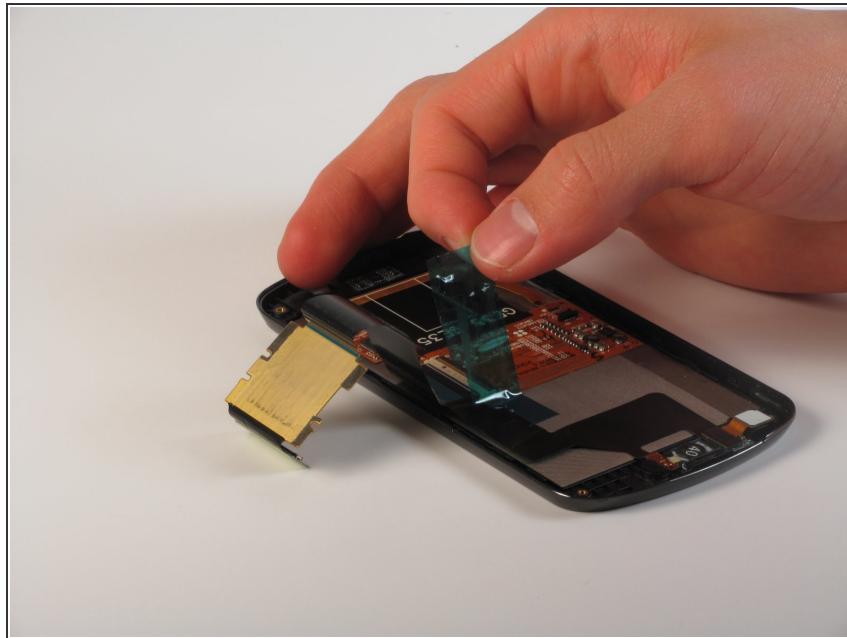

- Carefully peel the blue tape from the bottom of the flex cable and set it aside.

## Step 19

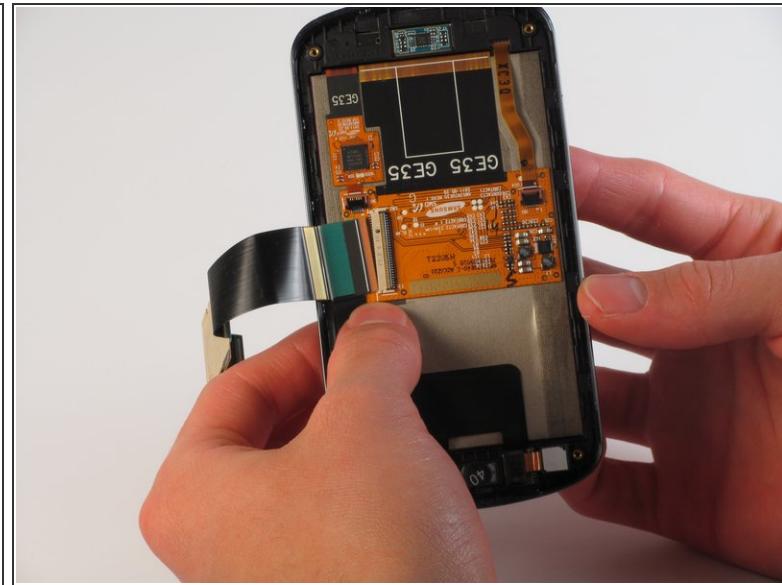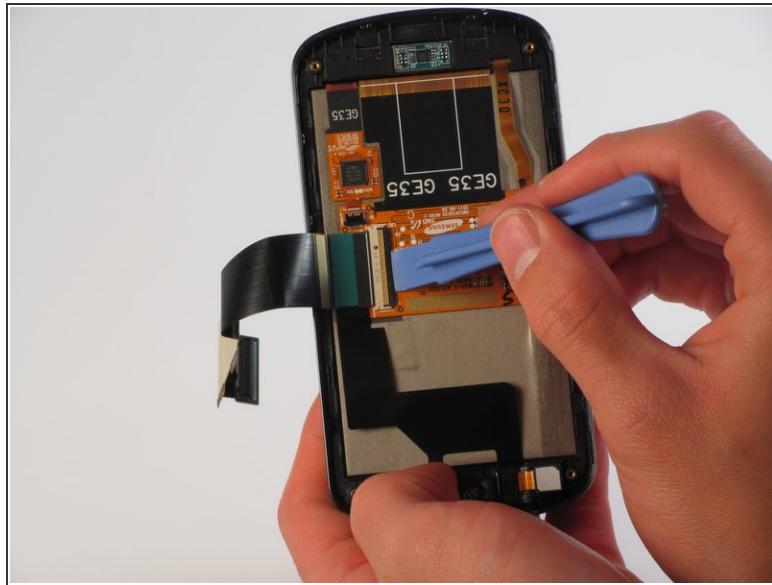

- Use one of the plastic opening tools to loosen the flex cable from its central housing.
- Pull lightly on the flex cable to free it from the housing.
- The cable may audibly snap as it is freed from its attachment.


## Step 20



- Use tweezers to loosen the flex cable and speaker from the bottom of the phone.
- Pull upward with the tweezers and the flex cable will come loose.

**i** The flex cable will come free with the front-facing camera attached. In order to remove the front-facing camera, see our guide [here](#).

## Step 21 — Display

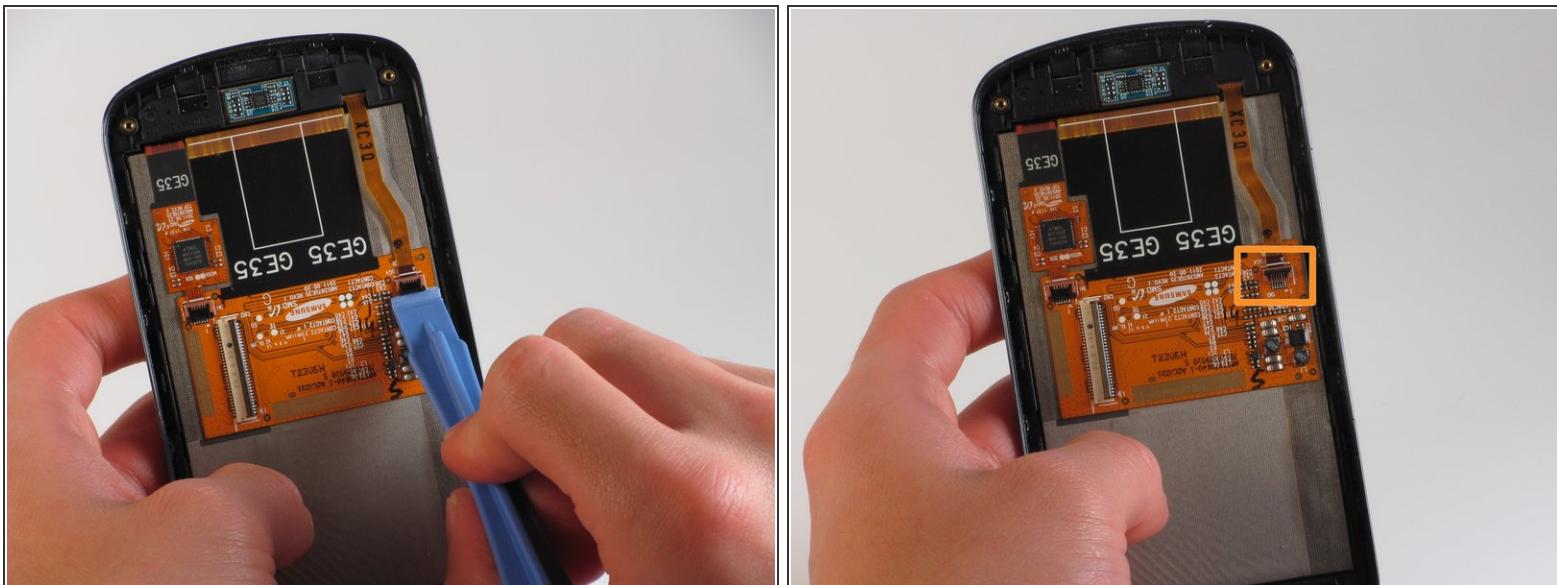


- Locate the clamp holding the gold display cable to the back of the screen.
- Using the plastic opener tool, lightly pry the cable attachment into an upright position.

*(i)* The clamp attachment will snap as it is pried upright.

- Once completed, the attachment should resemble the marked section.


## Step 22

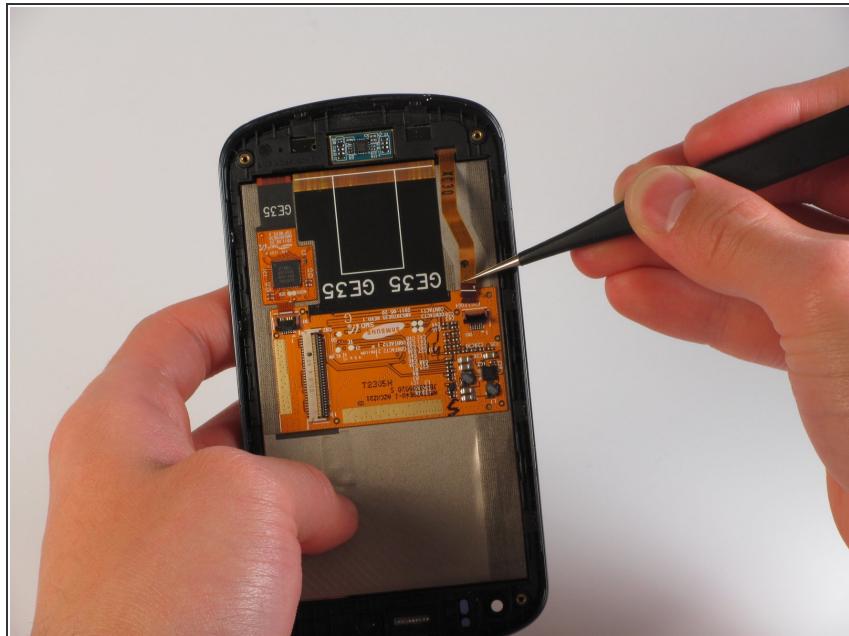

- Using the tweezers, carefully pull the gold display cable to remove it from its attachment.

 Be careful not to bend the display cable as this is a very sensitive part of the phone.

## Step 23

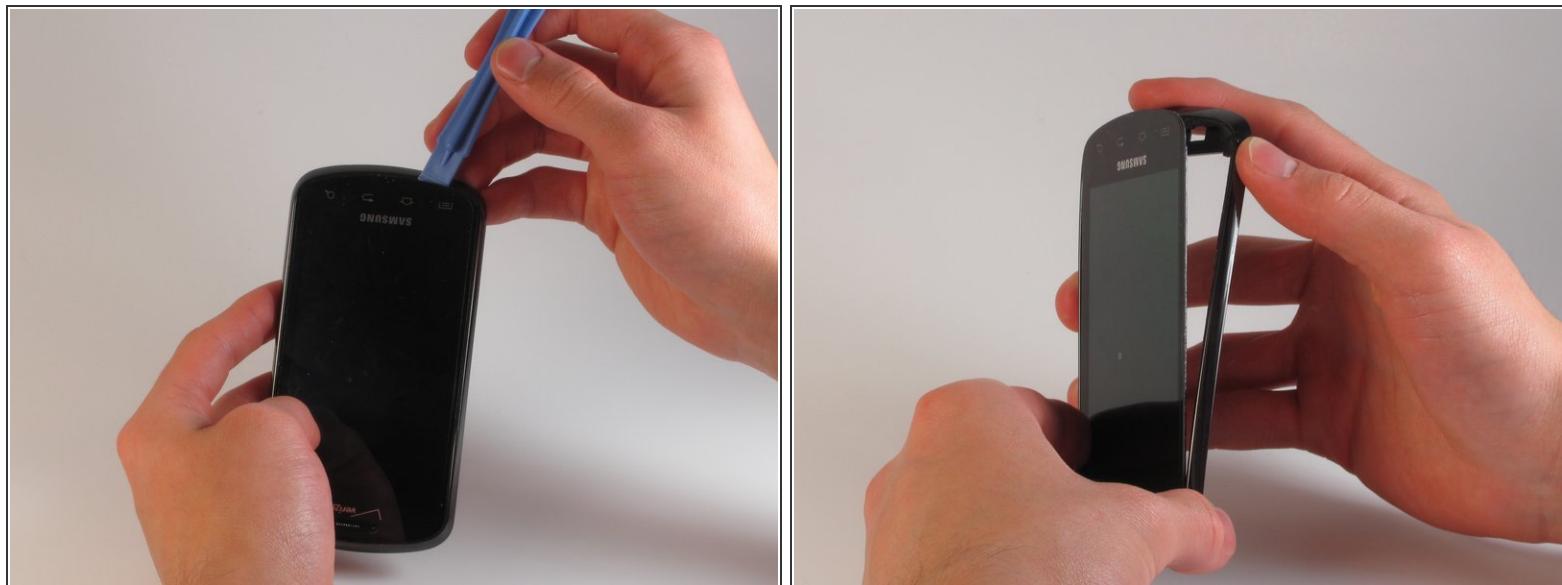

- Pry around the screen with a plastic opening tool to loosen it from the frame.
- Repeat this process as necessary; a lot of adhesive holds the screen to the frame.
- Gently push forward from the back of the display to remove the screen from the frame.

To reassemble your device, follow these instructions in reverse order.