



# Samsung TFT Color YP-T7J Front Cover Button Replacement

The objective of this guide is to demonstrate how to replace the button on the front of the MP3 player.

Written By: Jason Farr



This document was generated on 2019-10-12 04:08:31 AM (MST).

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — The Back Cover



- Remove the 2 screws on the back cover using a Phillips head #0 screwdriver.

## Step 2




- Remove the screw on each side of the device using a Phillips head screwdriver.

## Step 3



- Using the plastic opening kit, place the prying end of the kit into the opening created by removing the screws.
- Gently pry open the back cover. Insert the plastic opening tool in between the cover joints.


## Step 4 — The Battery

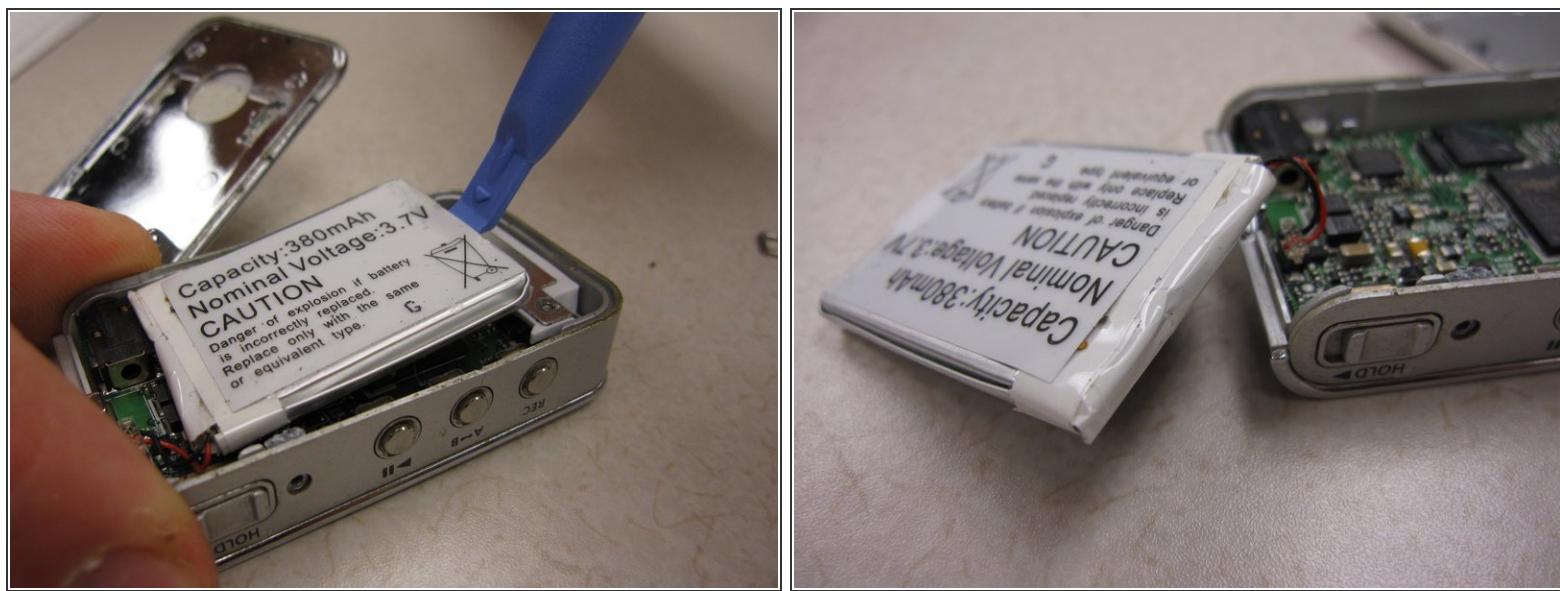

- Once the back cover has been removed the battery will be visible.
- Pry the battery from the device.

**(i) NOTE:** The battery should still be connected to the device

## Step 5

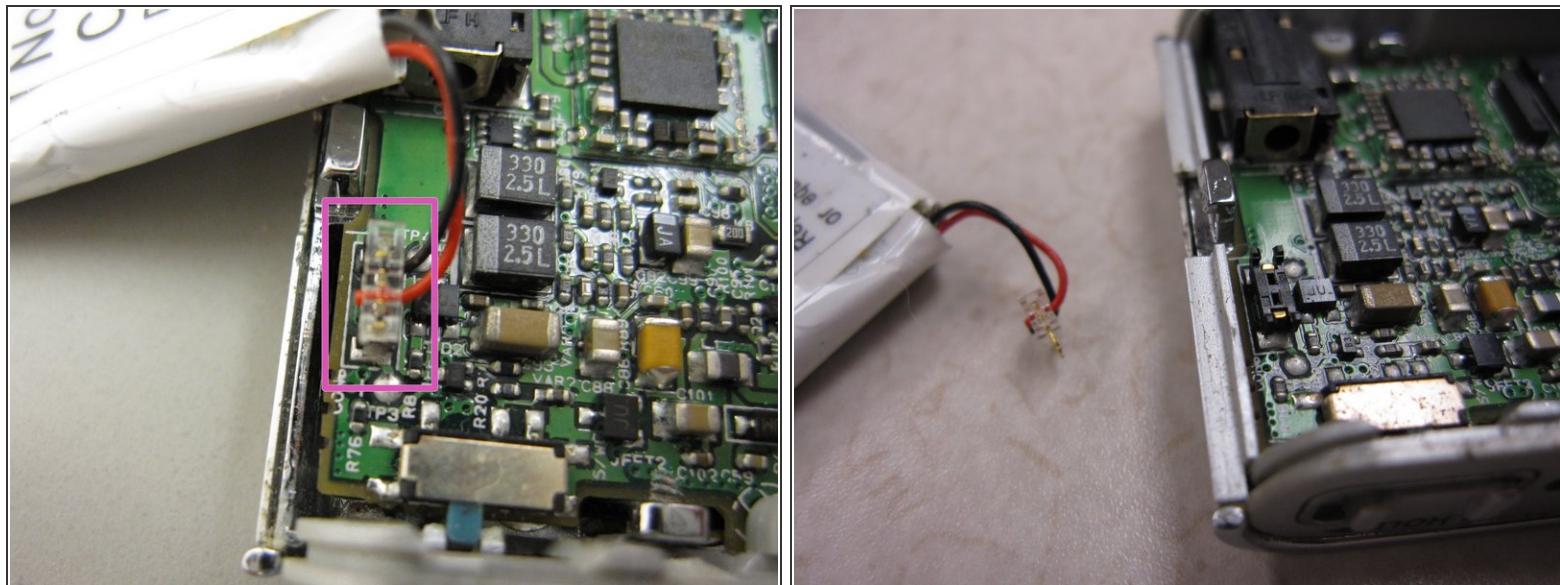


- Unplug the battery connecting cables.
- *(i)* NOTE: The battery now should be free from all connections to the device.

## Step 6 — Disassembling Samsung TFT Color YP-T7J USB Connector Dock



- Once the battery has been removed you can see the motherboard.
- Unscrew 4 screws on the metal docket using a Phillips head screw driver.
- The USB connector can now be taken off of the device.

## Step 7 — The Front Cover

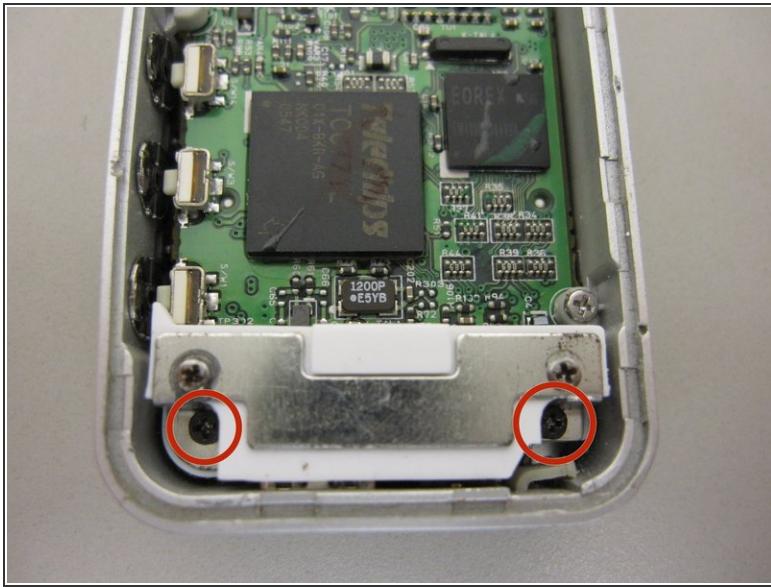


- Using the philips screwdriver, remove the two screws on the mother board.

## Step 8




- Place the pry tool in-between the front cover and mother board.
- Gently separate the front cover.

## Step 9

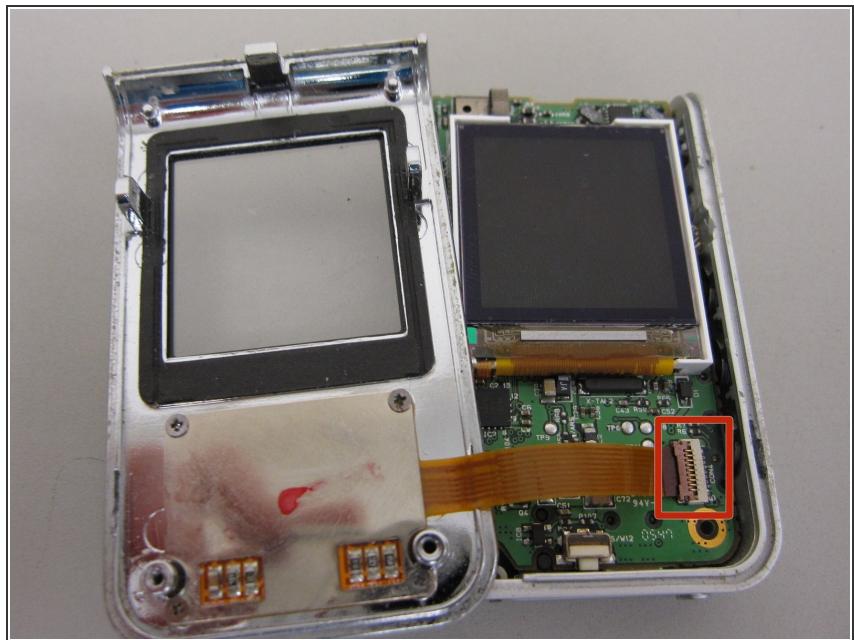

- After opening the front cover you will see an electric ribbon connecting the buttons to the mother board.



## Step 10

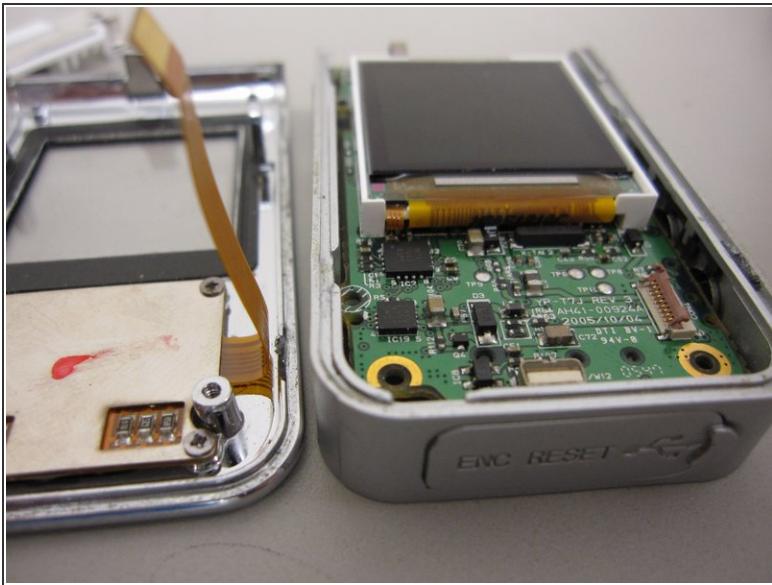

**⚠ CAUTION:** Do not rip the electric ribbon from the mother board.


- Carefully flip up the plastic lip that holds the electric ribbon to the board.

## Step 11 — Front Cover Button

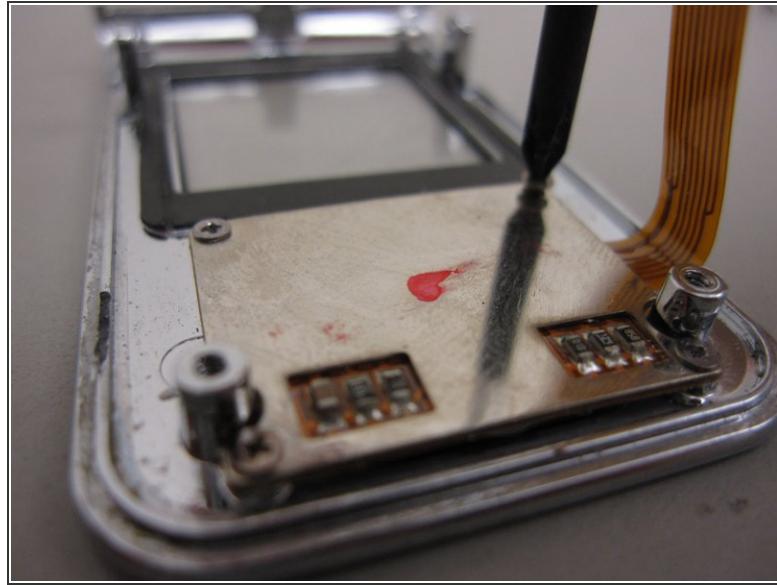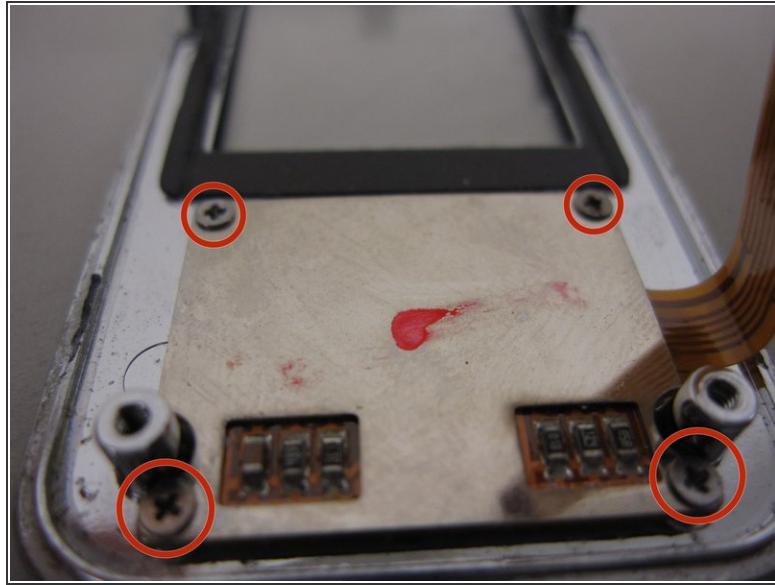

- Once the front cover is separated from the device, locate the four screws in the metal plate.
- Using the small phillips screw driver, remove the four screws.
- Remove the metal cover.

## Step 12

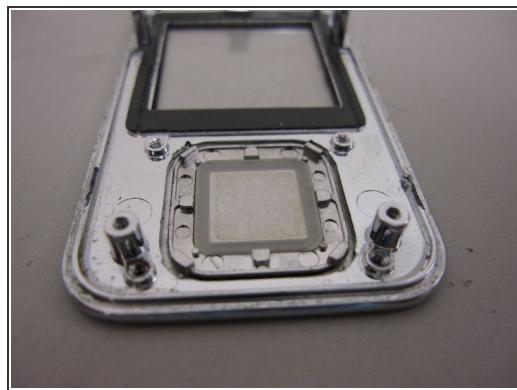

- Remove the rubber button pad.

To reassemble your device, follow these instructions in reverse order.