



# Samsung TL220 LCD Screen Replacement

This guide will give you clear instructions and pictures on how to replace the LCD screen in the Samsung TL220 camera.

Written By: Lesley



 **TOOLS:**


- [iFixit Opening Tools \(1\)](#)
- [Pro Tech Toolkit \(1\)](#)

## Step 1 — LCD Screen




- Begin with unscrewing the seven outer screws on the camera. There is one on each corner and then three at the bottom.

## Step 2

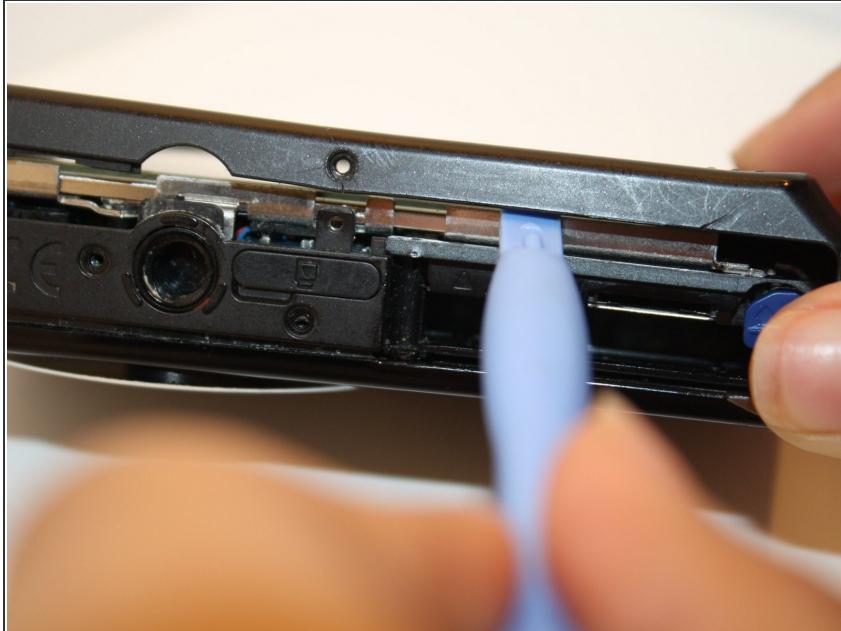


- Now carefully pry open the back casing with the iFixit plastic opening tool.

## Step 3

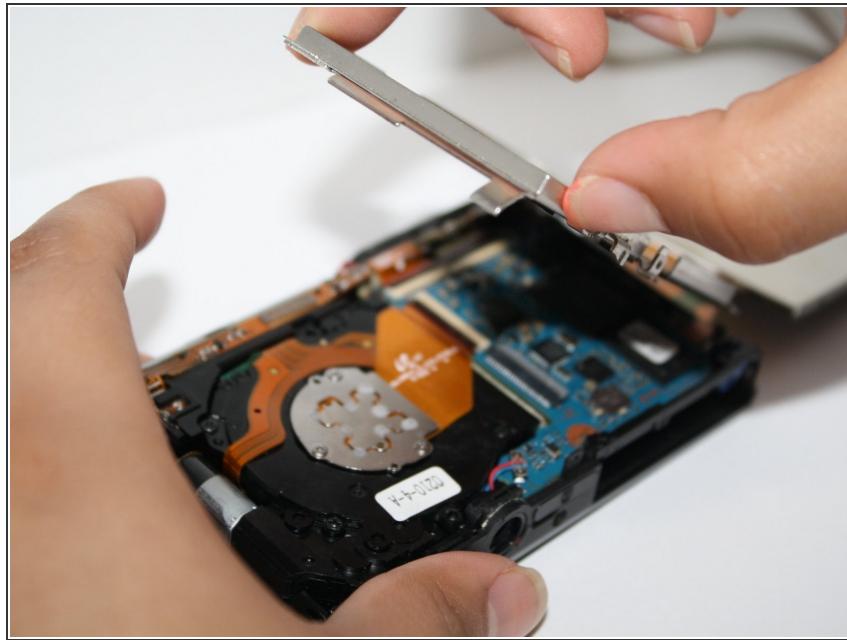


- When the back casing is off, gently move the LCD screen to the side.
- And then remove the three inner screws to remove the inside case.

## Step 4

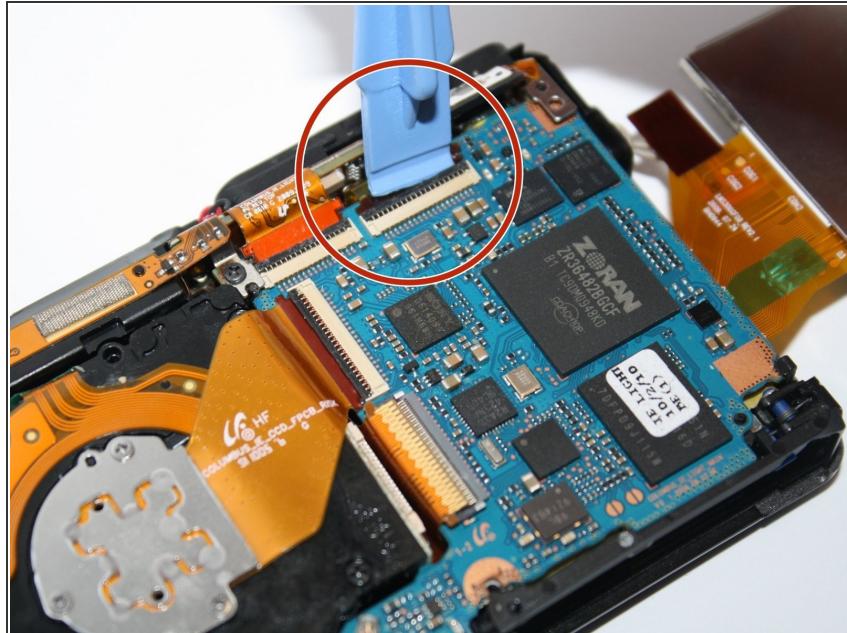


- Unclip the four connectors that hold down the orange copper film strips.
- Then carefully pull out the three film strips with the iFixit plastic opening tool.

## Step 5

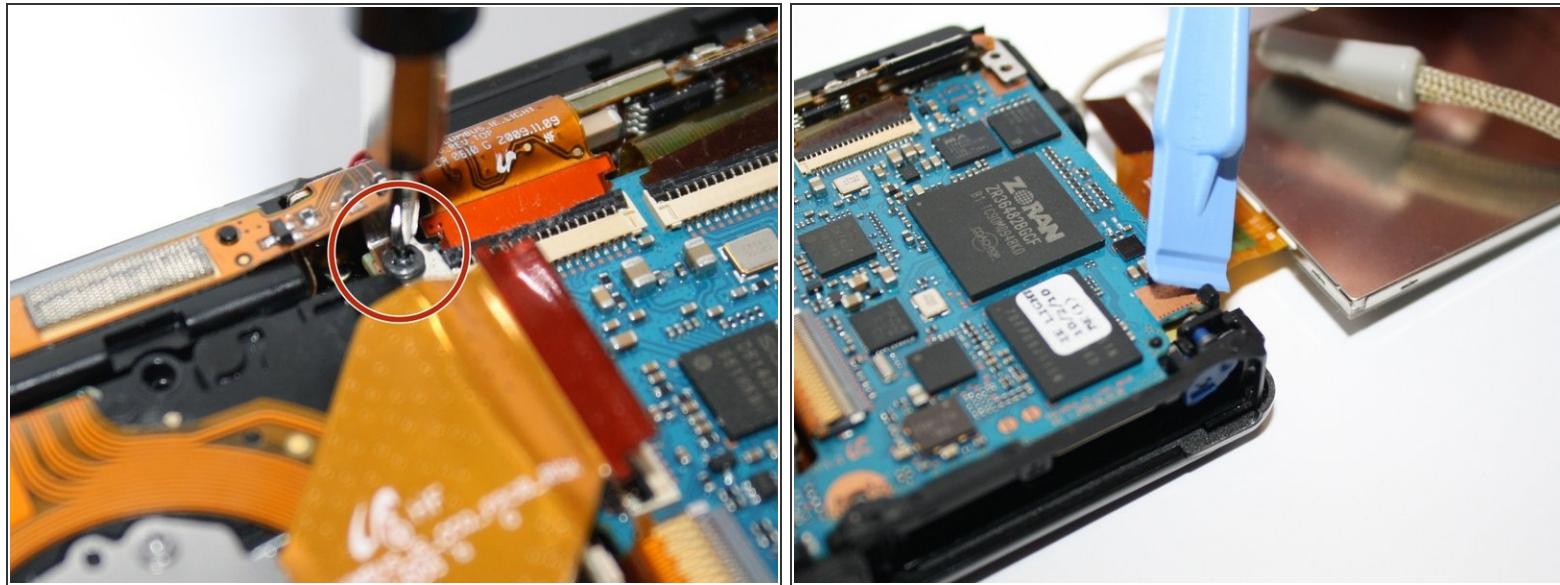


- Remove the screw located above the center film strip. This holds the top frame in place.

## Step 6

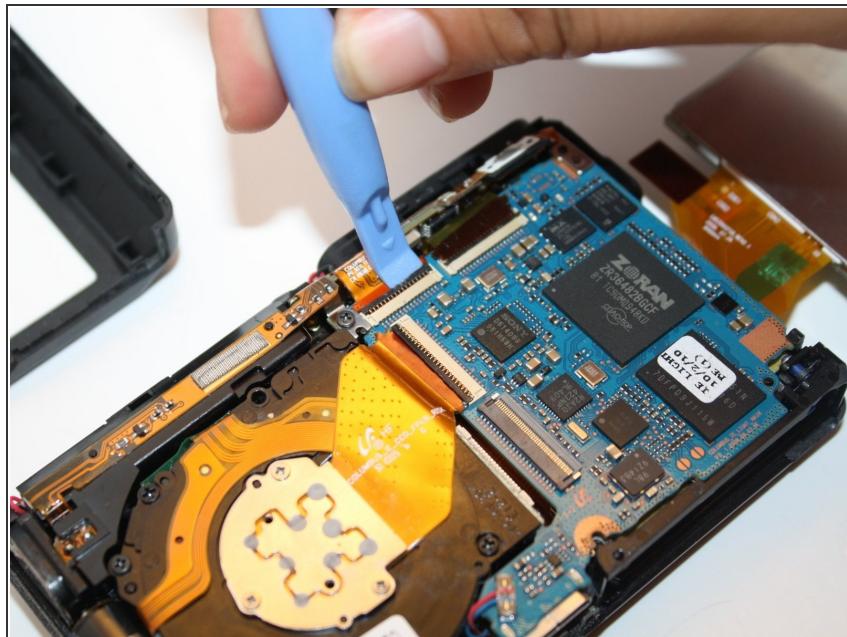

- Unclip the four connectors to release the film strips.

## Step 7

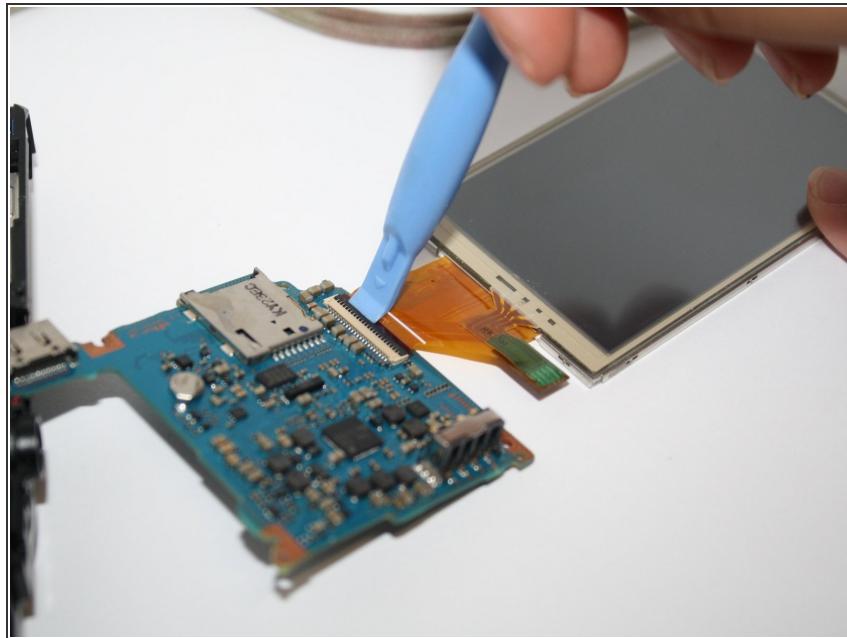

- Next unclamp the connector to release the film strip and then you can replace your LCD screen.

To reassemble your device, follow these instructions in reverse order.