


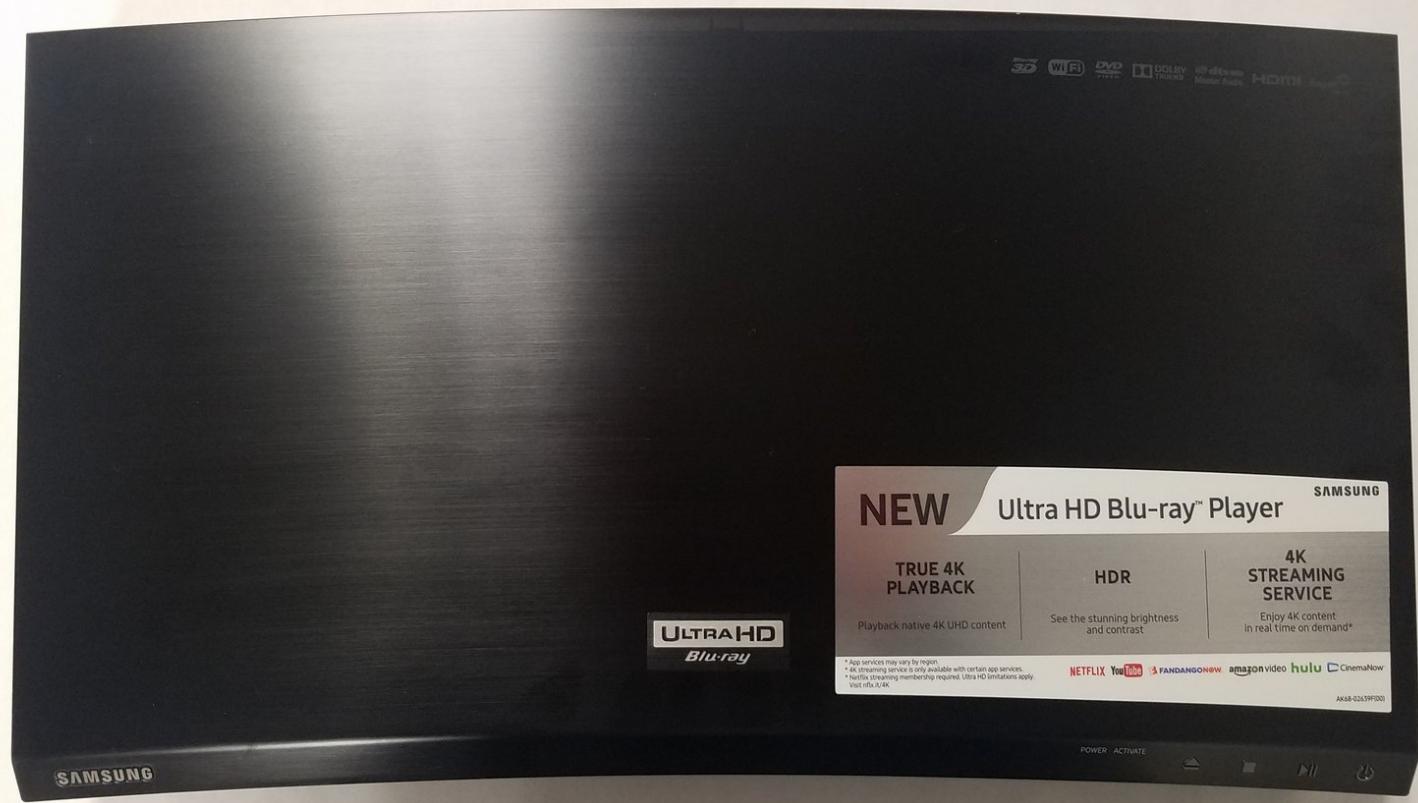

# Samsung UBD KM85C Outer Shell Replacement

This guide is for replacing a scratched, cracked, bent, or otherwise damaged outer casing of the Blu-Ray Player.

Written By: Breanna Ainsworth



This document was generated on 2019-10-24 05:36:40 AM (MST).

 **TOOLS:**


- Phillips #1 Screwdriver (1)

## Step 1 — Outer Shell



- On the back side of the unit, remove the three 8.1mm screws marked with a Phillips #1 screwdriver.

## Step 2

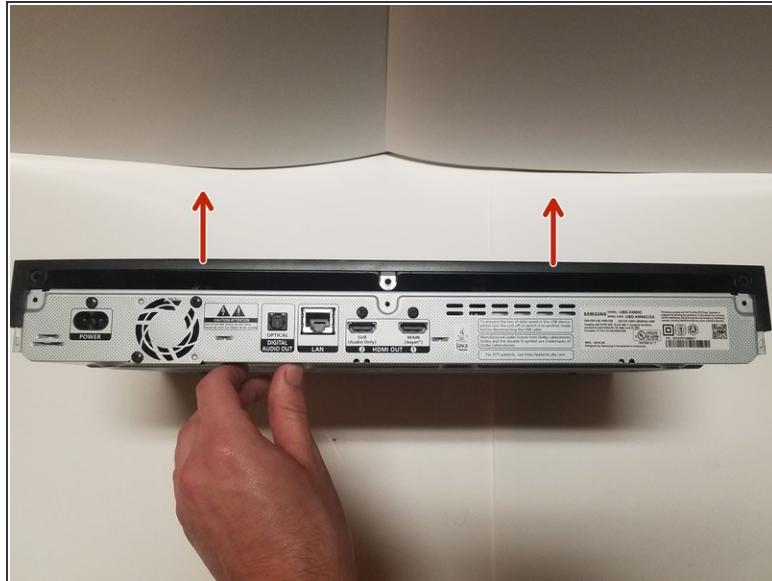

- From the back, lift the case upwards away from the unit then forwards, releasing the prongs on the front.

## Step 3



- There is one group of wires located towards the front of the case and attached directly to the motherboard and the case. Using two fingers in a pinching motion, release the wire from the clip and disconnect it.

## Step 4



- Remove the cover from the device.

To reassemble your device, follow these instructions in reverse order.