




# Samsung WB35F Menu/Control Buttons Replacement

This guide will help you to replace the Menu/Control Buttons of the Samsung WB35F.

Written By: Sarmad Khan

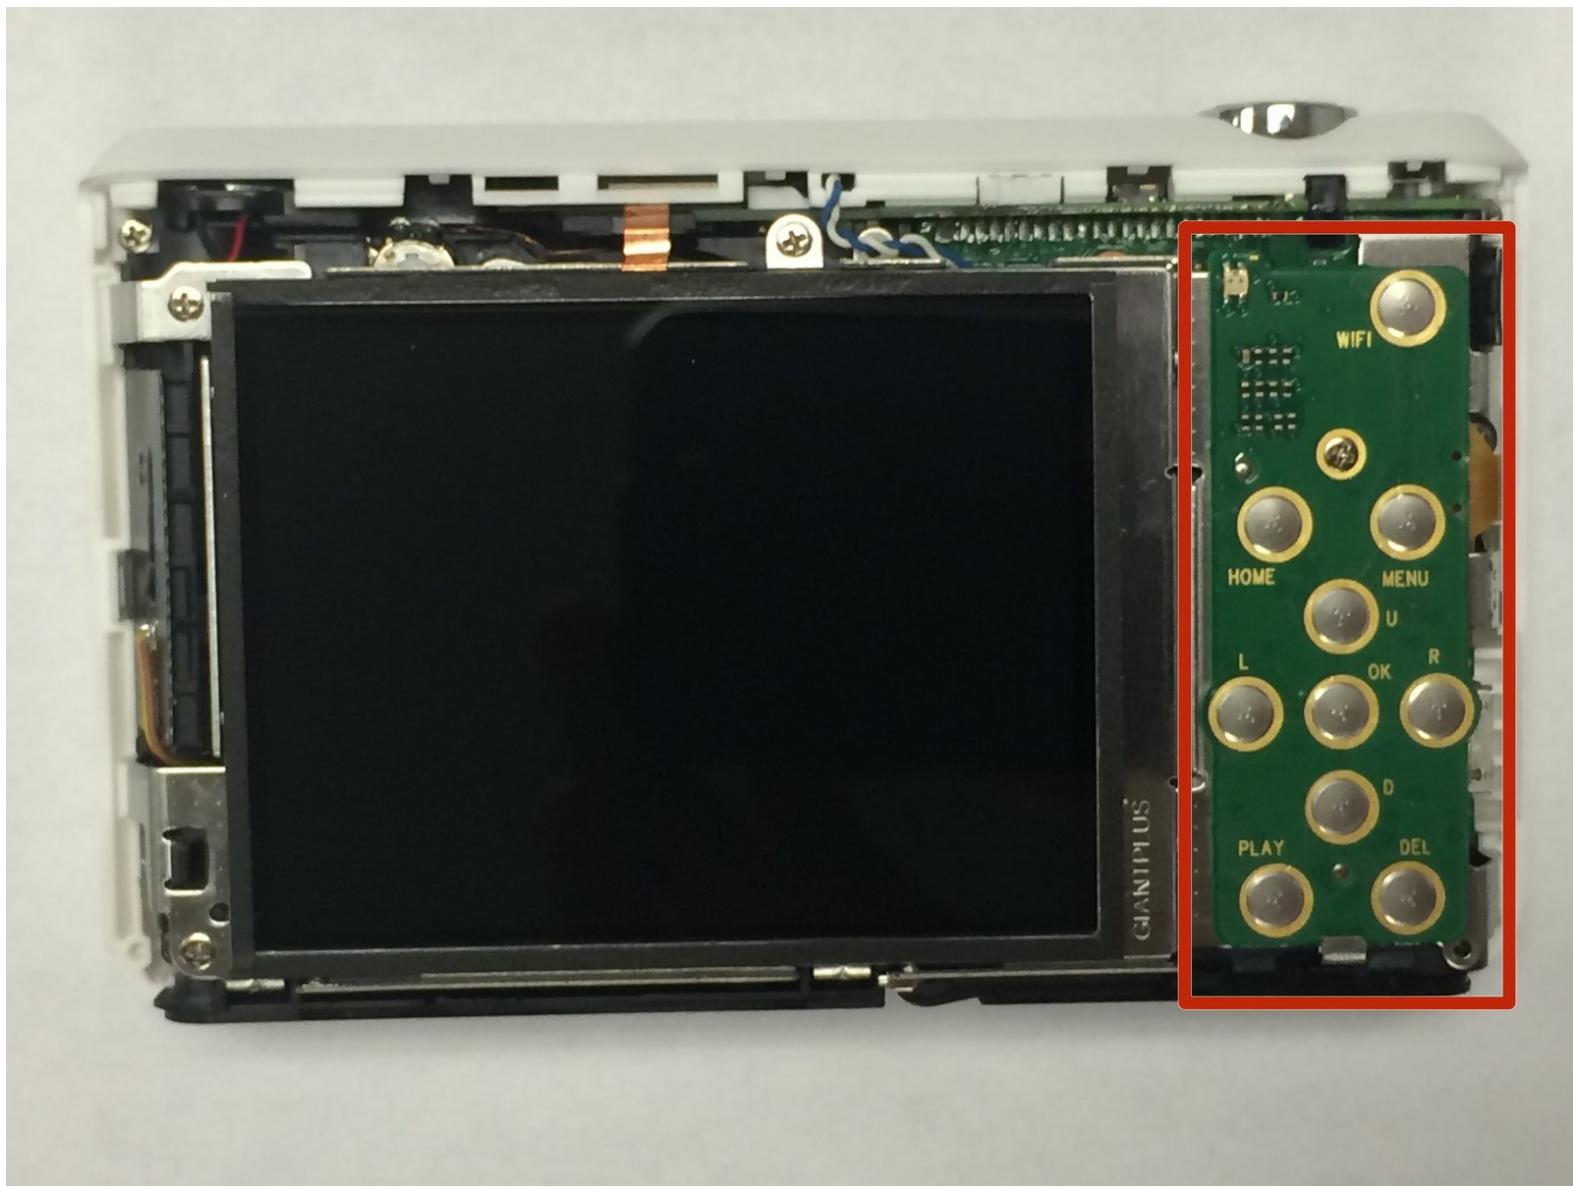

## INTRODUCTION

This guide will give the user step by step instructions on how to replace Menu/Control Buttons of the camera.

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

## Step 1 — Rear Case



- The first thing to do will be unscrew all the screws using Phillips #000 Screwdriver.
- ⚠ Keep all the screws in order. Black screws goes under the bottom of camera, and the silver screws goes on the sides and inside of the camera.

## Step 2

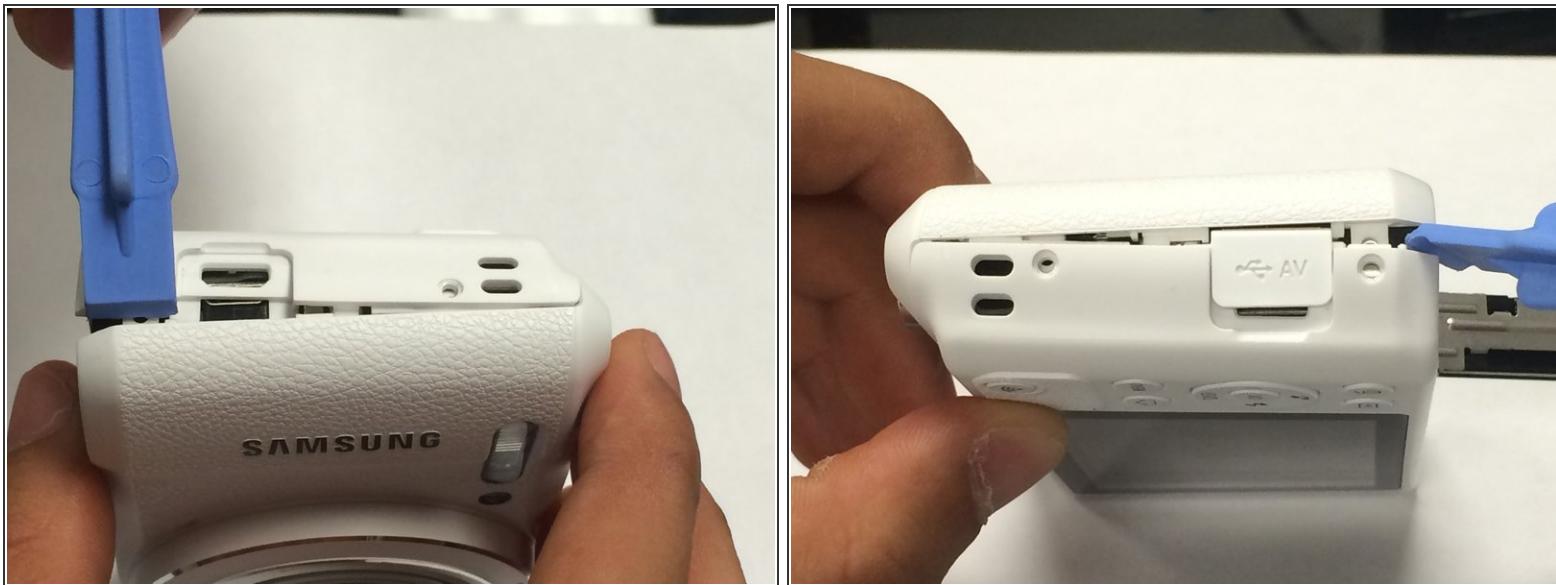


- Using the spudger, and plastic opening tool open the casing of camera.

## Step 3




- Once you open the camera case, you will be able to work on any part of the camera.

## Step 4 — Menu/Control Buttons

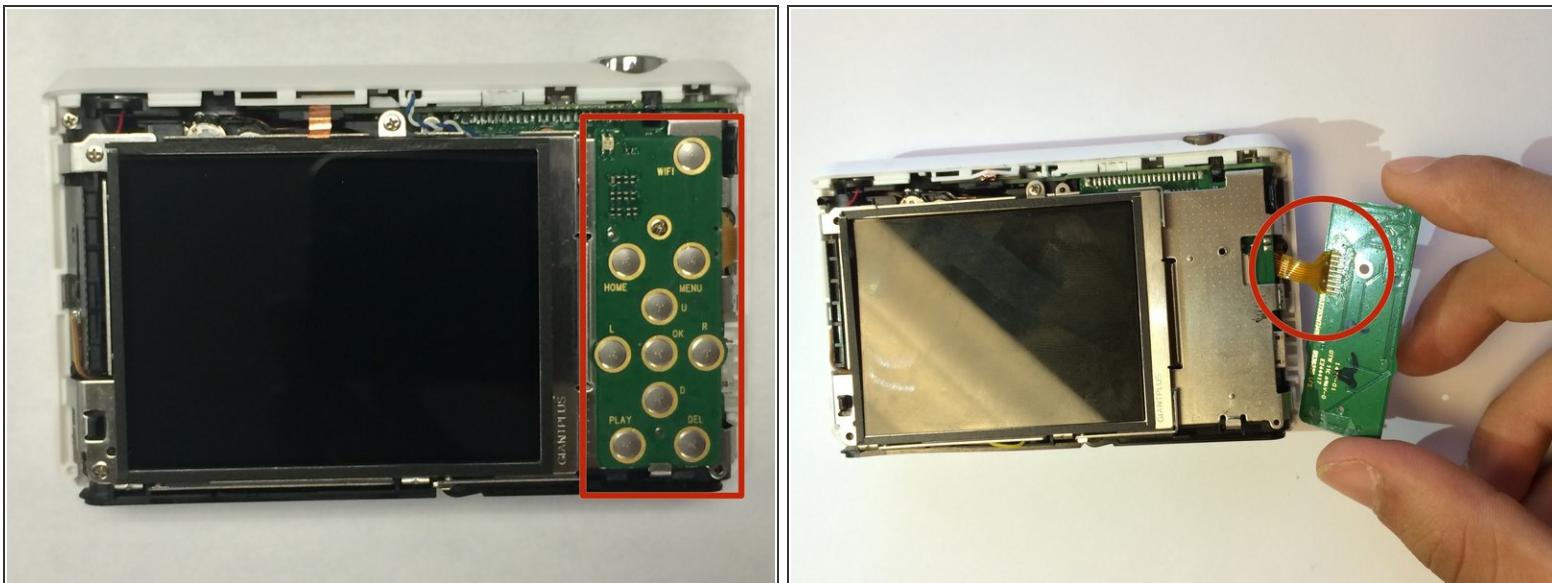

- Carefully unplug the ribbon from the Menu/Control board.

## Step 5

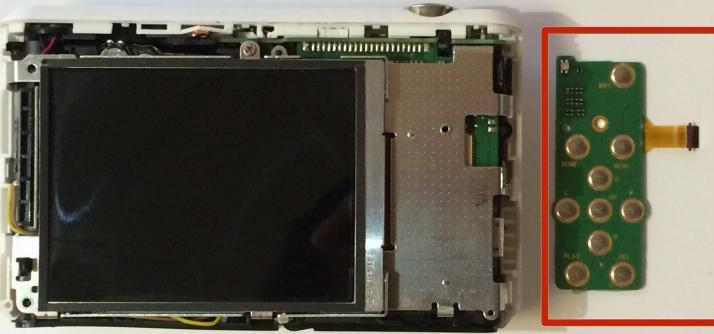

- Once you unplug the ribbon. Take out the old board and replace it with new menu/control board.

To reassemble your device, follow these instructions in reverse order.