



# SanDisk Sansa C250 Battery Cover Replacement

Remove the back cover to access other components of the device.

Written By: Nicolas Coffey



## Step 1 — Battery Cover



- Slide the back cover forward toward the top of the device with your thumb.

## Step 2



- The back cover is now separated from the device.

To reassemble your device, follow these instructions in reverse order.