




SanDisk Sansa C250 Battery Replacement

Remove the battery to replace it or access other components of the device.

Written By: Nicolas Coffey

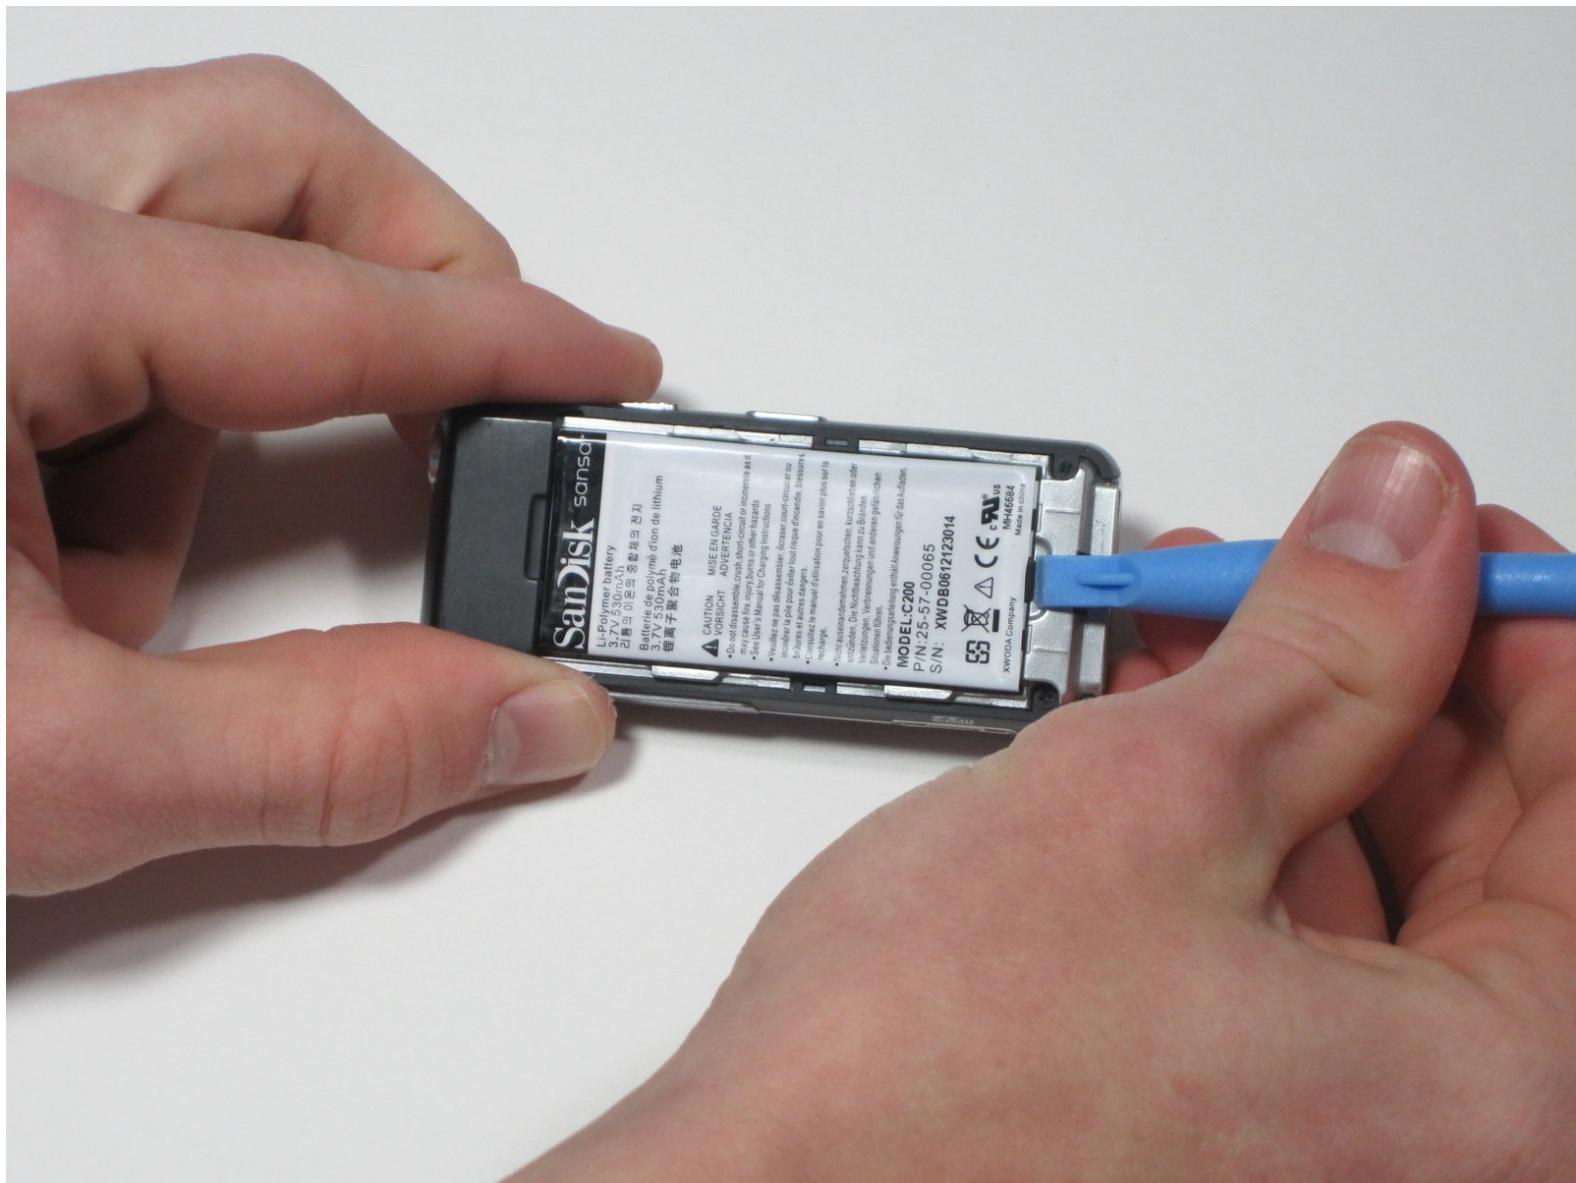

 **TOOLS:**

- [Spudger \(1\)](#)

Step 1 — Battery Cover




- Slide the back cover forward toward the top of the device with your thumb.

Step 2




- The back cover is now separated from the device.

Step 3 — Battery

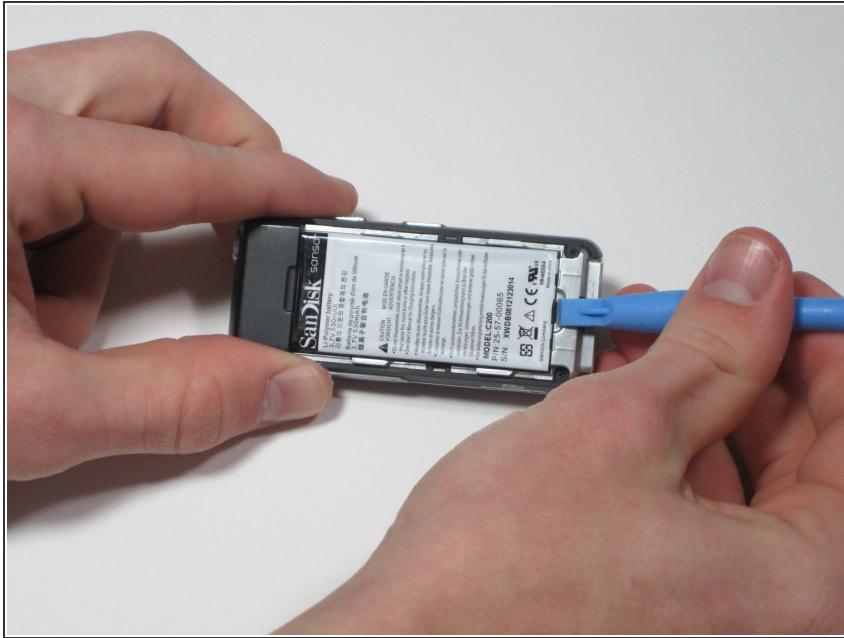

- Apply a fingernail or a plastic opening tool to the base of the battery.

Step 4

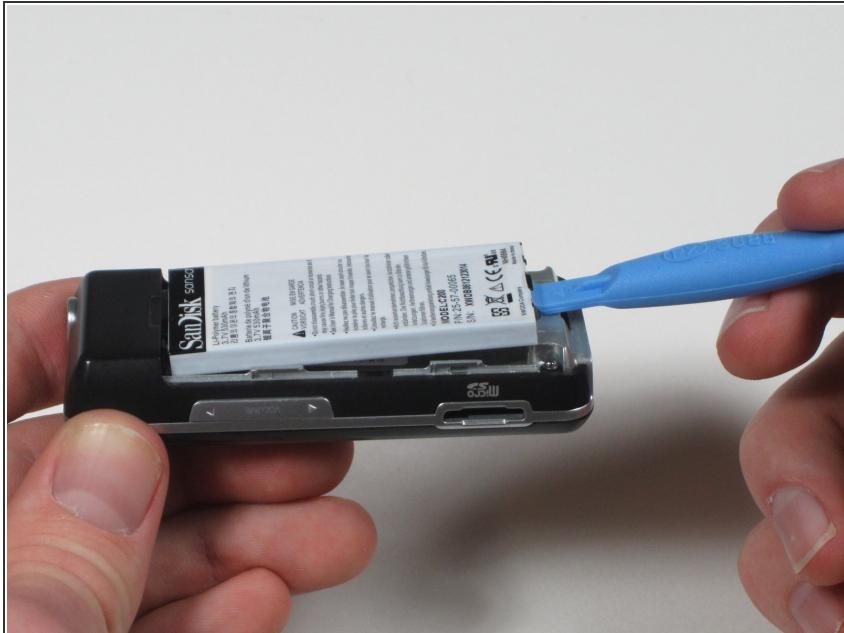

- Lift up gently. The battery should come up and out.

Step 5



- The battery is now removed from the device.

To reassemble your device, follow these instructions in reverse order.