




# SanDisk Sansa C250 Rear Case Cover Replacement

Remove the rear case cover from the device.

Written By: Nicolas Coffey

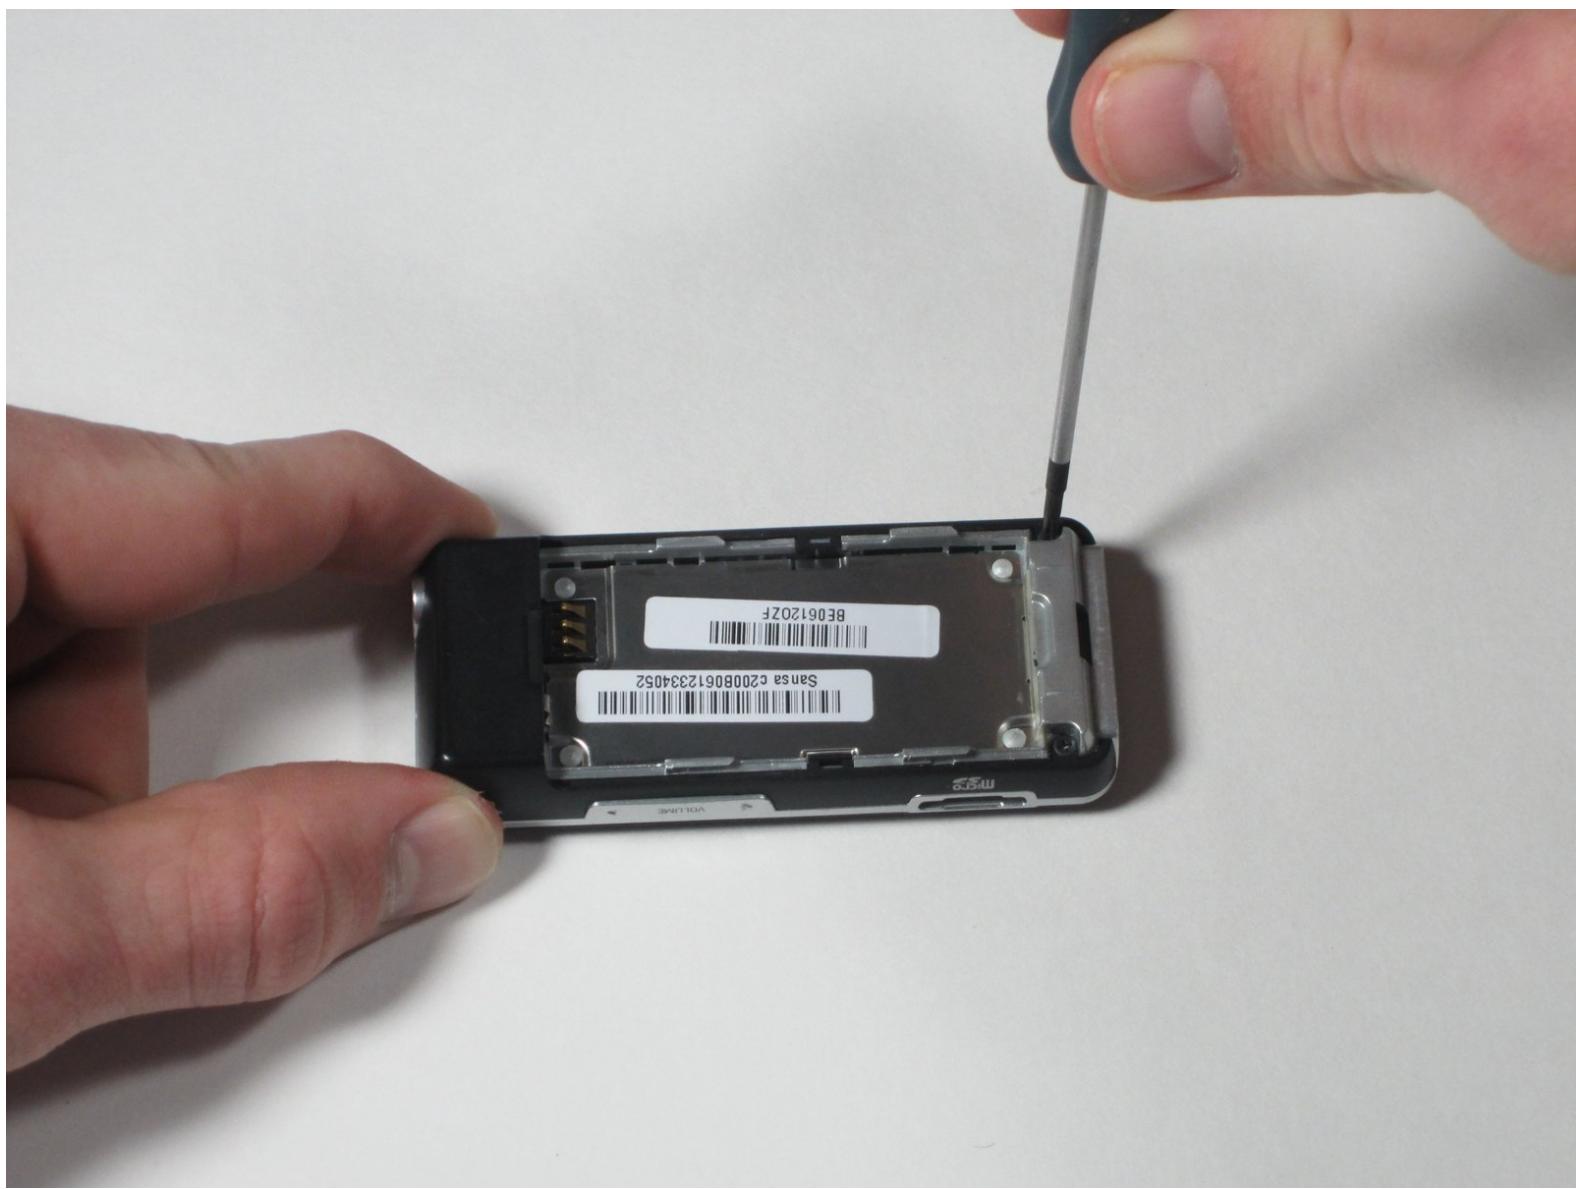

 **TOOLS:**

- [Spudger \(1\)](#)

## Step 1 — Battery Cover



- Slide the back cover forward toward the top of the device with your thumb.

## Step 2




- The back cover is now separated from the device.

## Step 3 — Battery



- Apply a fingernail or a plastic opening tool to the base of the battery.

## Step 4

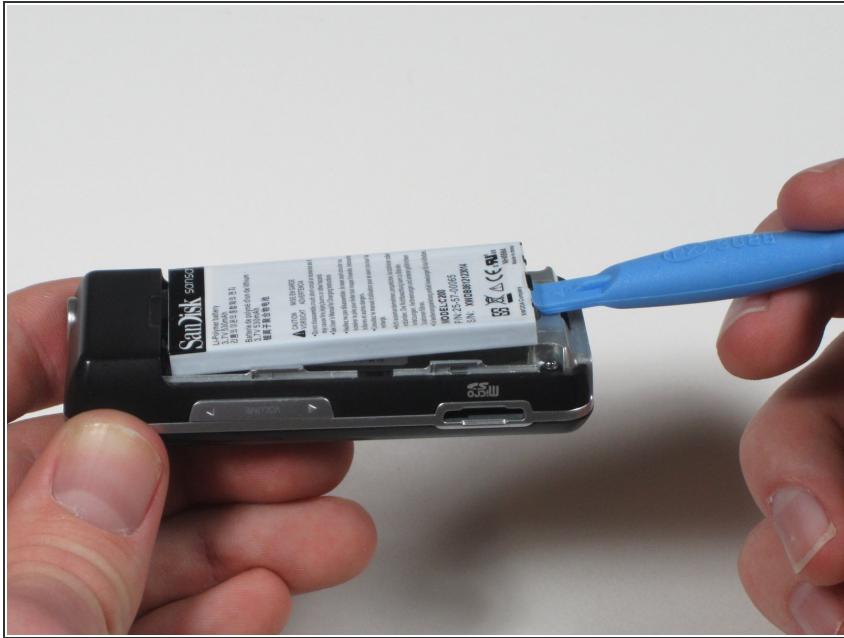


- Lift up gently. The battery should come up and out.

## Step 5




- The battery is now removed from the device.

## Step 6 — Rear Case Cover

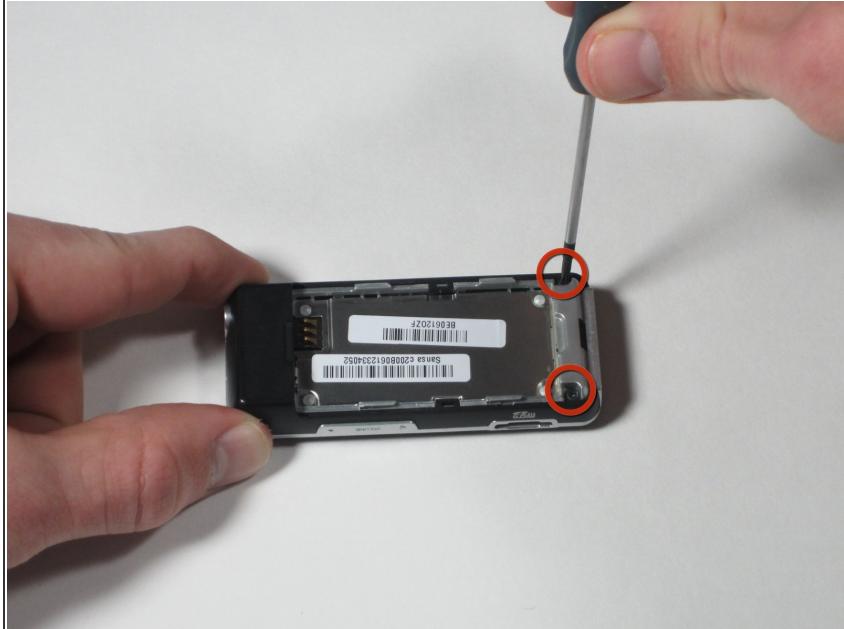


- Remove the two black .265" screws at the base of the device.

## Step 7

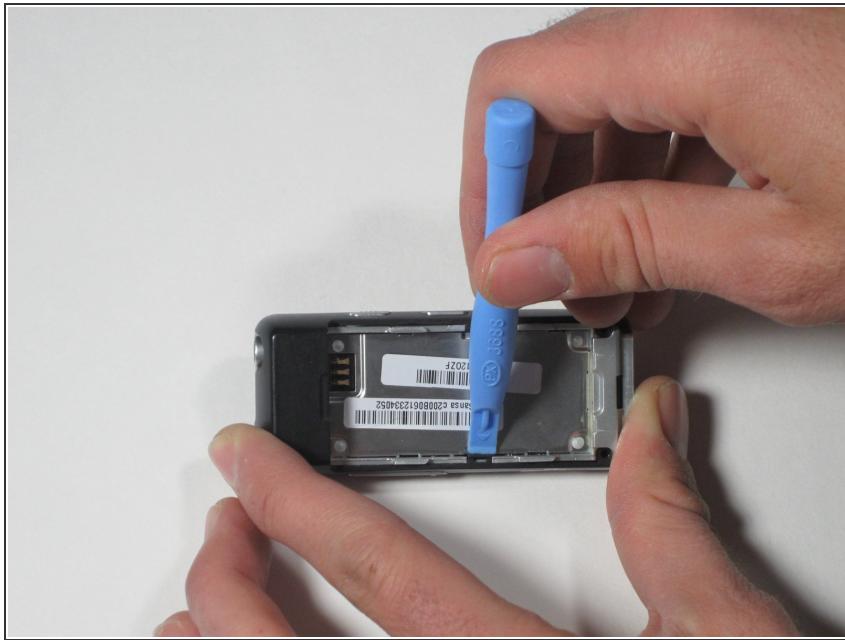

- Using a plastic opening tool, pry up the two arms of the case cover near the middle of the device to free them from the sides.

## Step 8

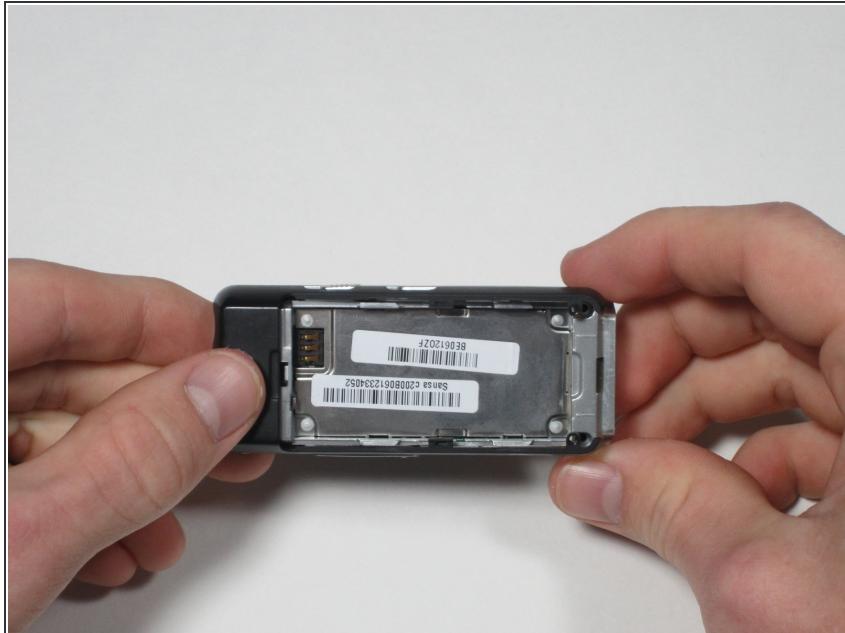

- Slide the rear case cover toward the top of the device with your thumb to release it.

## Step 9



- The rear case cover can now be separated from the device.

To reassemble your device, follow these instructions in reverse order.